



SuperServer®

SYS-222BT-HNR
SYS-222BT-HNC8R
SYS-222BT-HNC9R

USER'S MANUAL

Revision 1.0 (MNL-2716)

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at <https://www.supermicro.com>.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See <https://www.dtsc.ca.gov/hazardouswaste/perchlorate>".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to <https://www.P65Warnings.ca.gov>.



AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter <https://www.P65Warnings.ca.gov>.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0

Release Date: June 06, 2025

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2025 by Super Micro Computer, Inc.
All rights reserved.

Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SYS-222BT-H Series system. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <https://www.supermicro.com/support/manuals>
- Product drivers and utilities: <https://www.supermicro.com/wdl>
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website:
https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: <https://www.supermicro.com/FAQ/index.php>
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "[Contacting Supermicro](#)" on page 11
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered while performing a procedure.

Important: Important information given to ensure proper system installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper system setup.

Contents

Contacting Supermicro	11
Chapter 1: Introduction	12
1.1 Overview	13
1.2 System Features	15
Front View	15
Drive LED Indicators	16
Control Panel	16
Rear View	18
Power Supply Indicator	18
1.3 System Architecture	20
Main Components	20
System Block Diagrams	21
1.4 Motherboard Quick Reference	25
Motherboard Layout	25
Memory Slots	27
Quick Reference	28
Quick Reference Table	28
Chapter 2: Server Installation	30
2.1 Unpacking the System	31
2.2 Preparing for Setup	32
Choosing a Setup Location	32
Rack Precautions	32
System Precautions	32
Rack Mounting Considerations	33
Ambient Operating Temperature	34
Airflow	34
Mechanical Loading	34
Circuit Overloading	34
Reliable Ground	34
2.3 Installing the Rails	35
Identifying the Rails	35

Installing the Rails onto the Rack	36
2.4 Inserting Chassis	37
Chapter 3: Maintenance and Component Installation	38
3.1 Removing Power	40
Removing Power from a Node	40
Removing Power from the System	40
3.2 Accessing the System	41
Removing a Computing Node Drawer	41
Removing the Chassis Cover	41
3.3 Static-Sensitive Devices	43
Precautions	43
3.4 Processor and Heatsink Installation	44
LGA 4710 Socket E2 Processors	44
Processor Top View	44
Overview of the Processor Socket	45
Overview of the Processor Heatsink Module	45
Assembling the Processor Heatsink Module	46
Preparing the Processor Socket for Installation	48
Preparing to Install the PHM into the Processor Socket	49
Installing the Processor Heatsink Module	50
Removing the Processor Heatsink Module	52
3.5 Memory Support and Installation	55
Memory Support for X14DBT-B	55
Memory Population Table (with 16 DIMM slots)	56
DIMM Installation	58
DIMM Removal	60
3.6 Motherboard Battery Removal and Installation	61
Battery Removal	61
Proper Battery Disposal	61
Battery Installation	61
3.7 Storage Drives	62
Drive Carrier Indicators	62
Drive Configuration	64
Removing a Drive from the Chassis	65

Installing a 2.5" Drive into a Drive Carrier	65
Hot-Swap for NVMe Drives	66
Ejecting a Drive	67
Replacing the Drive	67
Checking the Temperature of an NVMe Drive	68
Hot-Swap for NVMe Drives	68
Ejecting a Drive	68
Replacing a Drive	69
3.8 System Cooling	70
Fans	70
Changing a System Fan	71
Air Shrouds	71
Installing the Air Shroud	72
3.9 PCIe Expansion Cards	73
Populating Expansion Slots	73
3.10 AIOM Cards	75
Removing AIOM Cards	75
Installing AIOM Cards	76
3.11 Backplane	77
3.12 Storage Adapters	78
3.13 Cable Routing Diagrams	79
SYS-222BT-HNR Cable Routing Diagram	80
SYS-222BT- HNC8R Cable Routing Diagram	81
SYS-222BT-HNC9R Cable Routing Diagram	82
3.14 Power Supply	83
Replacing the Power Supply	83
Chapter 4: Motherboard Connections, Jumpers, and LEDs	85
4.1 Power Connections	87
4.2 Headers and Connections	88
Fan Header	88
TPM/Port 80 Header	88
NC-SI Connection	88
VROC RAID Key Header	89
Liquid Cooling Leakage Sensor Headers	89

4.3 Control Panel	91
Fail LED (Information LED for OH/FF/PF)	91
FP USB Power	91
HDD LED	92
LAN1/LAN2 (NIC1/NIC2) LED	92
NIC1/NIC2 (LAN1/LAN2)	93
NMI Button	93
Overheat/Fan Fail and UID LED	93
Power Button	94
Power Fail LED	94
Power Fail LED Indicators	95
Power LED	95
Power On and BMC/BIOS Status LED Button	95
Reset Button	96
Root of Trust (RoT) Power LED	96
Standby Power	96
Standby Power LED	97
UID LED	97
4.4 Jumper Settings	98
BMC Dedicated LAN	98
VGA Port	98
Unit Identifier Button	99
COM Port	99
Universal Serial Bus (USB) 3.2 Ports	100
4.5 Jumper Settings	101
CMOS Clear	101
Cooling Fan Select Jumper	102
4.6 LED Indicators	103
BMC LAN LEDs	103
BMC Heartbeat LED	103
Unit ID (UID) LED	103
Chapter 5: Software	105
5.1 Microsoft Windows OS Installation	106
Installing the OS	106

5.2 Driver Installation	108
5.3 BMC	109
BMC ADMIN User Password	109
Chapter 6: Optional Components	110
6.1 TPM Security Module	111
6.2 Cable Management Arm	112
Installing the Cable Management Arm	112
Removing the Cable Management Arm	113
6.3 Intel Virtual RAID on CPU (VROC)	114
Requirements and Restrictions	114
Additional Information	114
Hardware Key	115
Configuring Intel VMD	115
Configuring VMD Manually	116
Creating NVMe RAID Configurations	119
Status Indications	121
Hot-Swap Drives	121
Hot-Unplug	121
Hot-Plug	122
Related Information Links	122
Chapter 7: Troubleshooting and Support	123
7.1 Online Resources	124
Direct Links for the SYS-222BT-H Series System	124
Direct Links for General Support and Information	124
7.2 Baseboard Management Controller (BMC)	125
7.3 Troubleshooting Procedures	126
Before Power On	126
No Power	126
No Video	126
System Boot Failure	126
Memory Errors	127
Losing the System's Setup Configuration	127
If the System Becomes Unstable	127
7.4 CMOS Clear	129

7.5 Motherboard Battery	130
7.6 Where to Get Replacement Components	131
7.7 Technical Support Procedures	132
Returning Merchandise for Service	132
7.8 Feedback	134
Chapter 8: UEFI BIOS	135
8.1 Introduction	136
Updating BIOS	136
Starting the Setup Utility	136
8.2 Main Setup	138
8.3 BMC	140
8.4 Security	141
8.5 Boot	143
8.6 Save & Exit	145
Appendix A: BIOS Codes	147
BIOS Error POST (Beep) Codes	147
Additional BIOS POST Codes	147
Appendix B: Standardized Warning Statements for AC Systems	148
Warning Definition	148
Installation Instructions	150
Circuit Breaker	151
Power Disconnection Warning	153
Equipment Installation	154
Restricted Area	156
Battery Handling	157
Redundant Power Supplies	159
Backplane Voltage	160
Comply with Local and National Electrical Codes	162
Product Disposal	163
Fan Warning	164
Power Cable and AC Adapter	166
Appendix C: System Specifications	170

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: Marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
[Government Sales-USA@supermicro.com](mailto:Government_Sales-USA@supermicro.com) (Gov. Sales Inquiries)
Support@supermicro.com (Technical Support)
RMA@Supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: <https://www.supermicro.com>

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)

Website: <https://www.supermicro.nl>

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)

Tel: +886 (2) 8226-3990

Fax: +886 (2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: <https://www.supermicro.com.tw>

Chapter 1:

Introduction

This chapter provides a brief outline of the functions and features of the SYS-222BT-H Series system. It is based on the X14DBT-B motherboard and the CSE-217BQ2-R3K60P chassis.

1.1 Overview	13
1.2 System Features	15
Front View	15
Rear View	18
1.3 System Architecture	20
Main Components	20
System Block Diagrams	21
1.4 Motherboard Quick Reference	25
Motherboard Layout	25
Quick Reference	28

1.1 Overview

This chapter provides a brief outline of the functions and features of the SuperServer SYS-222BT-H Series. It is based on the X14DBT-B motherboard and the CSE-217BQ2-R3K60P chassis.

The following provides an overview of the specifications and capabilities.

System Overview	
Motherboard	X14DBT-B
Chassis	CSE-217BQ2-R3K60P
Processor Support	Supports dual Intel® Xeon® 6700/6500-series processors with P-cores or 6700-series processors with E-cores
Chipset	System on Chip (SoC)
Memory	Sixteen DIMM slots DDR5 6400 MHz ECC RDIMM/RDIMM 3DS, DDR5-8000 MCR DIMM (1DPC)
Drive Support	<p>Front hot-swappable drives include:</p> <p>24 NVMe drives for SYS-222BT-HNR (all drives are PCIe 5.0)</p> <p>24 NVMe/SAS drives for SYS-222BT-HNC8R (the first two drives are PCIe 5.0 in each node)</p> <p>24 NVMe/SAS drives for SYS-222BT-HNC9R (the first two drives are PCIe 5.0 in each node)</p> <p>Internal M.2 drives per node includes one of the following:</p> <p>Carrier with two M.2 NVMe Gen 5 SSDs in the 22110 form factor</p> <p>Carrier with two M.2 NVMe Gen 5 SSDs and two M.2 NVMe Gen 3 SSDs with HW RAID support in the 22110 form factor</p> <p>Carrier with two M.2 NVMe Gen 3 SSDs with HW RAID support in the 22110 form factor</p> <p>Internal Connector:</p> <p>VROC key header</p>
Expansion Slots	Two PCIe 5.0 x16 slots for each node
Networking and I/O	<p>One AIOM or any OCP 3.0 SFF Network Interface Card per node</p> <p>One Dedicated LAN Port for BMC per node</p> <p>Two USB 3.0 Gen 2 Type-A Ports per node</p> <p>One VGA Port</p> <p>One Internal COM Port</p>

System Overview	
System Cooling	Four 8-cm counter-rotating mid-chassis fans
Power	Redundant 3600 W, 80Plus Titanium Power Supplies Power supply redundancy is supported only with 240 VAC or 240 VDC input.
Form Factor	2U Rackmount (WxDxH) 17.6" x 3.6" x 28.8" (447 x 88 x 730 mm)

1.2 System Features

The following views of the system display the main features. Refer to the System Specifications appendix of this manual for additional specifications.

Front View

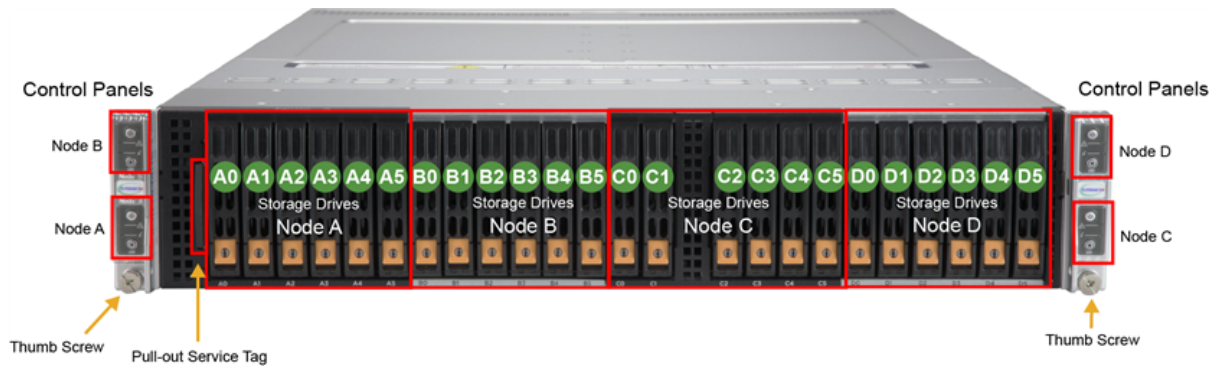


Figure 1-1. Front View

System Features: Front	
Feature	Description
Control Panels	Four control panels with labels for each node. The four control panels are located as follows: node A bottom left, node B top left, node C bottom right, and node D top right.
Service Tag	Pull-out service tag with BMC password label
Storage Drive Bays	24 2.5" hot-swappable drive bays
Thumb Screws	Two thumbscrews to secure the server onto the rack

Drive LED Indicators

Each NVMe SSD module has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive LEDs			
LED	Color	Pattern	Device Behavior
Activity LED	Blue	Solid	Idle SAS/NVMe storage module installed
	Blue	Blinking	I/O activity
	Off	N/A	Idle SATA drive installed
Status LED	Red	Solid	Failure of drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for drive with RSTe support
	Red	On for five seconds, then off	Power on for drive with RSTe support
	Red	Blinking at 4 Hz	Identify drive with RSTe support
	Green	Solid	Safe to remove NVMe storage module
	Amber	Blinking at 1 Hz	Do not remove NVMe storage module

Control Panel

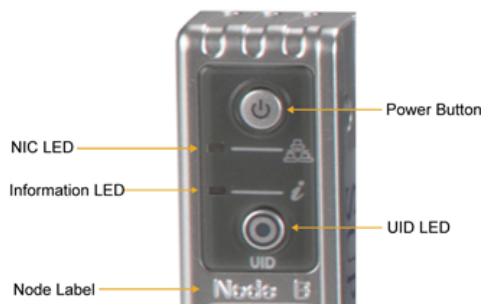


Figure 1-2. Control Panel

Control Panel Features (One Per Node)	
Feature	Description
Power Button	The main power switch applies or removes primary power from the power supply to the server but maintains standby power.
NIC LED	Indicates network activity on the LAN when flashing.
Information LED	Universal information LED.
UID LED	The unit identification (UID) button turns on or off the blue light function of the information LED and a blue LED on the rear of the chassis. These are used to locate the server in large racks and server banks.
Node Label	Label with the name of the node that is connected to the control panel. Labels for nodes A and C are above their control panel. Labels for nodes B and D are below their control panels.

Information LED	
Color, Status	Description
Red, solid	An overheat condition has occurred.
Red, blinking at 1 Hz	Fan failure; check for an inoperative fan.
Red, blinking at 0.25 Hz	Power failure; check for an inoperative power supply.
Red, solid with Power LED blinking green	Fault detected.
Blue and red, blinking at 10 Hz	Recovery mode.
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1 Hz	UID has been activated via BMC to locate the server in a rack environment.
Blue, blinking at 2 Hz	BMC is resetting.
Blue, blinking at 4 Hz	BMC is setting factory defaults.
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware is updating.

Rear View

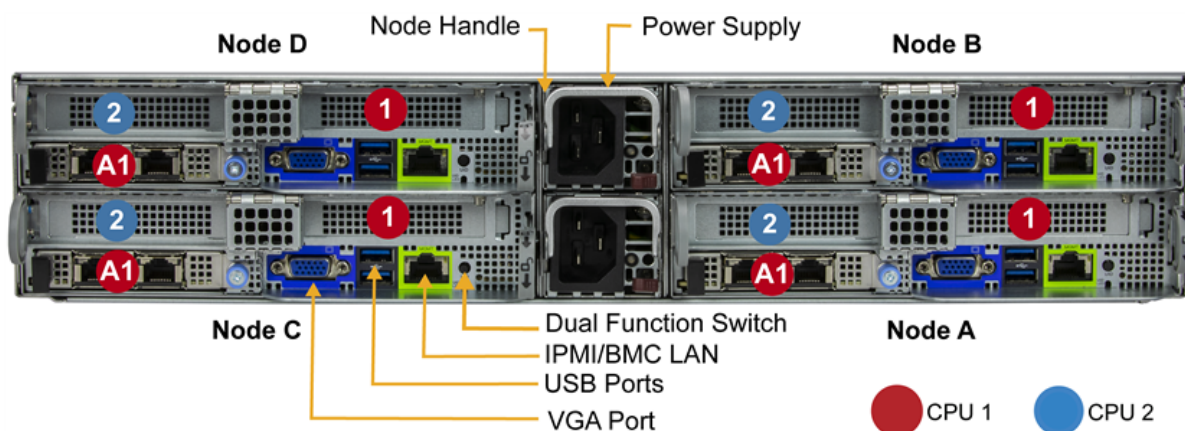


Figure 1-3. Rear View

System Features: Rear	
Feature	Description
Nodes A, B, C, D	Independent computing nodes
Power Supplies	Two 3600 W redundant power supplies
VGA Port	Legacy VGA video port
USB Ports	Two USB 3.0 Gen 2 ports
LAN Port	Dedicated BMC LAN port
Dual-function Switch	A switch that can function as either a UID LED switch or a BMC reset switch. See Chapter 4 for a description of the dual function switch.
A1	x16 AIOM slot (CPU1) in each node
1	x16 low profile slot (CPU1) in each node
2	x16 low profile slot (CPU2) in each node

Power Supply Indicator

There are two power supply indicators on the rear of each power supply module. An amber light on the power supply is illuminated when the power is switched off. A green light indicates that the power supply is operating normally. These indicators also emit different behaviors to alert of the status of the power supply:

Power Supply Indicators		
Power Supply Condition	Green LED	Amber LED
No AC Power to Power Supply	OFF	OFF
Power Supply critical events causing a shutdown/failure/OCP/OVP/Fan Fail/OTP/UVP	OFF	Amber LED
Power Supply Warning Events Where the power supply continues to operate; High temperature; Over voltage; under voltage, etc.	OFF	1 Hz Blink Amber
AC present only 12 VSB ON (PS OFF)	1 Hz Blink Green	OFF
Output ON and OK	Green	OFF
AC cord unplugged and in redundant mode	OFF	Amber

1.3 System Architecture

This section covers the locations of the system's main components and provides a system block diagram.

Main Components

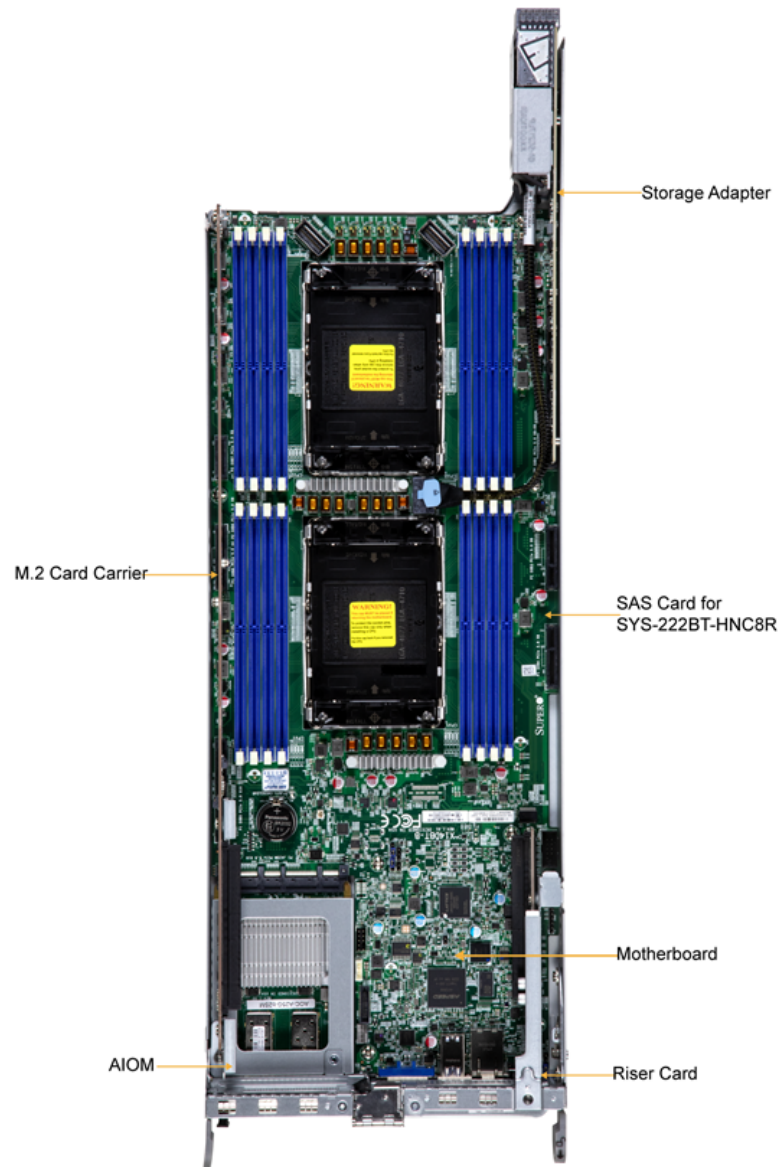


Figure 1-4. Main Components Location

SYS-222BT-HNC8R Block Diagram

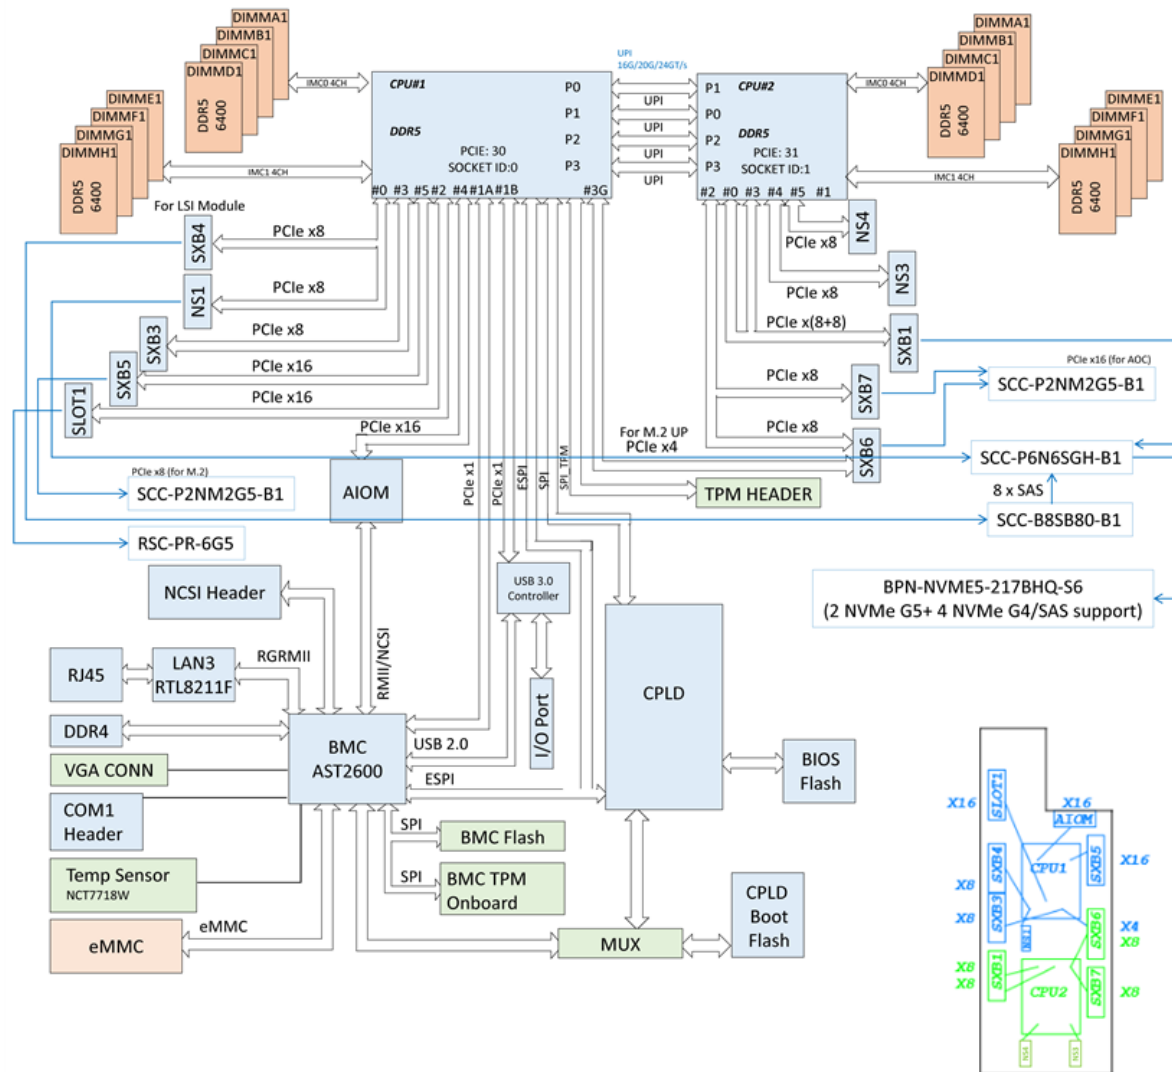


Figure 1-6. SYS-222BT-HNC8R System Block Diagram

SYS-222BT-HNC9R Block Diagram

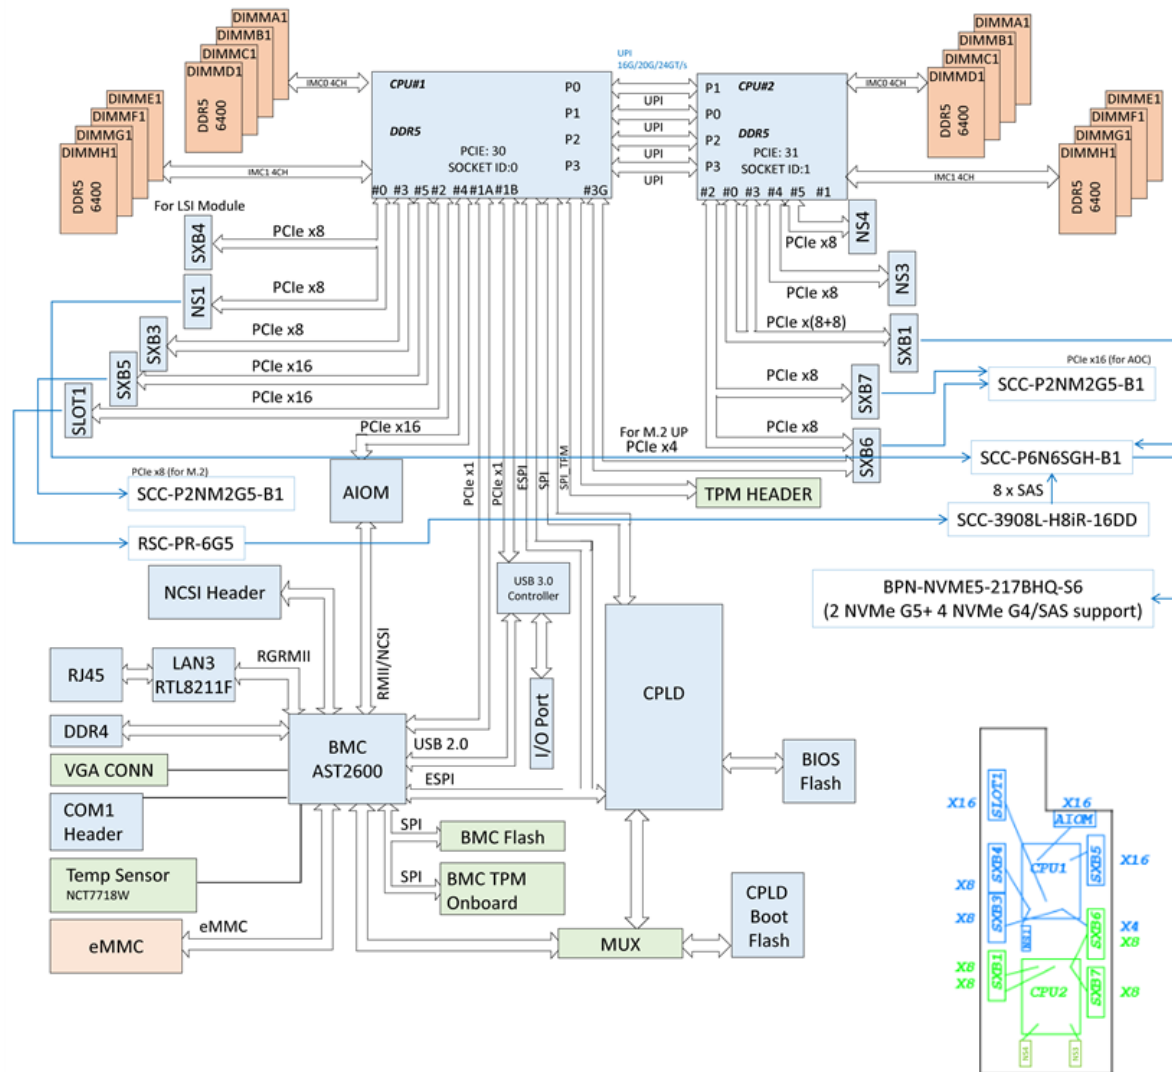


Figure 1-7. SYS-222BT-HNC9R System Block Diagram

Note: This is a general block diagram and may not exactly represent the features on your motherboard. For the actual specifications of your motherboard, see ["Motherboard Quick Reference" on the next page](#).

1.4 Motherboard Quick Reference

For details on the X14DBT-B motherboard layout and other quick reference information, refer to the content below.

Motherboard Layout

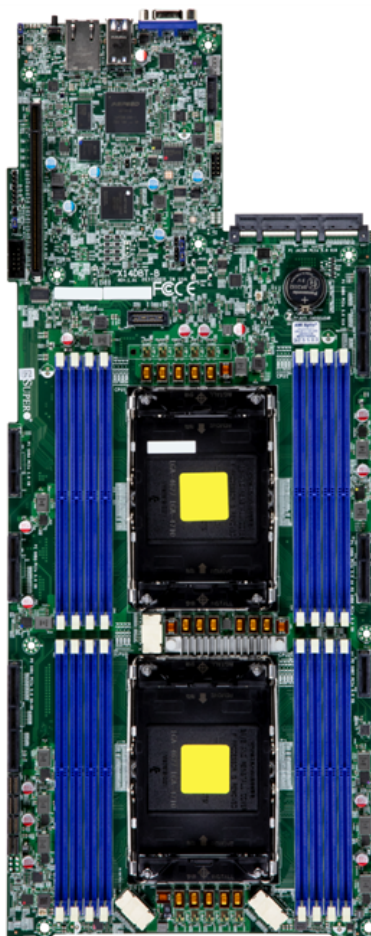


Figure 1-8. X14DBT-B Motherboard Image

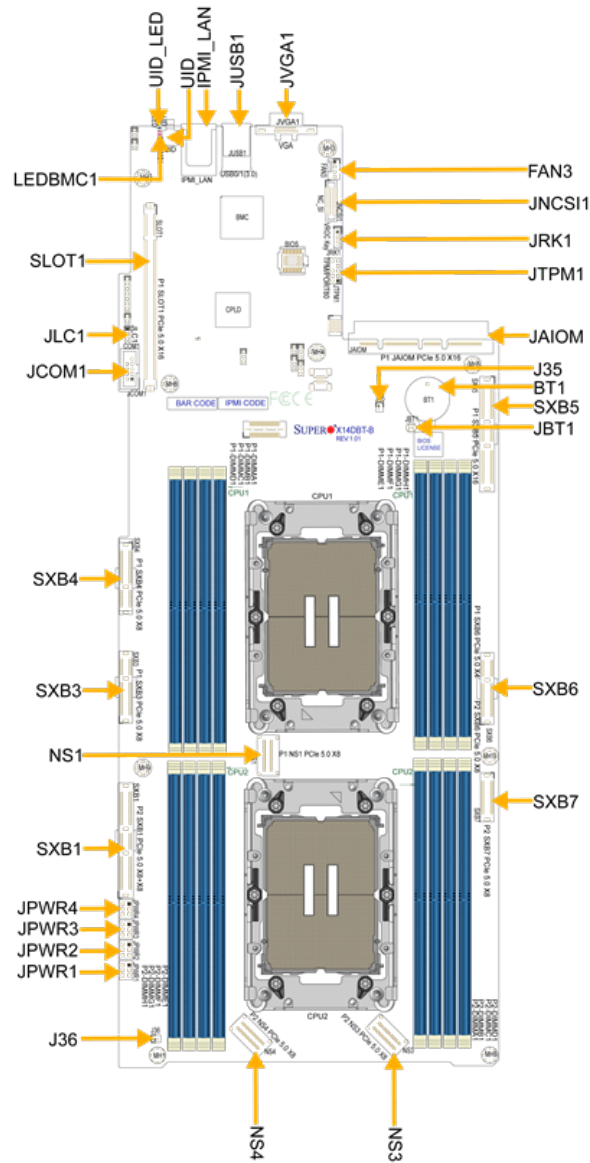


Figure 1-9. X14DBT-B Motherboard Layout

Note: Components not documented are for internal testing only.

Notes:

- For detailed information on jumpers, connectors, and LED indicators, see [Component Installation](#).
- "■" indicates the location of pin 1.
- Components not documented are for internal testing purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. To avoid possible explosion, do not install the onboard battery upside down.

Memory Slots

Refer to the layout drawing below for the locations of the DIMM slots:

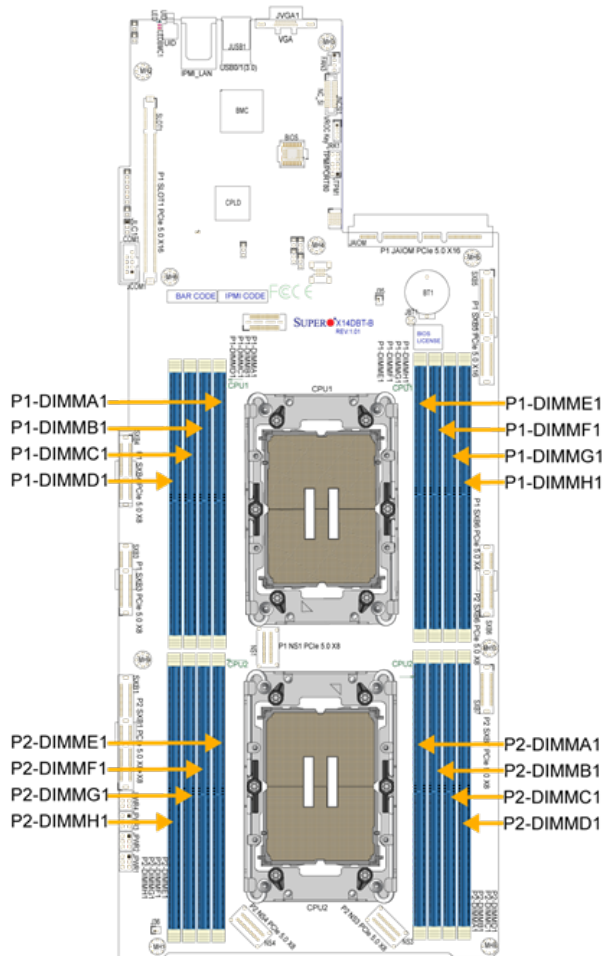


Figure 1-10. SYS-222BT-H Series DIMM Slots

Note: All P1 DIMM slots are supported by Processor 1. All P2 DIMM slots are supported by Processor 2.

Quick Reference

Quick Reference Table

Jumper	Description	Jumper Settings
JBT1	CMOS Clear	Open (normal)

LED	Description	Status
LEDBMC	BMC Heartbeat LED	Blinking Green: BMC Normal (Active), Solid Green: BMC resetting or cold rebooting
UID_LED	Unit Identifier (UID) LED	Solid Blue: Unit Identification LED

Connector	Description
BT1	Onboard Battery
FAN3	4-pin Cooling Fan Header
IPMI_LAN	Dedicated BMC LAN
J35/J36	Coolant Leakage Sensors
JA1OM1	Supermicro Advanced Input/Output Module (AIOM) PCIe 5.0 x16 Connector for rear I/O support
JCOM1	Serial (COM) Port
JLC1	Cooling Leakage Sensor Header
JNSCI1	Network Controller Sideband Interface (NC-SI) Connector
JPWR1– JPWR4	6-Pin 12 V Power Connectors
JRK1	Intel VROC RAID Key Header
JTPM1	Trusted Platform Module / Port 80 Connector
JUSB1 (USB0/1)	USB 3.2 Ports

Connector	Description
JVGA1	Backplane VGA Port
NS1	PCIe 5.0 x8 Connector (for NVMe SCC)
NS3	PCIe 5.0 x8 Connector (for NVMe SCC)
NS4	PCIe 5.0 x8 Connector (for NVMe SCC)
SLOT1	PCIe 5.0 x16 Connector
SXB1	PCIe 5.0 x8 + x8 Connector
SXB3/SXB4	PCIe 5.0 x8 Connectors
SXB5	PCIe 5.0 x16 Connector
SXB6	PCIe 5.0 x4 + x8 Connector
SXB7	PCIe 5.0 x8 Connector

Note: For detailed instructions on how to configure VROC RAID settings, refer to the VROC RAID Configuration User's Guide posted on the web page under the following link:
<https://www.supermicro.com/support/manuals>.

Chapter 2:

Server Installation

This chapter provides advice and instructions for mounting your system in a server rack. If your system is not already fully integrated with processors, system memory, etc., refer to [Maintenance and Component Installation](#) for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to printed circuit boards (PCBs), it is important to use a grounded wrist strap, handle all PCBs by their edges, and keep PCBs in anti-static bags when not in use.

2.1 Unpacking the System	31
2.2 Preparing for Setup	32
Choosing a Setup Location	32
Rack Precautions	32
System Precautions	32
Rack Mounting Considerations	33
2.3 Installing the Rails	35
Identifying the Rails	35
Installing the Rails onto the Rack	36
2.4 Inserting Chassis	37

2.1 Unpacking the System

Inspect the box the system was shipped in and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in ["Standardized Warning Statements for AC Systems"](#) on page 148.

2.2 Preparing for Setup

The box in which the SYS-222BT-H Series system was shipped should include the rackmount hardware needed to install it into the rack. Read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The system should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time. Extending two or more simultaneously may cause the rack to become unstable.

System Precautions

- Review the electrical and general safety precautions in ["Standardized Warning Statements for AC Systems" on page 148](#).
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.

- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.



Avertissement!

Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves.

Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Important: To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top, placing the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a workspace.
- Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).


2.3 Installing the Rails

This section provides information on installing the CSE-217BQ2-R3K60P chassis into a rack unit with the rails provided. There are a variety of rack units on the market, which may mean that the assembly procedure will differ slightly from the instructions provided. You should also refer to the installation instructions that came with the rack unit you are using.

Identifying the Rails

The CSE-217BQ2-R3K60P chassis package includes two rail assemblies. Each assembly consists of two sections: a front section which secures to the front post of the rack, and a rear section which adjusts in length and secures to the rear post of the rack. These assemblies are specifically designed for the left and right side of the chassis and labeled.

Note: Each rail assembly has a locking screw to adjust the length of the rail to fit the depth of your rack.

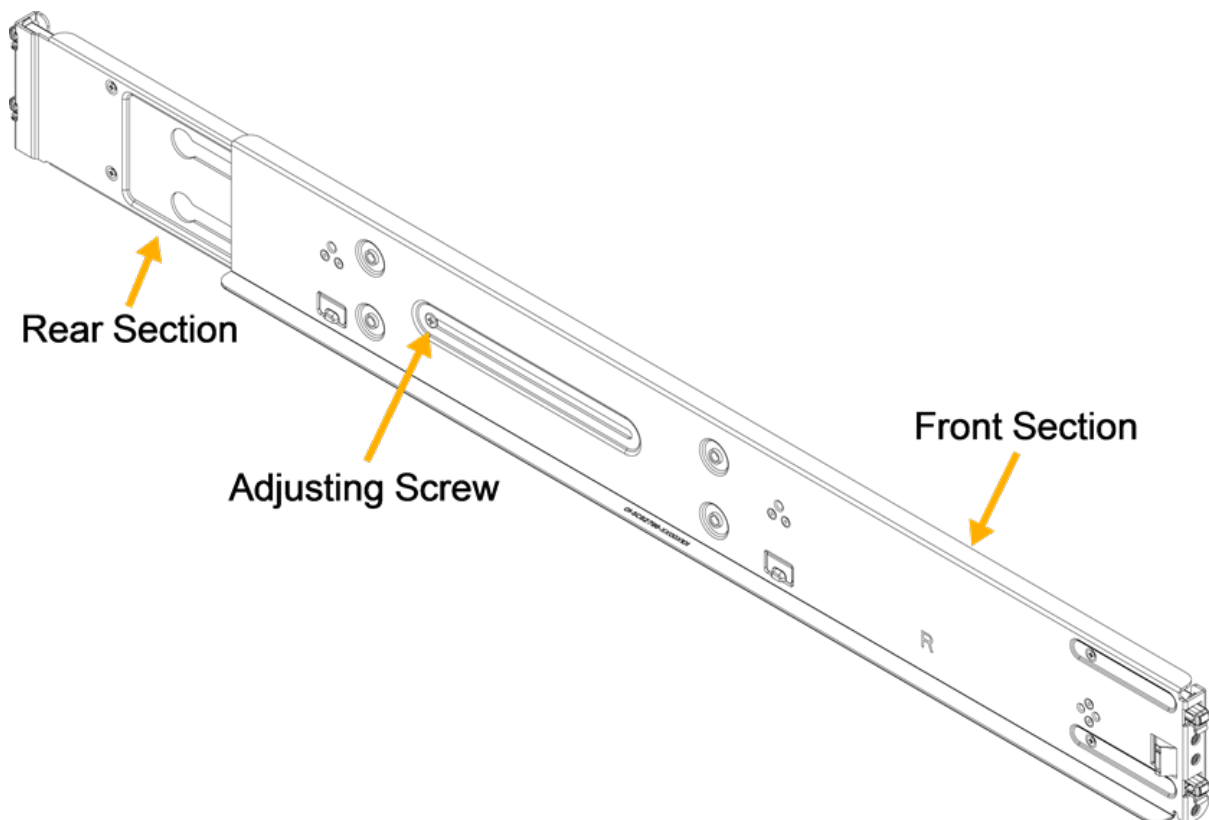

**Figure 2-1. Identifying the Rackmount Rail
(Right Rail Assembly Shown)**

Installing the Rails onto the Rack

1. Loosen the adjusting screw to allow the rear section to slide in the front section.
2. Push the small hooks on the front section of the rail into the holes on the front post of the rack and then down, until the spring-loaded pegs snap into the rack holes. Secure the rail to the rack with screws.
3. Pull out the rear section of the outer rail, adjusting the length until it fits within the posts of the rack and align the small hooks with the appropriate holes on the rear post of the rack. Be sure the rail is level, then mount the rear section onto the rack. Secure the rail with screws.
4. Tighten the adjusting screw.

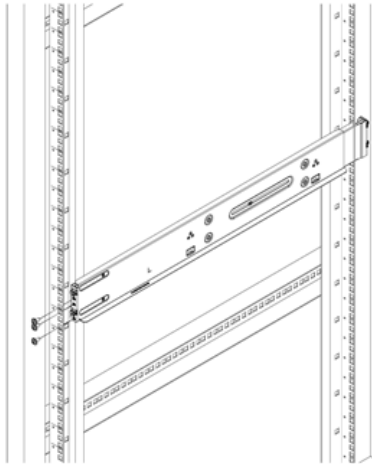


Figure 2-2. Attaching the Rail Front to the Rack (Left rail assembly shown)

Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

2.4 Inserting Chassis

Slide the chassis into the rack so that the bottom of the chassis rests evenly onto the bottom lip of the rails.

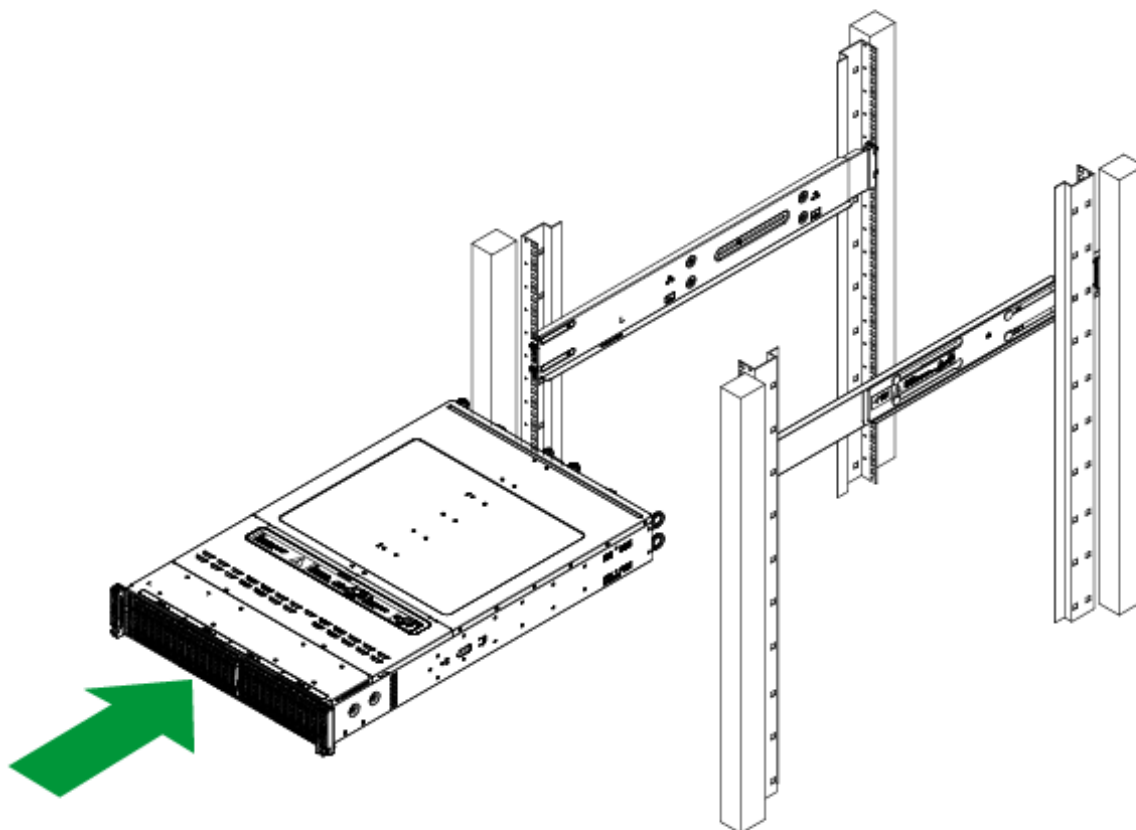


Figure 2-1. Sliding the Chassis into the Rack



Warning! Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over.

Chapter 3:

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components for the SYS-222BT-H Series system. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

3.1 Removing Power	40
Removing Power from a Node	40
Removing Power from the System	40
3.2 Accessing the System	41
Removing a Computing Node Drawer	41
Removing the Chassis Cover	41
3.3 Static-Sensitive Devices	43
Precautions	43
3.4 Processor and Heatsink Installation	44
LGA 4710 Socket E2 Processors	44
Overview of the Processor Socket	45
Overview of the Processor Heatsink Module	45
Assembling the Processor Heatsink Module	46
Preparing the Processor Socket for Installation	48
Preparing to Install the PHM into the Processor Socket	49
Installing the Processor Heatsink Module	50
Removing the Processor Heatsink Module	52
3.5 Memory Support and Installation	55
Memory Support for X14DBT-B	55
DIMM Installation	58
DIMM Removal	60
3.6 Motherboard Battery Removal and Installation	61
Battery Removal	61
Proper Battery Disposal	61

Battery Installation	61
3.7 Storage Drives	62
Drive Carrier Indicators	62
Drive Configuration	64
Removing a Drive from the Chassis	65
Installing a 2.5" Drive into a Drive Carrier	65
Hot-Swap for NVMe Drives	66
Hot-Swap for NVMe Drives	68
3.8 System Cooling	70
Fans	70
Air Shrouds	71
3.9 PCIe Expansion Cards	73
Populating Expansion Slots	73
3.10 AIOM Cards	75
Removing AIOM Cards	75
Installing AIOM Cards	76
3.11 Backplane	77
3.12 Storage Adapters	78
3.13 Cable Routing Diagrams	79
SYS-222BT-HNR Cable Routing Diagram	80
SYS-222BT- HNC8R Cable Routing Diagram	81
SYS-222BT-HNC9R Cable Routing Diagram	82
3.14 Power Supply	83
Replacing the Power Supply	83

3.1 Removing Power

Before performing some setup or maintenance tasks, use the following procedure to ensure that power has been removed from one or more nodes of the SYS-222BT-H Series system.

Removing Power from a Node

- Use the operating system to power down the node.

Removing Power from the System

1. Use the operating system to power down all nodes.
2. Grasp the head of each power cord and gently pull it out of the back of the power supply.
3. Disconnect the cords from the power strip or wall outlet.

3.2 Accessing the System

Removing a Computing Node Drawer

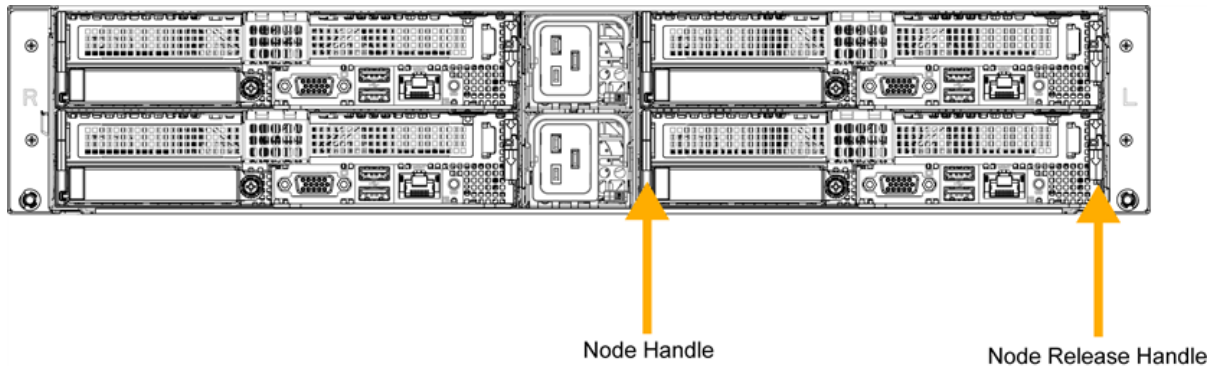


Figure 3-1. Removing a Computing Node Drawer

1. Use the operating system to power down the node.
2. Remove any cables attached to the node.
3. Pull down the node release handle (the handle with the lock and downward arrow icon) and use both handles to slide the node out the chassis rear.

Removing the Chassis Cover

The SYS-222BT-H Series system features a removable top cover, which allows easy access to the inside of the system.

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

1. Press the release button and slide the cover toward the rear.
2. Lift the top cover up.
3. Check that all ventilation openings on the top cover and the top of the chassis are clear and unobstructed.

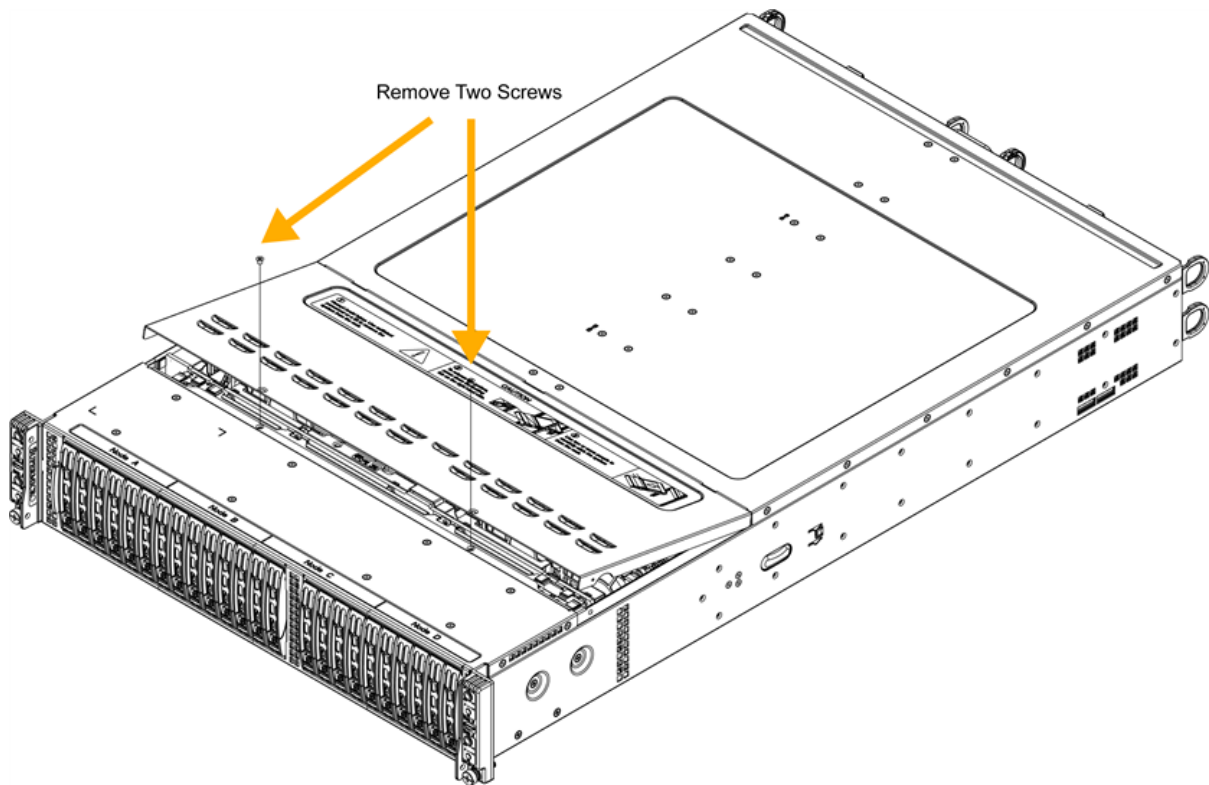


Figure 3-2. Removing the Chassis Cover

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard only by its edges. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. To avoid possible explosion, do not install the onboard battery upside down.

3.4 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see ["Static-Sensitive Devices" on the previous page](#).
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

LGA 4710 Socket E2 Processors

Processor Top View

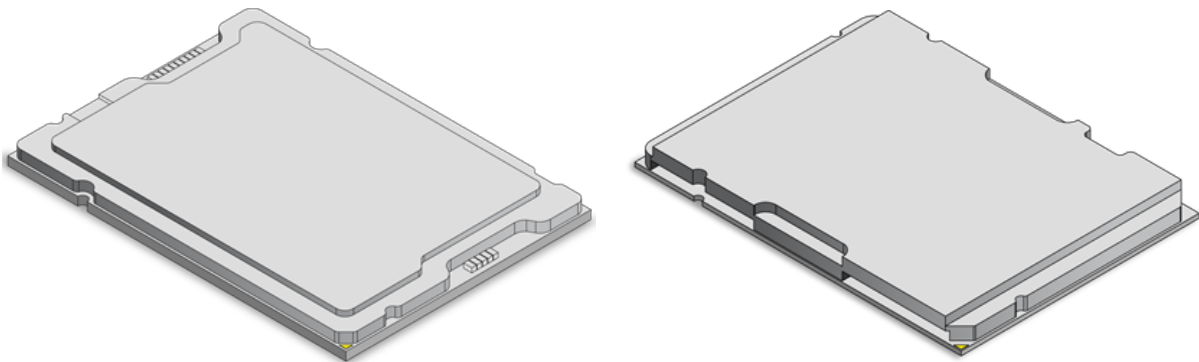


Figure 3-3. Processor (SP XCC left, SP HCC/LCC right)

Note: The motherboard supports three processor SKUs: SP XCC, SP HCC, and SP LCC. Each SKU supports a specific carrier; the SP XCC processor supports Carrier E2A while SP HCC and SP LCC support Carrier E2B. Make sure the processors of the same SKU are on the motherboard.

Overview of the Processor Socket

The processor socket is protected by a plastic protective cover.

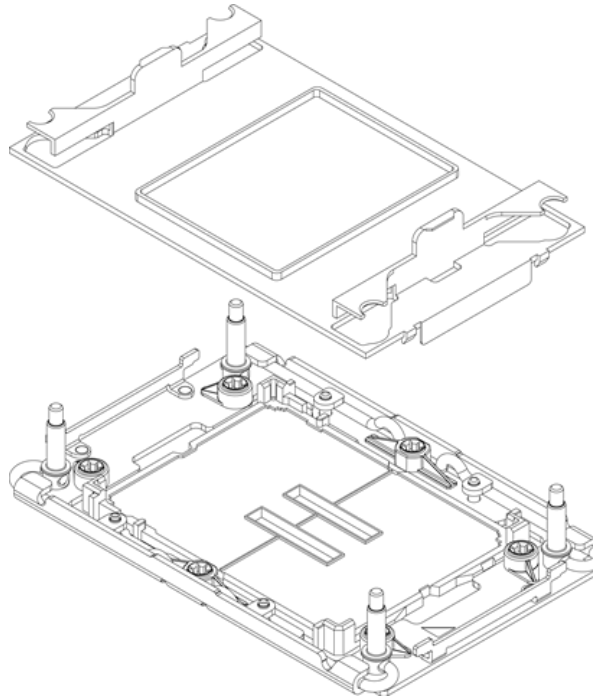


Figure 3-4. Plastic Protective Cover and Processor Socket

Overview of the Processor Heatsink Module

The Processor Heatsink Module (PHM) contains a heatsink, a processor carrier, and the processor.

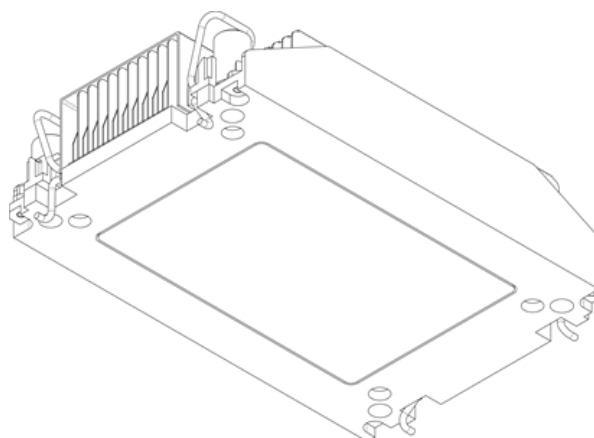


Figure 3-5. Heatsink (1U)

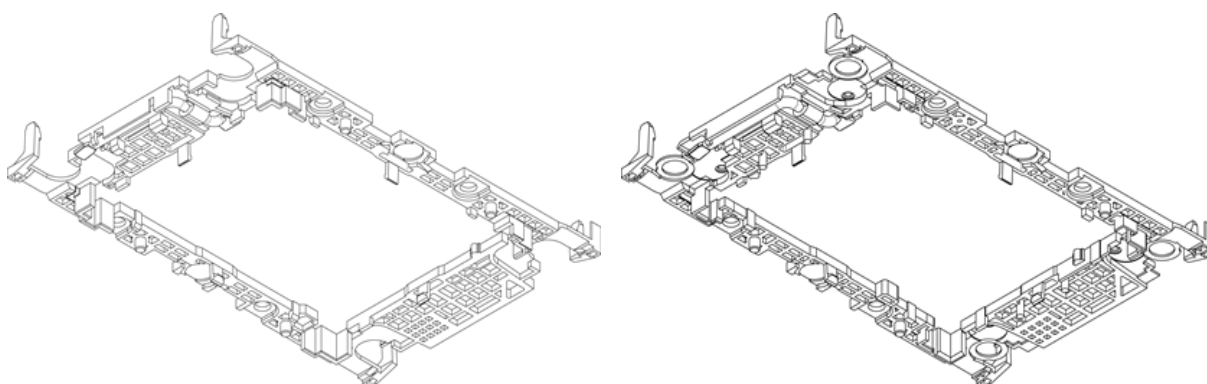


Figure 3-6. Carrier (SP XCC E2A left, SP HCC/LCC E2B right)

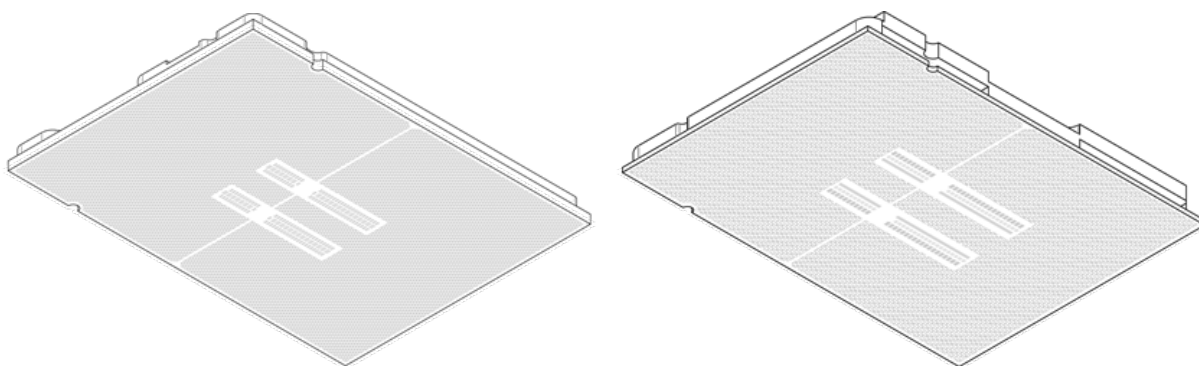


Figure 3-7. Processor (SP XCC E2A left, SP HCC/LCC E2B right)

Assembling the Processor Heatsink Module

After installing the processor into the carrier, mount it onto the heatsink to create the processor heatsink module (PHM):

1. Note the label on top of the heatsink, which marks the airflow direction. Turn the heatsink over and orient the heatsink so the airflow arrow is pointing towards the triangle on the processor.
2. If this is a new heatsink, the thermal grease has been pre-applied. Otherwise, apply the proper amount of thermal grease.
3. Hold the processor carrier so the processor's gold contacts are facing up, then align the holes of the processor carrier with the holes on the heatsink. Press the processor carrier down until it snaps into place. The plastic clips of the processor carrier will lock at the four corners.

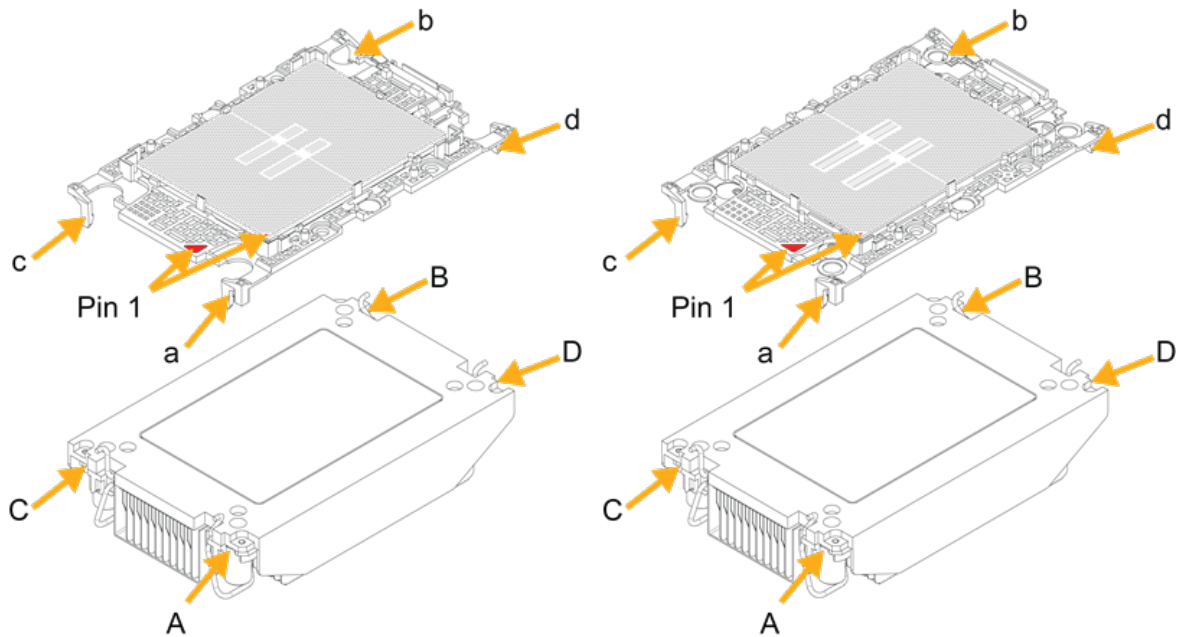


Figure 3-8. Carrier with 1U Heatsink (SP XCC left, SP HCC/LCC right)

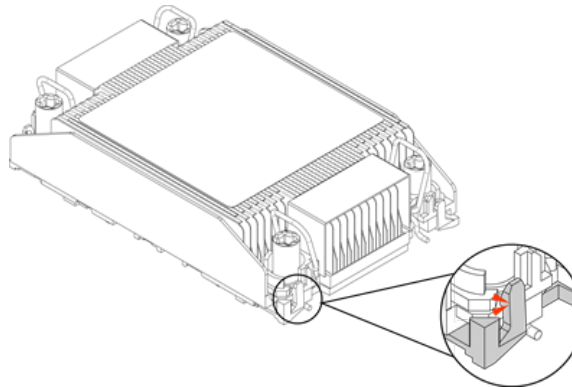


Figure 3-9. PHM Plastic Clips Locked(1U)

4. Examine all corners to ensure that the plastic clips on the processor carrier are firmly attached to the heatsink.

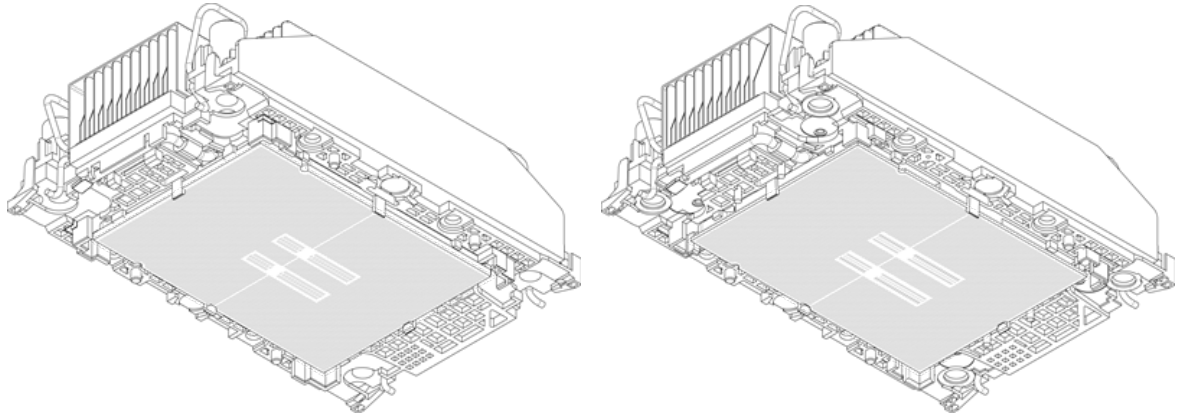


Figure 3-10. 1U PHM Completed (SP XCC left, SP HCC/LCC right)

Preparing the Processor Socket for Installation

This motherboard comes with a plastic protective cover installed on the processor socket. Remove it from the socket to install the Processor Heatsink Module (PHM). Gently pull up one corner of the plastic protective cover to remove it.

1. Press the tabs inward.

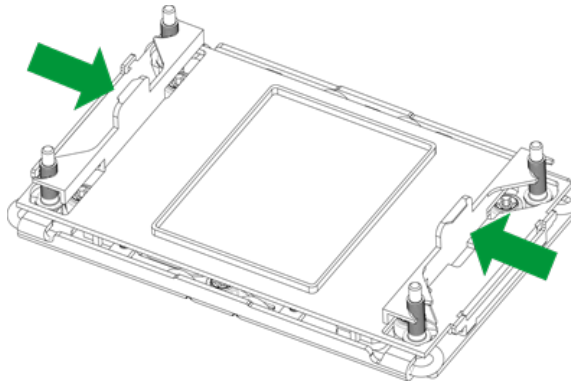


Figure 3-11. Processor Socket with Plastic Protective Cover

2. Pull up the protective cover from the socket.

Note: Do not touch or bend the socket pins.


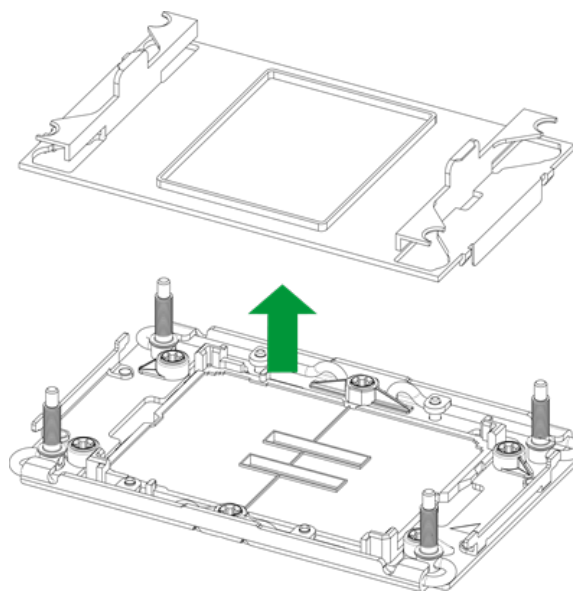


Figure 3-12. Plastic Protective Cover Removed

Preparing to Install the PHM into the Processor Socket

After assembling the Processor Heatsink Module (PHM), you are ready to install it into the processor socket. To ensure the proper installation, follow the procedures below:

1. Locate four threaded fasteners (marked a, b, c, and d) on the processor socket.

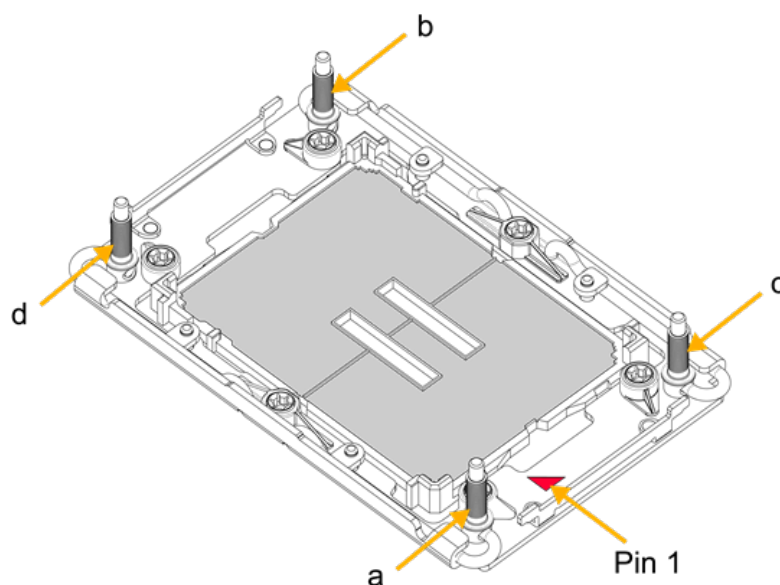

a, b, c, d: Threaded Fasteners

Figure 3-13. Threaded Fasteners

2. Locate four PEEK nuts (marked A, B, C, and D) and four rotating wires (marked 1, 2, 3, and 4) on the heatsink.

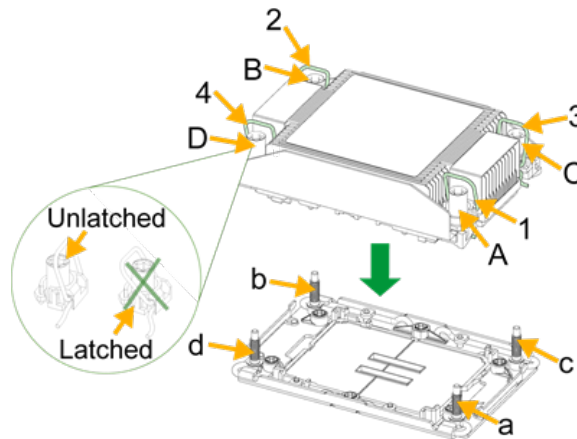


Figure 3-14. PEEK Nuts and Rotating Wires (1U)

3. Check the rotating wires (marked 1, 2, 3, and 4) to make sure that they are at unlatched positions before installing the PHM into the processor socket.


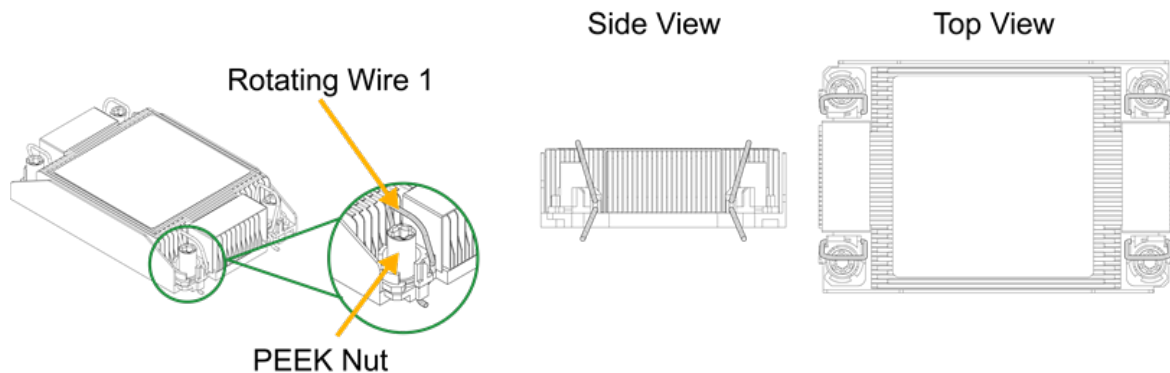


Figure 3-15. 1U Unlatched Positions

Installing the Processor Heatsink Module

1. Align pin 1 of the PHM with the printed triangle on the processor socket.
2. Make sure all four PEEK nuts of the heatsink (marked A, B, C, and D) are aligned with the threaded fasteners (marked a, b, c, and d), then gently place the heatsink on top of the processor socket.

A, B, C, D:
PEEK Nut on the Heatsink

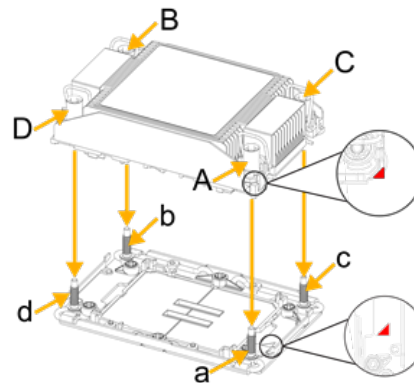

a, b, c, d:
Threaded Fastener on the processor socket

Figure 3-16. Aligning the Heatsink with the Socket (1U)

3. Press all four rotating wires outwards and make sure that the heatsink is securely latched into the processor socket.

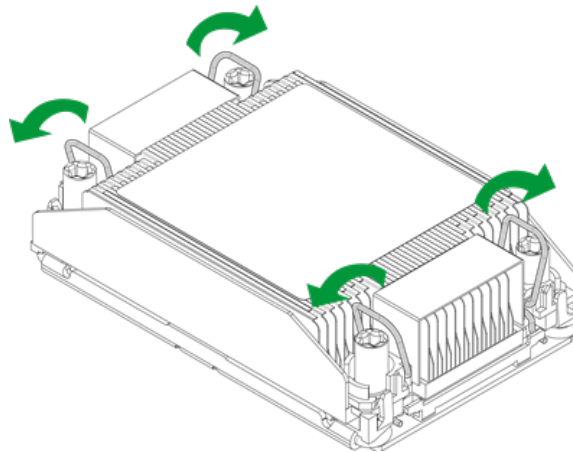


Figure 3-17. Latching the PHM (1U)

4. With a T30 bit torque driver set to a force of 8.0 in-lbf (0.904 N-m), gradually tighten the four screws to ensure even pressure. You can start with any screw, but make sure to tighten the screws in a diagonal pattern.

Important: Do not use a force greater than 8.0 in-lbf (0.904 N-m). Exceeding this force may over-torque the screw, causing damage to the processor, heatsink, and screw.

5. Examine all corners to ensure that the PHM is firmly attached to the socket.

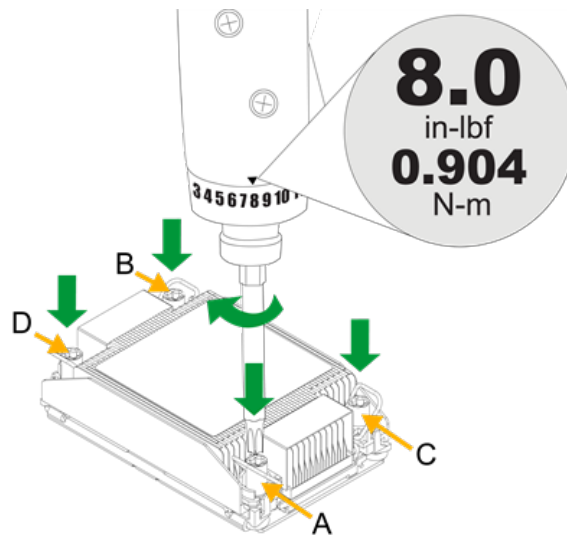


Figure 3-18. Installing the PHM with a Torque Driver (1U)

Removing the Processor Heatsink Module

Before removing the processor heatsink module (PHM) from the motherboard, shut down the system and then unplug the AC power cord from all power supplies.

Then follow the steps below:

1. Use a screwdriver to loosen the four screws. You can start with any screw, but make sure to loosen the screws in a diagonal pattern.

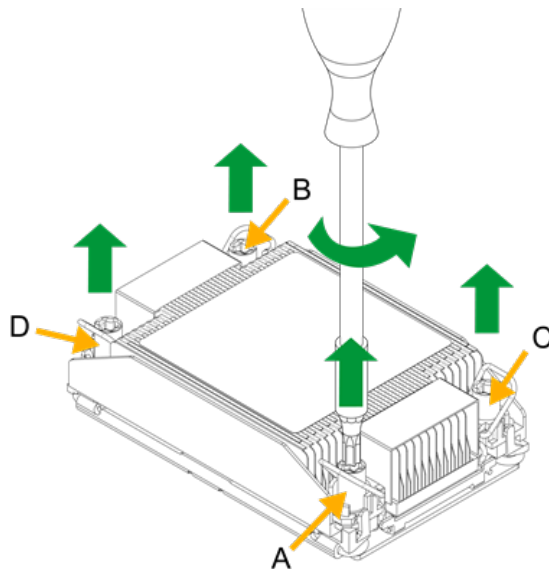


Figure 3-19. Loosening the Screws (1U)

2. Press the four rotating wires inwards to unlatch the PHM from the socket.

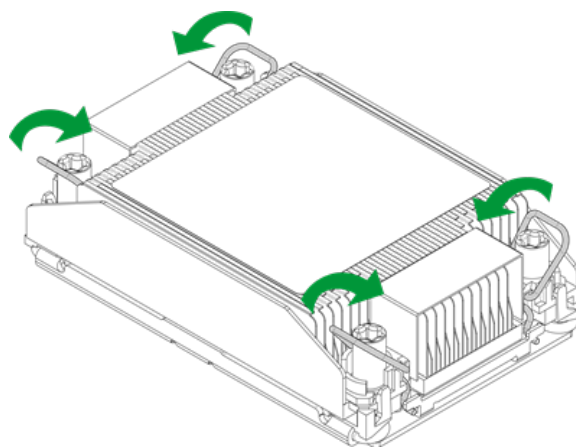


Figure 3-20. Unlatching the PHM (1U)

3. Gently lift the PHM upwards to remove it from the socket.

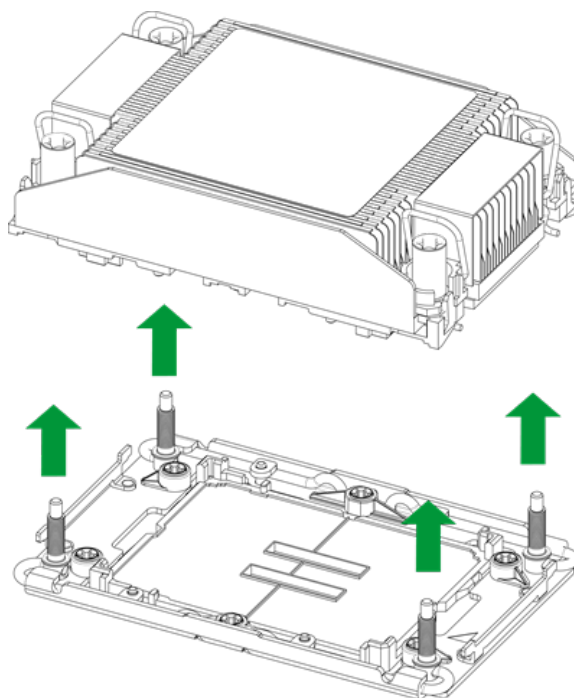


Figure 3-21. Removing the PHM from the Socket (1U)

4. To remove the processor from the heatsink, gently lift the lever from the processor carrier.

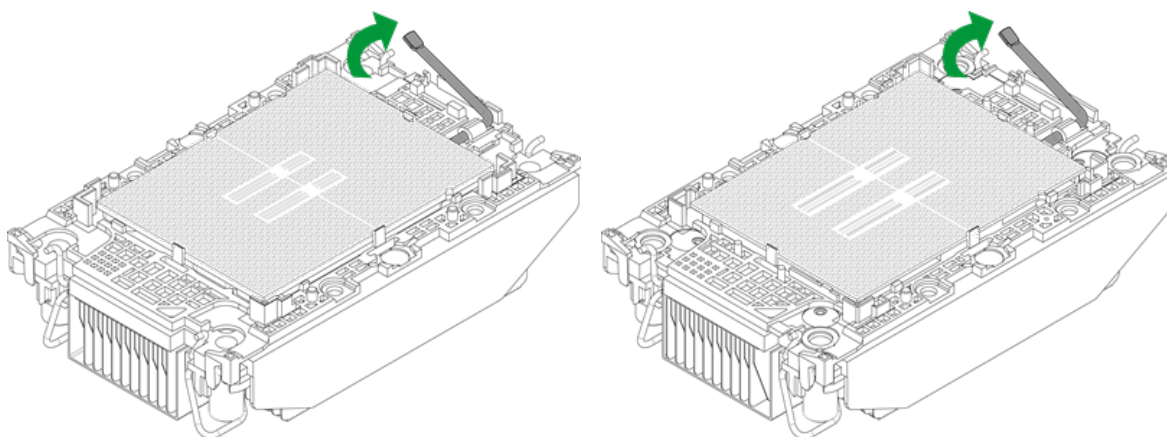


Figure 3-22. Carrier with 1U Heatsink (SP XCC left, SP HCC/LCC right)

5. To remove the processor, move the lever to its unlocked position and gently remove the processor.

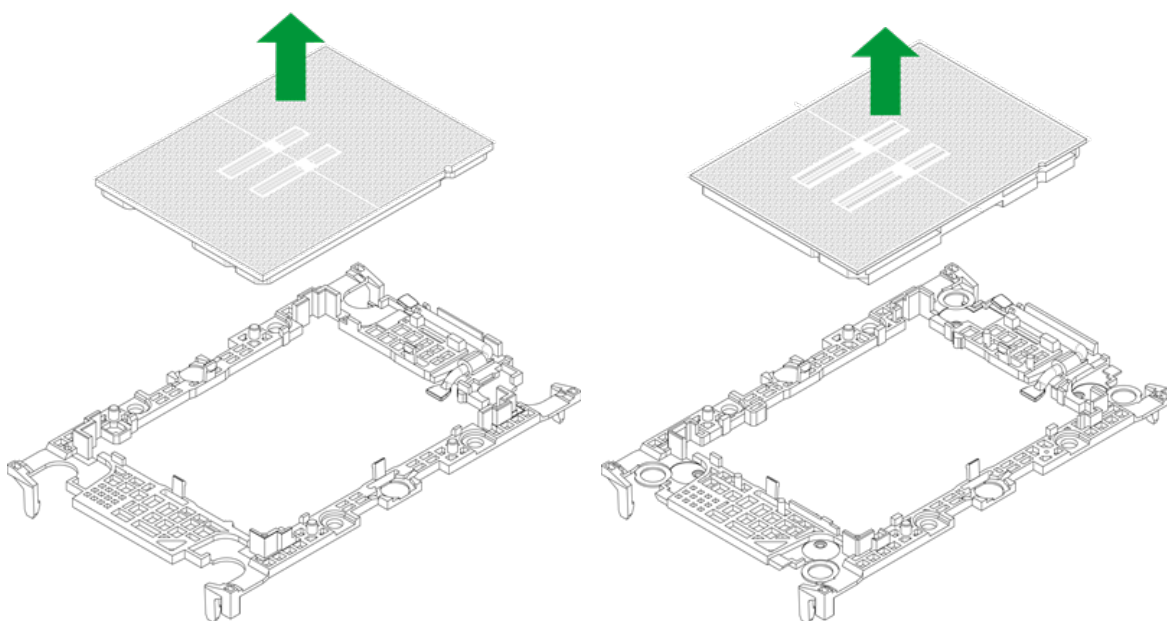


Figure 3-23. Removing the Processor (SP XCC left, SP HCC/LCC right)

3.5 Memory Support and Installation

Important: To prevent any damage, exercise extreme care when installing or removing memory modules.

Note: Check the Supermicro website for recommended memory modules.

Memory Support for X14DBT-B

The X14DBT-B motherboard supports ECC DDR5 memory with speeds up to 6400 MT/s (1DPC), and MRDIMM DDR5 memory with speeds up to 8000 MT/s (1DPC or 1 slot per channel) in 16 DIMMs.

Note: Memory speed/capacity support depends on the processors used in the system.

DDR5-6400 Memory Support for the Intel® Xeon® 6700-series processors with E-cores					
Type	Ranks Per DIMM, Data Width (Stack)	DIMM Capacity (GB)			Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)
		DRAM Density			
		16 Gb	24 Gb	32 Gb	1DPC/2SPC
		1DPC	1DPC	1DPC	+1.1 V
RDIMM	1Rx4	32 GB	-	-	6400, 6000, 5600, 5200, 4800 (DDR5-6400 rated RDIMMs only)
	2Rx8	32 GB	-	-	
	2Rx4	64 GB	96 GB	-	
	2Rx4	-	-	128 GB	
3DS RDIMM	4Rx4	-	-	256 GB	

DDR5-6400 Memory Support for the Intel® Xeon® 6700/6500-series processors with P-cores					
Type	Ranks Per DIMM, Data Width (Stack)	DIMM Capacity (GB)			Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)
		DRAM Density			
		16 Gb	24 Gb	32 Gb	1DPC/2SPC
		1DPC	1DPC	1DPC	+1.1 V

DDR5-6400 Memory Support for the Intel® Xeon® 6700/6500-series processors with P-cores

RDIMM	1Rx8	16 GB	24 GB	-	6400, 6000, 5600, 5200, 4800 (DDR5-6400 rated RDIMMs only)
	1Rx4	32 GB	48 GB	-	
	2Rx8	32 GB	48 GB	-	
	2Rx4	64 GB	96 GB	128 GB	
3DS RDIMM	8Rx4	-	-	-	
	4Rx4	-	-	256 GB	
MRDIMM	2Rx8	32 GB	-	-	8000, 7200 (MRDIMM-8800 only)
	2Rx4	64 GB	-	-	

Memory Population Table (with 16 DIMM slots)**Intel® Xeon® 6700-Series Processors with E-Cores DDR5 Memory Population Table****(2 Processors and 16 DIMMs Installed, 1DPC)**

1 Processor:	Memory Population Sequence (1DPC)
1 Processor and 1 DIMM (Recommended)	P1-DIMMA1
1 Processor and 4 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1
1 Processor and 4 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMH1/P1-DIMMF1
1 Processor and 8 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1
2 Processor:	Memory Population Sequence (1DPC)
2 Processors and 2 DIMMs (Recommended)	P1-DIMMA1 P2-DIMMA1
2 Processors and 8 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P2-DIMMA1/P2-DIMMC1/P2-DIMME1/P2-DIMMG1
2 Processors and 8 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1 P2-DIMMB1/P2-DIMMD1/P2-DIMMF1/P2-DIMMH1
2 Processors and 16 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P2-DIMMA1/P2-DIMMB1/P2-DIMMC1/P2-DIMMD1/P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1

Intel® Xeon® 6700/6500-Series Processors with P-Cores DDR5 Memory Population Table (2 Processors and 16 DIMMs Installed, 1DPC)	
1 Processor:	Memory Population Sequence (1DPC)
1 Processor and 1 DIMM (Recommended)	P1-DIMMA1
1 Processor and 4 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1
1 Processor and 4 DIMMs (Recommended)	P1-DIMMB1/P1-DIMMD1/P1-DIMMH1/P1-DIMMF1
1 Processor and 8 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1
2 Processors:	Memory Population Sequence (1DPC)
2 Processors and 2 DIMMs (Recommended)	P1-DIMMA1 P2-DIMMA1
2 Processors and 8 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P2-DIMMA1/P2-DIMMC1/P2-DIMME1/P2-DIMMG1
2 Processors and 8 DIMMs (Recommended)	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1 P2-DIMMB1/P2-DIMMD1/P2-DIMMF1/P2-DIMMH1
2 Processors and 16 DIMMs (Recommended)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P2-DIMMA1/P2-DIMMB1/P2-DIMMC1/P2-DIMMD1/P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1

Notes:

- The memory configurations with an asterisk (*) are recommended by Supermicro for optimal memory performance.
- RDIMMs must be all DDR5-6400 rated DIMMs.
- MRDIMMs must be all DDR5-8800 rated MRDIMMs.
- All DIMMs in a channel must have the same number of ranks (unless explicitly specified otherwise).
- All DDR5 DIMM must be in the same speed per processor socket.
- Mixing vendor is allowed for RDIMM.

DIMM Installation

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in ["Static-Sensitive Devices"](#) on [page 43](#).

1. Insert the desired number of DIMMs into the memory slots based on the recommended DIMM population table earlier in this section.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.

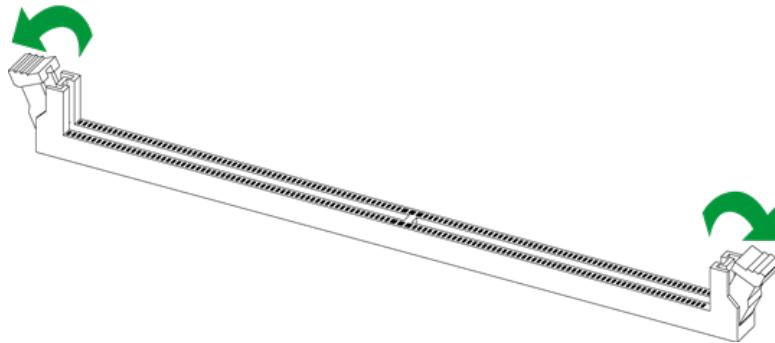


Figure 3-24. Unlocking the DIMM Slot

3. Align the key of the DIMM with the receptive point on the memory slot.

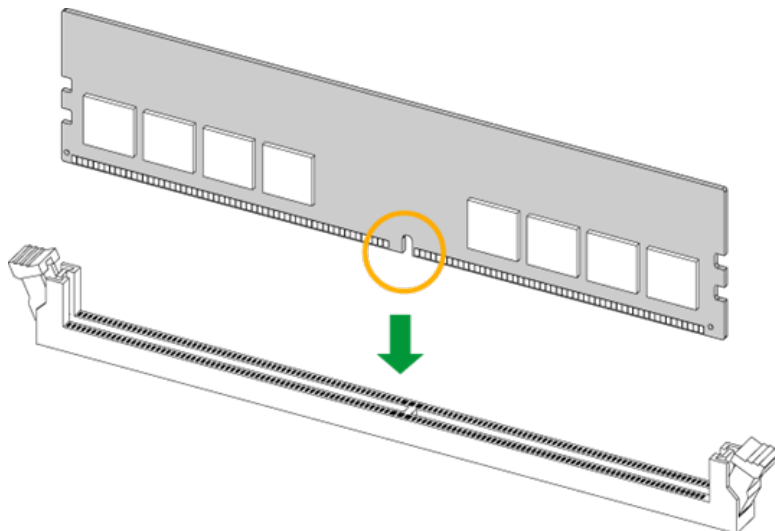


Figure 3-25. Aligning the DIMM Slot with the Receptive Point

4. Align the notches on both ends of the module against the receptive points on the ends of the slot.

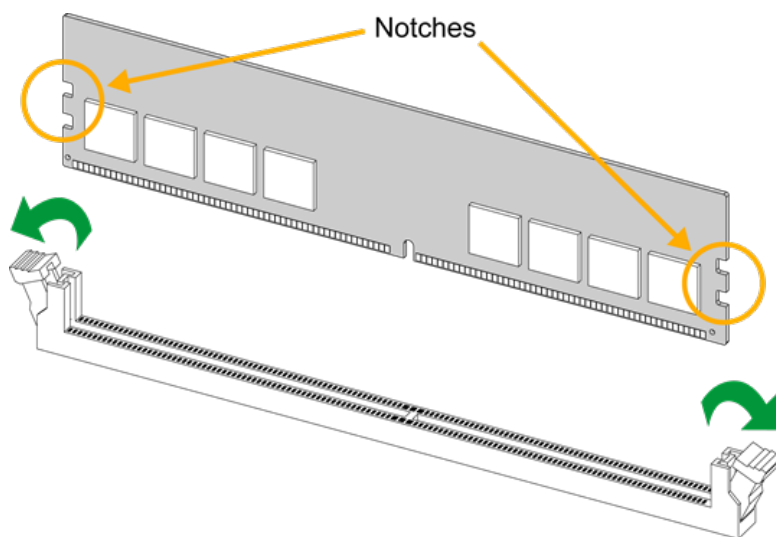


Figure 3-26. Aligning the Notches

5. Press both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM into the slot.

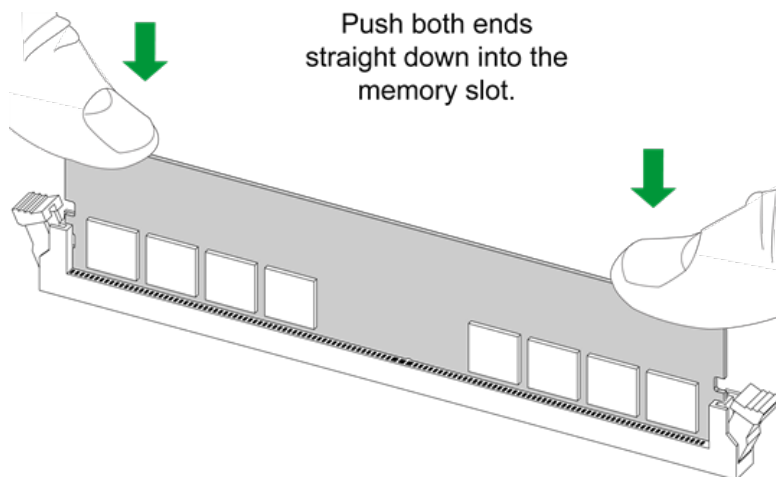


Figure 3-27. Securing the DIMM

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference"](#) on page 25.

DIMM Removal

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in ["Static-Sensitive Devices"](#) on [page 43](#).

Press both release tabs on the ends of the DIMM socket to unlock it. Once the DIMM is loosened, remove it from the memory slot.

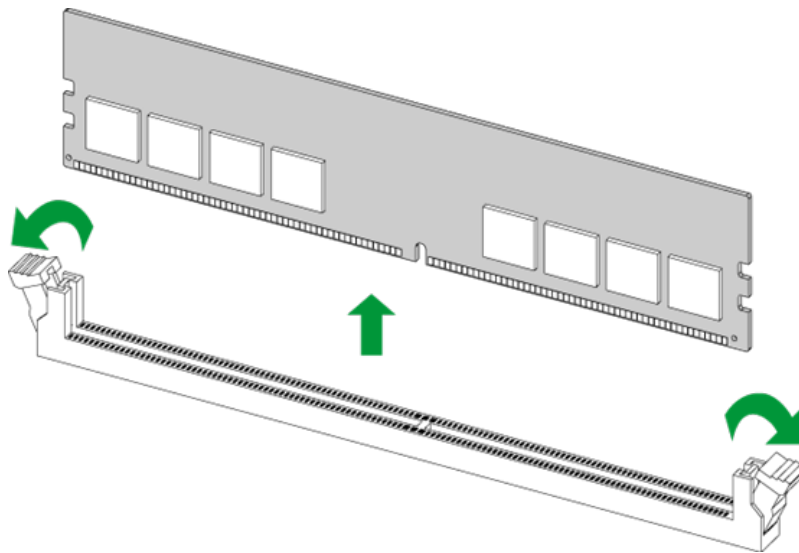


Figure 3-28. Unlocking the DIMM Slot

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference"](#) on [page 25](#).

3.6 Motherboard Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Locate the onboard battery as shown below.
3. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
4. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an onboard battery, follow steps 1 and 2 above and continue below:

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

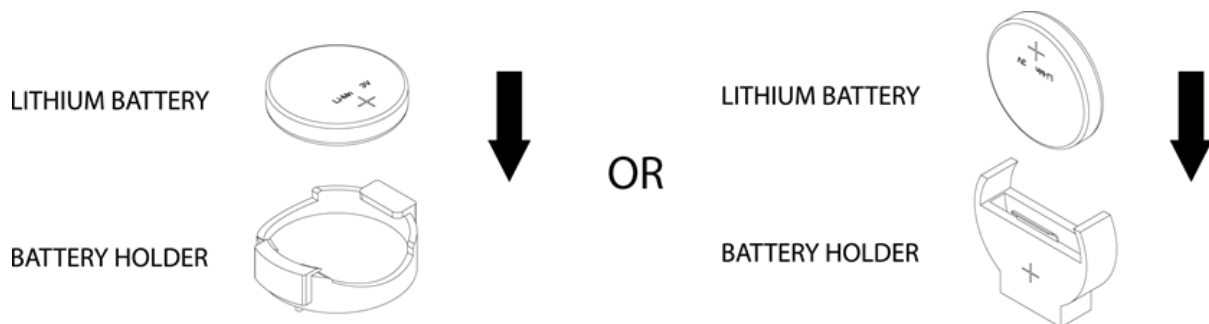


Figure 3-29. Installing a Battery

3.7 Storage Drives

The SYS-222BT-H Series chassis supports up to 16 storage drives (up to four 2.5" drives per node) in drive carriers to simplify their removal from the chassis. These carriers also help promote proper airflow.

To support different storage drive solution, the system needs to install either the SATA enablement kit (MCP-450-21404-ASM/ MCP-450-21405-ASM) or NVMe enablement kit (MCP-450-21408-ASM). Each above kit supports two drives, and the user can install up to two enablement kits into one node.

Drive Carrier Indicators

Each drive carrier has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive Carrier LED Indicators			
	Color	Blinking Pattern	Behavior for Device
Activity LED	Blue	Solid On	SATA/SAS/NVMe drive installed
	Blue	Blinking	I/O Activity
	Off		Idle SATA or no drive
Status LED	Red	Solid On	Failure of drive with RSTe support
	Red	Blinking at 1 Hz	Rebuild drive with RSTe support
	Red	Blinking with two blinks and one stop at 1 Hz	Hot spare for drive with RSTe support
	Red	On for five seconds, then off	Power on for drive with RSTe support
	Red	Blinking at 4 Hz	Identify drive with RSTe support
	Green	Solid On	Save to remove in NVMe device (not supported in VMD mode)
	Amber	Blinking at 1 Hz	Attention state—do not remove NVMe device (not supported in VMD mode)
	Off		Idle SATA or no drive

Note: Enterprise level drives are recommended for use in Supermicro chassis and servers. For information on recommended storage drives, visit the Supermicro website product pages at www.supermicro.com/products.

Drive Configuration

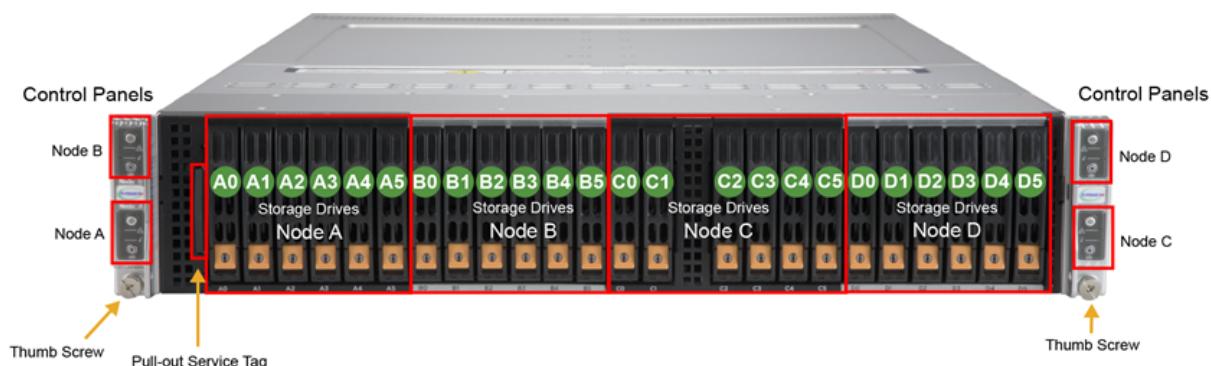


Figure 3-30. Storage Drive Locations

Control Panel Features	
Feature	Description
Power Button	The main power switch applies or removes primary power from the power supply to the server but maintains standby power.
NIC LED	Indicates network activity on the LAN when flashing.
Information LED	Universal information LED (see table below for details).
BMC Button/UID LED	The BMC reset button resets the BMC firmware when pressed. The unit identification (UID) button turns on or off the blue light function of the Information LED and a blue LED on the rear of the chassis. These are used to locate the server in large racks and server banks.
Node Label	Label with the name of the node that is connected to the control panel. Labels for nodes A and C are above their control panel. Labels for nodes B and D are below their control panel.

Removing a Drive from the Chassis

1. Press the release button on the drive carrier. This extends the drive carrier handle.
2. Use the handle to pull the carrier out of the chassis.

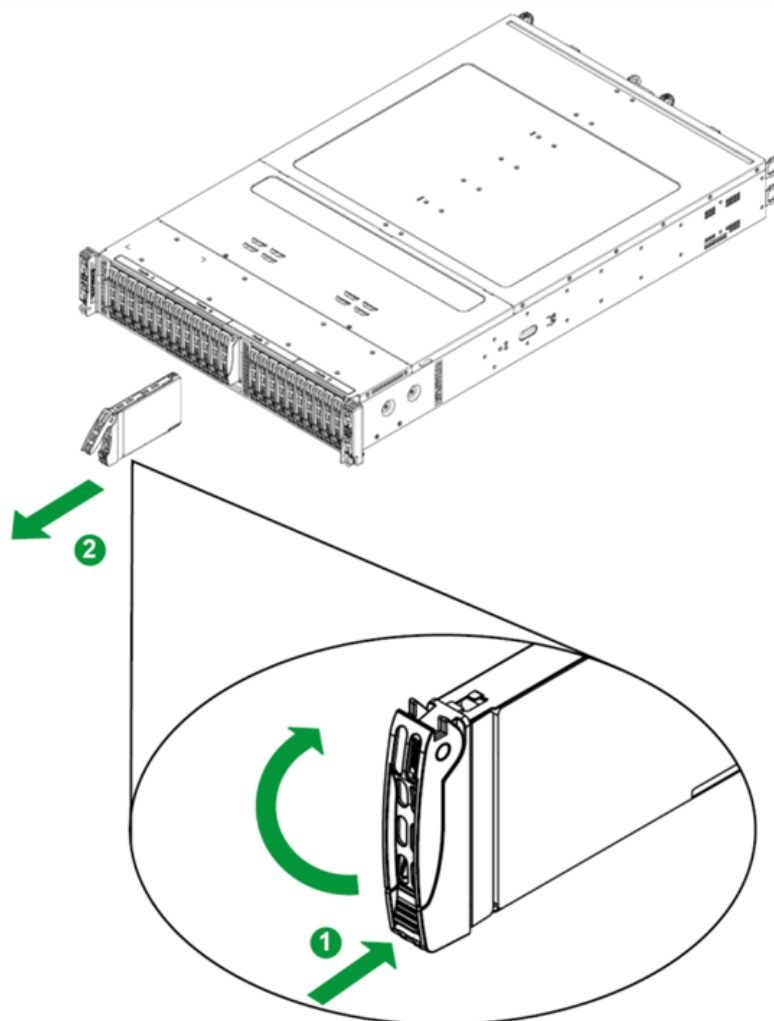


Figure 3-31. Drive Carrier Removal

Installing a 2.5" Drive into a Drive Carrier

1. Place the drive carrier on a flat surface.
2. Remove the dummy drive, which comes pre-installed in the drive carrier, by removing the two locking tabs securing the dummy drive to the carrier.
3. Lift the dummy drive up and out of the carrier.

4. Insert a new drive into the carrier with the printed circuit board side facing downward and the connector oriented at the rear of the carrier.
5. Align the drive in the carrier so that the mounting holes in the drive align with the mounting holes in the carrier.
6. Secure the drive to the carrier with the two locking tabs.
7. Insert the drive carrier into the chassis drive bay, keeping the carrier oriented so that the hard drive is on the top of the carrier and the release button is on the right side. When the carrier reaches the back of the drive bay, the release handle will retract.
8. Push the handle in until the drive carrier clicks into the locked position.

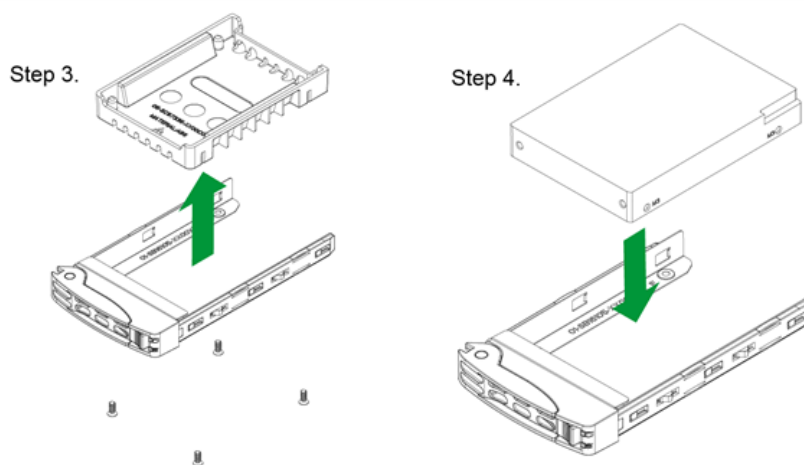


Figure 3-32. Installing a 2.5" Drive into a Drive Carrier

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap via the BMC. For even better data security, NVMe orderly hot-swap is recommended. NVMe drives can be ejected and replaced remotely using BMC.

Ejecting a Drive

1. BMC > System > Storage Monitoring > Physical View
2. Select Device, Group and Slot, and click Eject. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.
4. Note that Device and Group are categorized by the CPLD design architecture.
5. Slot is the slot number on which the NVMe drives are mounted.

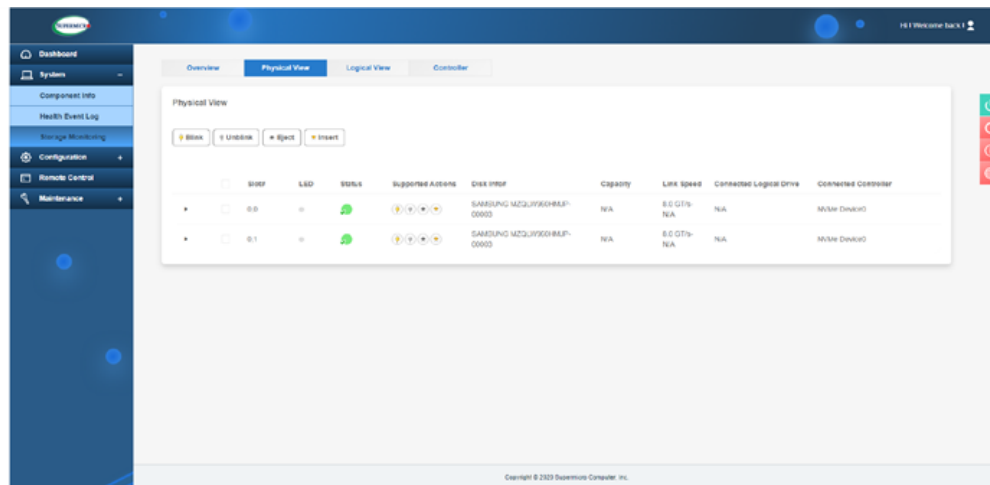


Figure 3-33. BMC Screenshot

Replacing the Drive

1. Insert the replacement drive.
2. BMC > System > Storage Monitoring > Physical View
3. Select Device, Group and slot and click Insert. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

Checking the Temperature of an NVMe Drive

1. There are two ways to check using BMC.
2. Checking a Drive
3. BMC > Storage Monitoring > Physical View – Shows the temperatures of all NVMe drives.
4. BMC > Sensor Reading – Shows the single highest temperature among all the NVMe drives.

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap. For even better data security, NVMe orderly hot-swap is recommended. NVMe drives can be ejected and replaced remotely using BMC.

Note: If you are using VROC, see "[Intel Virtual RAID on CPU \(VROC\)](#)" on page 114 in this manual instead.

Ejecting a Drive

1. **BMC > Server Health > NVMe SSD**
2. Select Device, Group, and Slot, and click **Eject**. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Note that Device and Group are categorized by the CPLD design architecture.

A Slot is the slot number on which the NVMe drives are mounted.

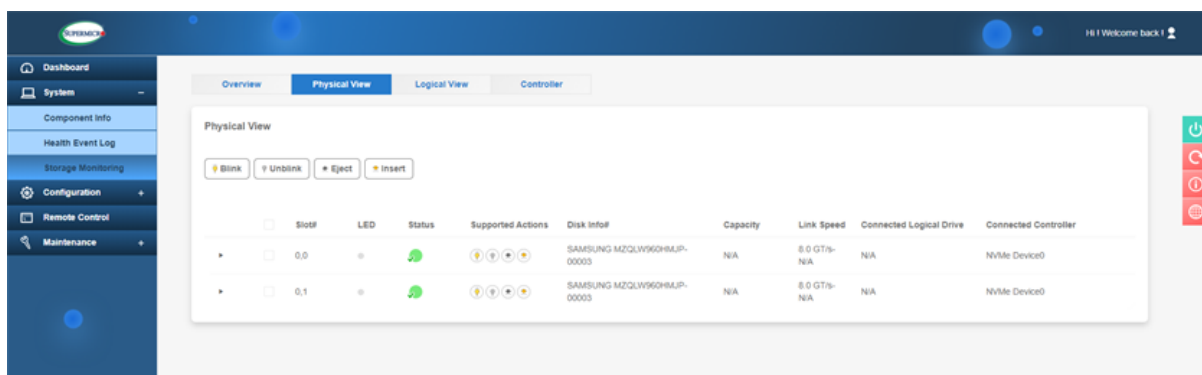


Figure 3-34. BMC Screenshot

Replacing a Drive

1. Insert the replacement drive.
2. **BMC > System > Storage Monitor > Physical View**
3. Select Device, Group, and slot and click **Insert**. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

3.8 System Cooling

Refer to the following sections for information about the cooling capabilities of the SYS-222BT-H Series system.

Fans

Fan speed is controlled by a system temperature setting in BMC. If a fan fails, the remaining fans will ramp up to full speed. The system can continue to run with a failed fan. Replace any failed fan at your earliest convenience with the same type and model.

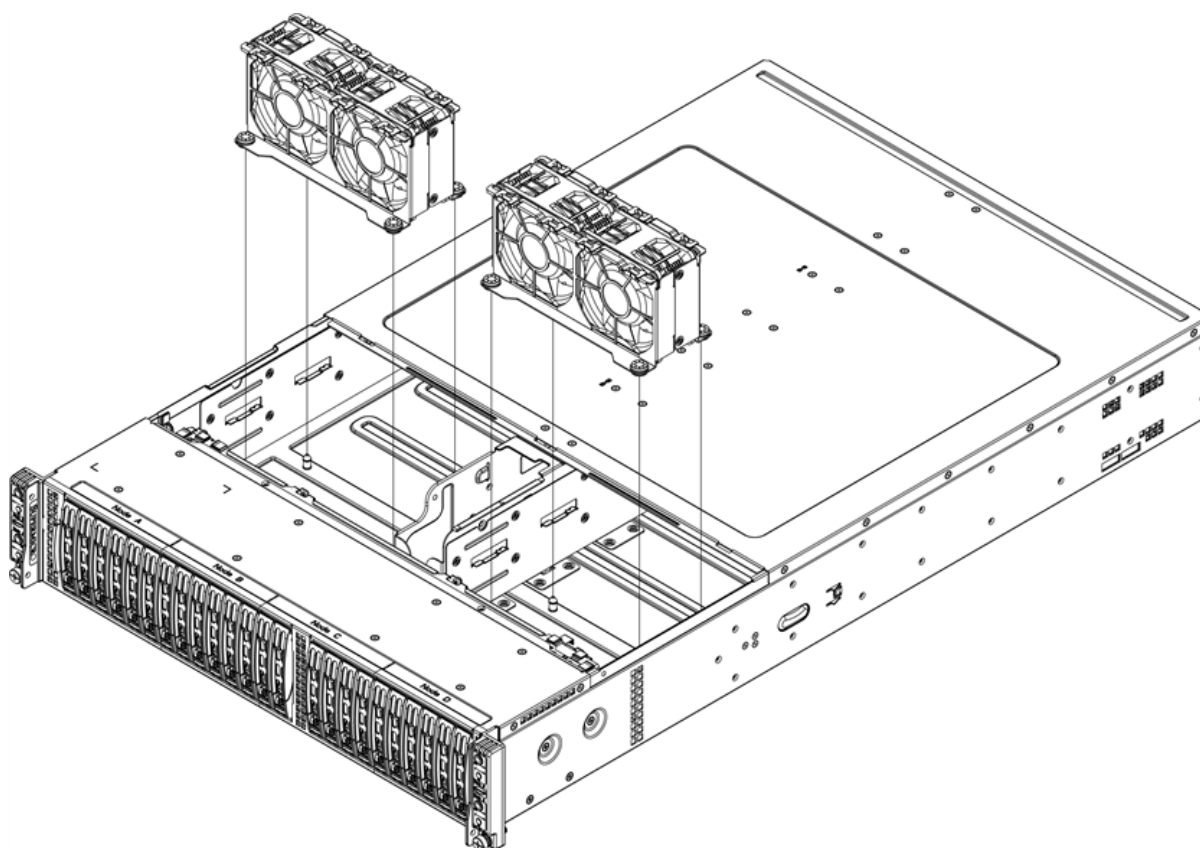


Figure 3-35. System Fan Placement

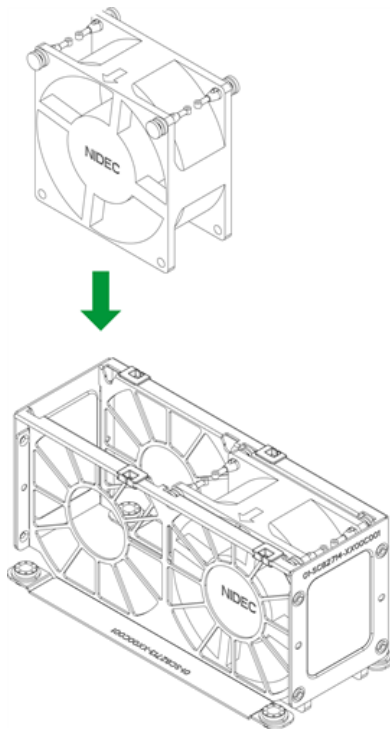


Figure 3-36. Replacing a System Fan in the Fan Housing

Changing a System Fan

1. Determine which fan is failing. If possible, use BMC. If not, remove the chassis cover while the power is on, and examine the fans to determine which one has failed.
2. Remove power from the system.
3. Remove the fan cable from the backplane for the failed fan and the adjacent fan.
4. Lift the fan housing up and out of the chassis.
5. Push the fan up from the bottom and out of the top of the housing.
6. Place the replacement fan into the vacant space in the housing while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans.
7. Put the fan housing back into the chassis and reconnect the cable.
8. Power on the system to confirm that the fan is working properly before replacing the chassis cover.

Air Shrouds

Air shrouds concentrate airflow to maximize fan efficiency. The SYS-222BT-H Series system requires one air shroud for each node.

Installing the Air Shroud

The motherboard, any expansion cards, and all components must be installed in the node tray. Place the air shroud as pictured below.

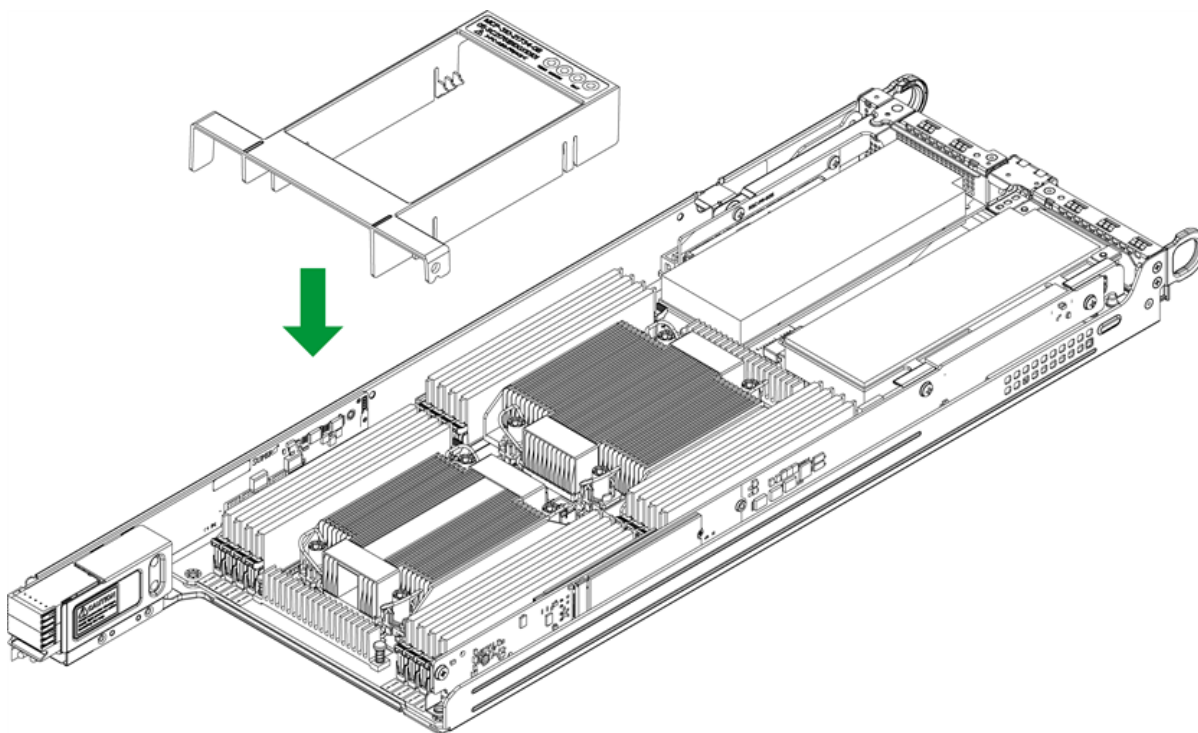


Figure 3-37. Installing an Air Shroud

3.9 PCIe Expansion Cards

The chassis supports two low-profile, half-length x16 expansion cards in each node. Riser cards are used to mount the expansion cards.

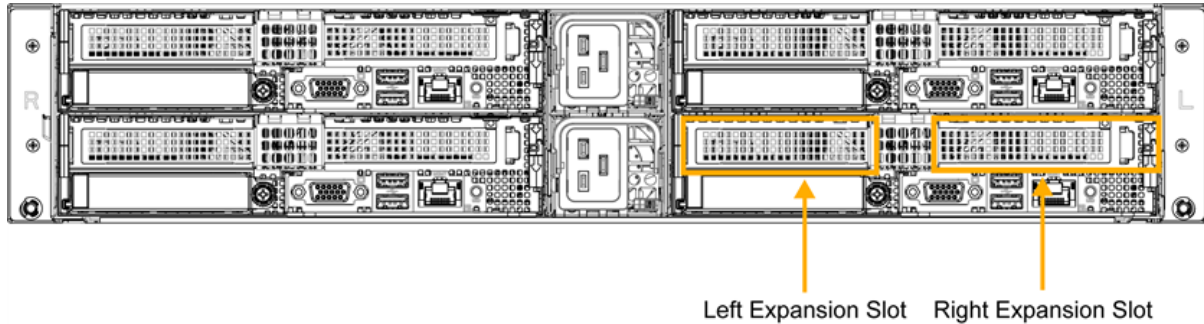


Figure 3-38. PCIe Slot Configuration

Expansion Slot Locations per Node		
Location	Slot Type (All PCIe 5.0)	Riser Card
Left	x16 low-profile slot (CPU2)	SCC-P2HM2G4-B1 (Default) Note: Additional optional expansion card options are available.
Right	x16 low-profile slot (CPU1)	RSC-PR-6G5

Populating Expansion Slots

1. If necessary, power down the node and remove it from the chassis.
2. Open the latch at the center of the node and remove the I/O slot shield by sliding it towards the center.
3. If necessary, install M.2 SSDs (not shown).
4. Align the assembly with slots on the motherboard and the PCI slot shield at the node rear. Insert the assembly into the motherboard.
5. Connect cables, if needed.
6. Close the latch, reinsert the node into the chassis, and power up the system.
7. Check the PCIe bifurcation and the NVMe Firmware Source settings for the M.2 SSDs.

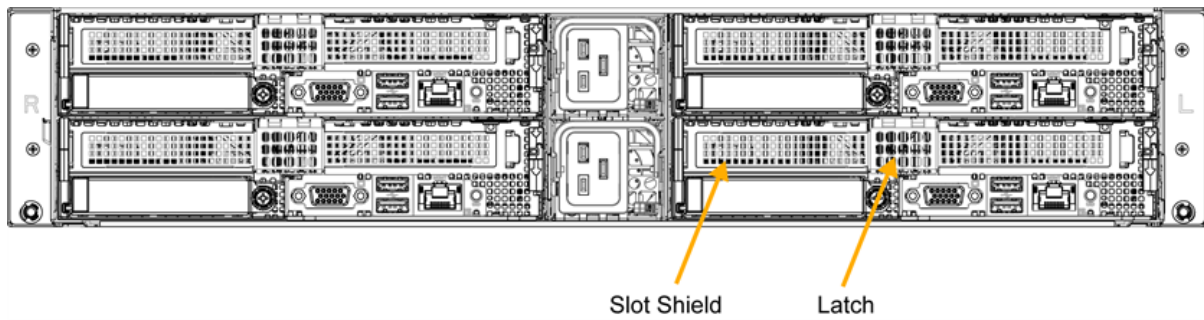


Figure 3-39. PCIe Slot Shield and Latch

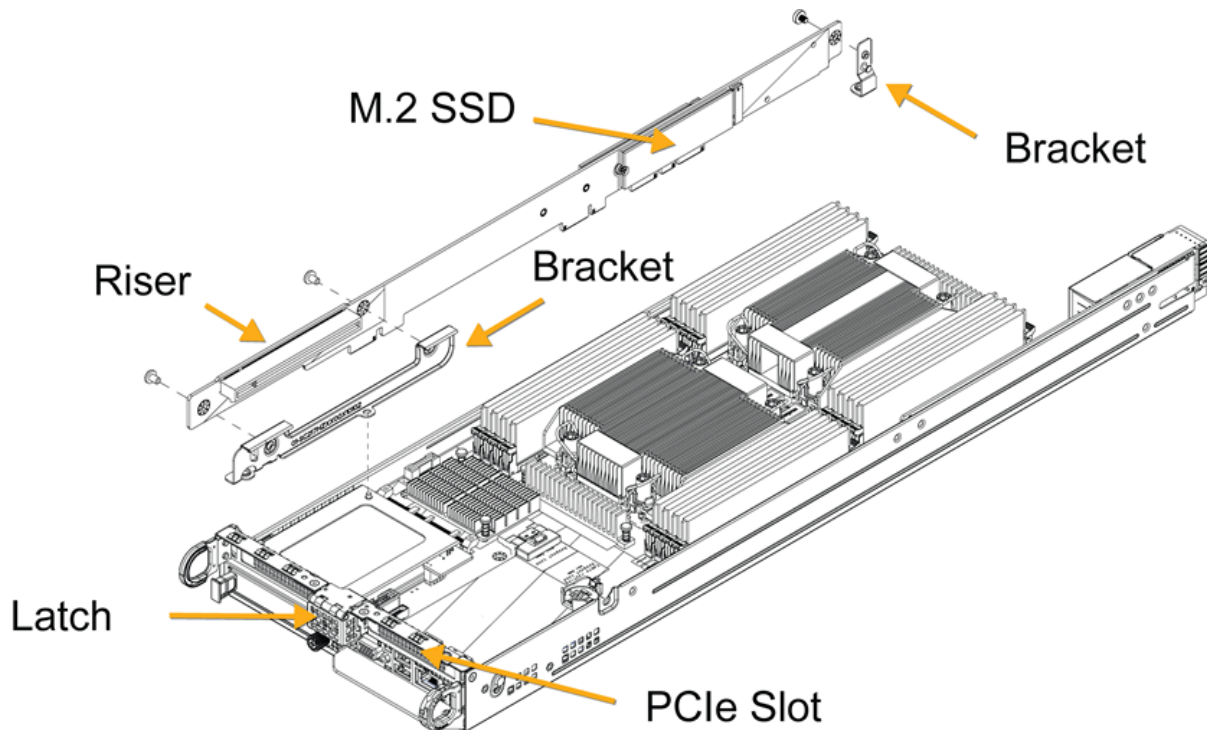


Figure 3-40. Installing Expansion Cards

3.10 AIOM Cards

The system supports various AIOM cards to provide networking functionality. See the Supermicro product page for details about the different AIOM cards.

Removing AIOM Cards

1. Press the release tab and loosen the thumbscrew on the AIOM card.
2. Grasp the release tab and the thumbscrew and pull the AIOM out of the node tray.

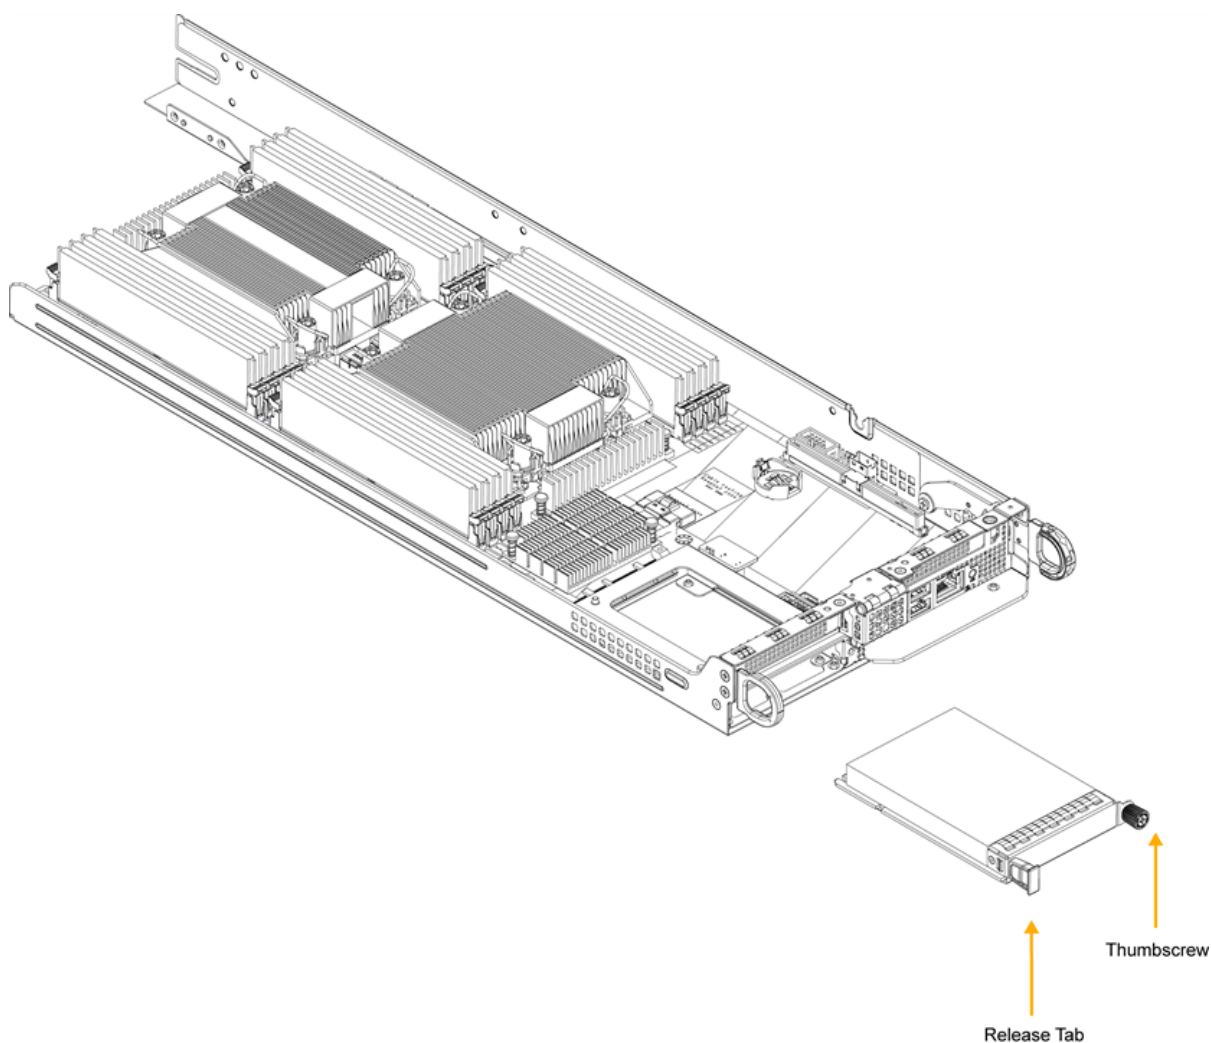


Figure 3-41. AIOM Card Position

Installing AIOM Cards

1. If necessary, loosen the thumbscrew and remove the shield
2. Insert the card into the node until it is connected to the motherboard slot.
3. Tighten the thumbscrew.

3.11 Backplane

The backplane (BPN- NVME5_217BHQ- S6) supports 24 SATA or NVMe drives. Four connectors are located at the back side of the backplane, one connected to each node. A cable linking the NearStack HD connector on the adapter to a high speed connector (P1 NS1) on the motherboard's PCB provides PCIe 5.0 support. For 24 SAS drive support, additional SAS adapters and cables are required.



Figure 3-42. SATA/NVMe Backplane (Side Facing Chassis Rear)

3.12 Storage Adapters

The storage adapter (SCC-P6N6SGH-B1) connects directly to the backplane and provides a SlimSAS x8 connector. It is connected to the motherboard on SXB1 and powered by four 6-pin power connectors (JPWR1 to 4). The SCC-P6N6SGH-B1 adapter is included for the SYS-222BT-HNC8R and SYS-222BT-HNC9R.



Figure 3-43. Storage Adapter (SCC-P6N6SGH-B1)

The storage adapter (SCC-P6NG5-B1) connects directly to the backplane and provides a NearStack HD x8 connector. It is connected to the motherboard on SXB1 and powered by four 6-pin power connectors (JPWR1 to JPWR4). The SCC-P6NG5-B1 is included for the SYS-222BT-HNR.



Figure 3-44. Storage Adapter (SCC-P6NG5-B1)

3.13 Cable Routing Diagrams

The below diagrams indicate the cable routing for the storage, PCIe, I/O, and power cables. When disconnecting cables to add or replace components, refer to the diagrams so you can reroute them in the same manner. If cables are not connected or routed properly it may lead to device detection or performance issues.

SYS-222BT-HNR Cable Routing Diagram

NVMe PCIe 5.0 Cable

CBL -NSH5 -1426-AN5R

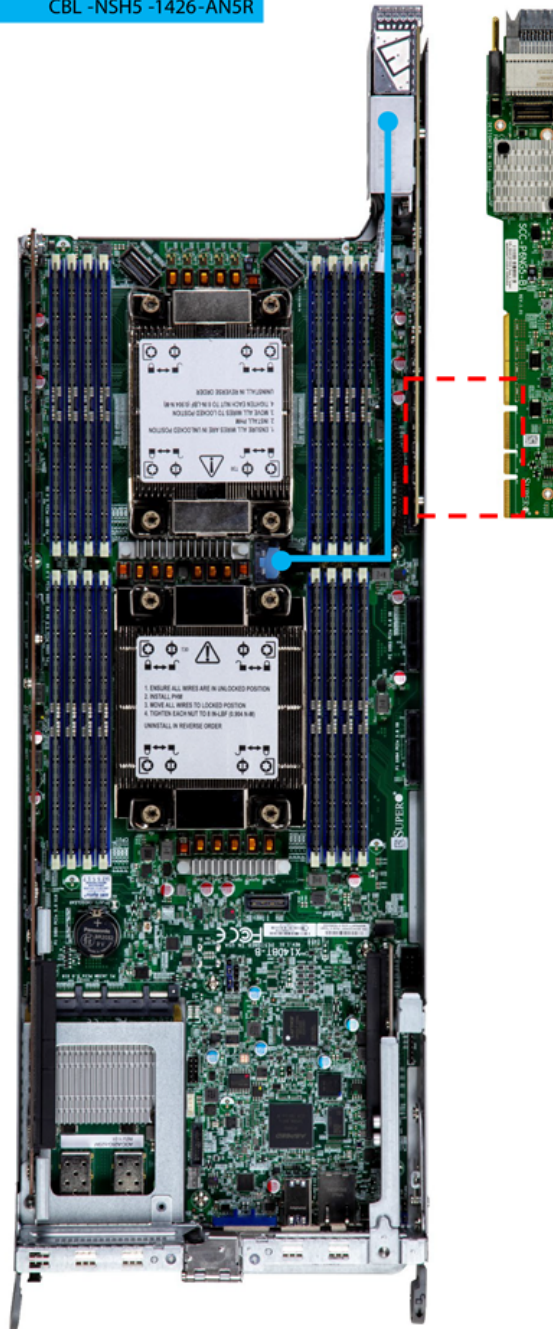


Figure 3-45. SYS-222BT-HNR Cable Routing Diagram

SYS-222BT- HNC8R Cable Routing Diagram

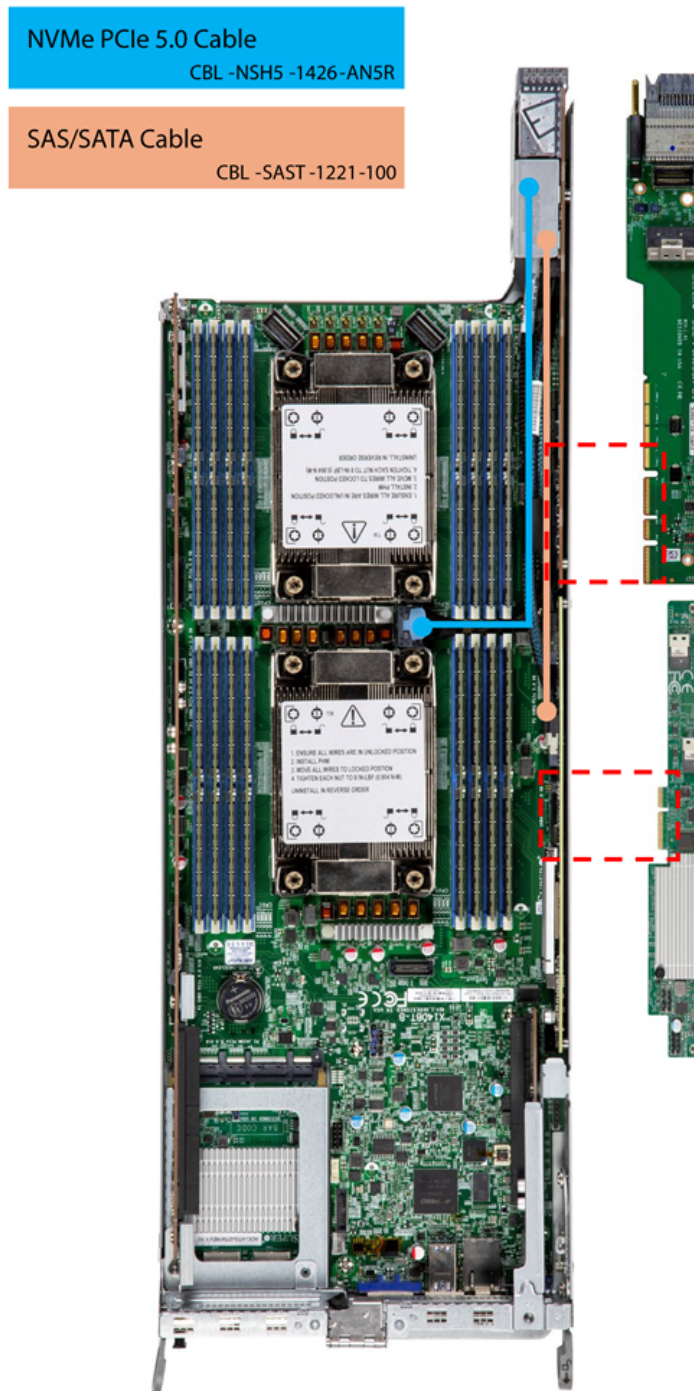


Figure 3-46. SYS-222BT-HNC8R Cable Routing Diagram

SYS-222BT-HNC9R Cable Routing Diagram

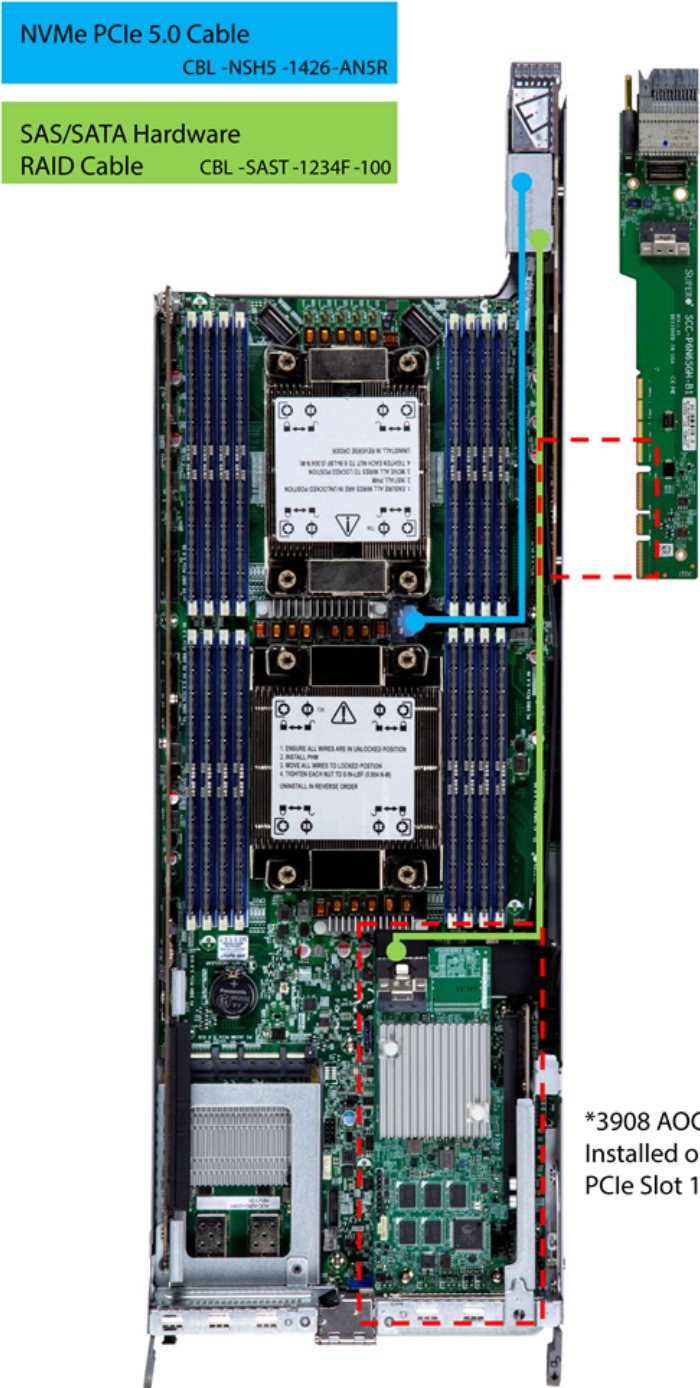


Figure 3-47. SYS-222BT-HNC9R Cable Routing Diagram

3.14 Power Supply

The SYS-222BT-H Series system includes two hot-plug power supply modules. These modules will automatically sense and operate at an input voltage between 100–240 V. Note that different input voltages will result in different maximum power output levels.

Important: Power supply redundancy is supported only with 240 VAC or 240 VDC input.

In the event of a power module failure, the other power module will continue to power the system on its own. Failed power supply modules can be replaced without powering down the system. Replacement modules can be ordered directly from Supermicro.

Power Supply Indicators		
Power Supply Condition	Green LED	Amber LED
No AC Power to Power Supply	OFF	OFF
Power Supply critical events causing a shutdown/failure/OCP/OVP/Fan Fail/OTP/UVP	OFF	Amber LED
Power Supply Warning Events Where the power supply continues to operate; High temperature; Over voltage; under voltage, etc.	OFF	1 Hz Blink Amber
AC present only 12 VSB ON (PS OFF)	1 Hz Blink Green	OFF
Output ON and OK	Green	OFF
AC cord unplugged and in redundant mode	OFF	Amber

Replacing the Power Supply

1. Unplug the AC power cord from the failed power supply module.
2. Push and hold the release tab on the back of the power supply.
3. Grasp the handle of the power supply and pull it out of its bay.
4. Push the new power supply module into the power bay until it clicks into the locked position.
5. Plug the AC power cord back into the power supply module.

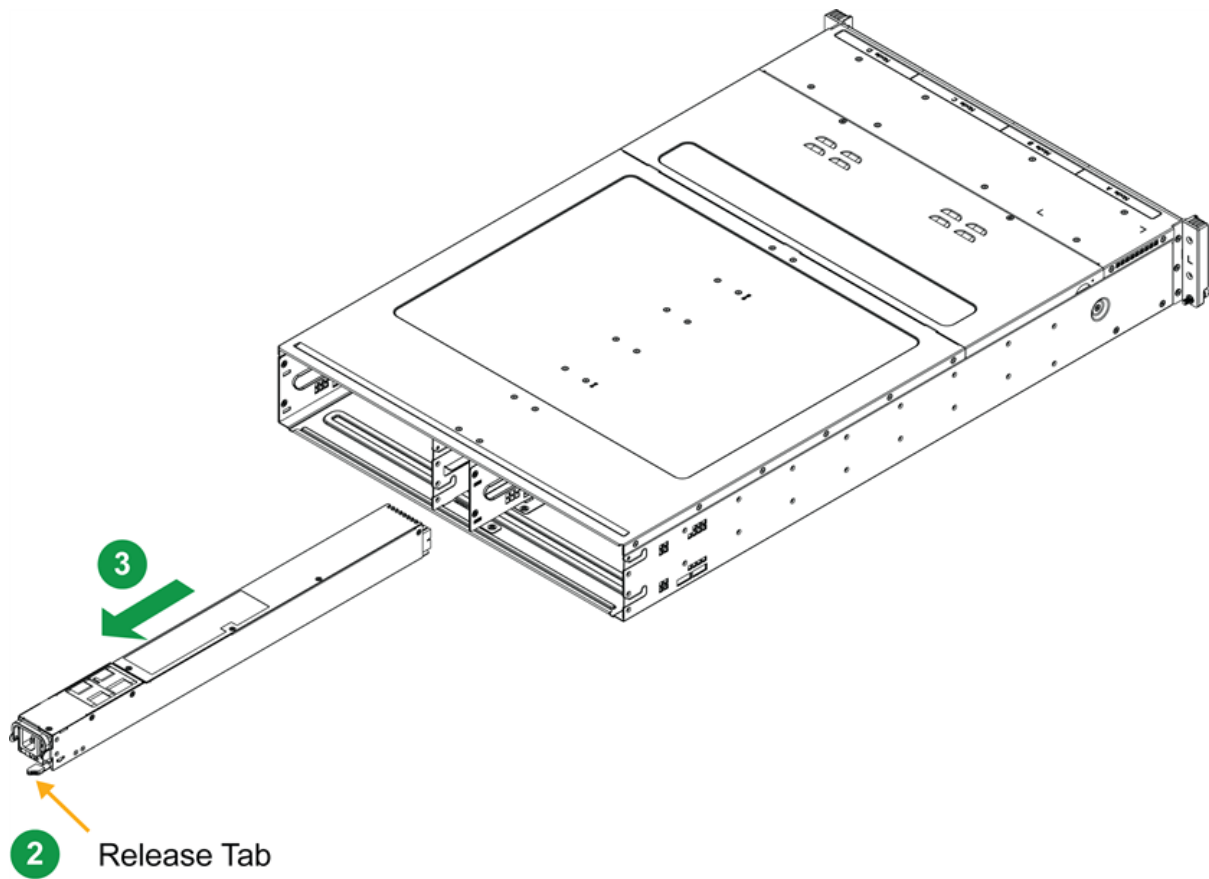


Figure 3-48. Removing a Power Supply Module

Chapter 4:

Motherboard Connections, Jumpers, and LEDs

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in the [Introduction](#). More detail can be found in the X14DBT-B motherboard manual.

Review the ["Standardized Warning Statements for AC Systems"](#) on page 148 before installing or removing components.

4.1 Power Connections	87
4.2 Headers and Connections	88
Fan Header	88
TPM/Port 80 Header	88
NC-SI Connection	88
VROC RAID Key Header	89
Liquid Cooling Leakage Sensor Headers	89
4.3 Control Panel	91
Fail LED (Information LED for OH/FF/PF)	91
FP USB Power	91
HDD LED	92
LAN1/LAN2 (NIC1/NIC2) LED	92
NIC1/NIC2 (LAN1/LAN2)	93
NMI Button	93
Overheat/Fan Fail and UID LED	93
Power Button	94
Power Fail LED	94
Power Fail LED Indicators	95
Power LED	95
Power On and BMC/BIOS Status LED Button	95
Reset Button	96
Root of Trust (RoT) Power LED	96

Standby Power	96
Standby Power LED	97
UID LED	97
4.4 Jumper Settings	98
BMC Dedicated LAN	98
VGA Port	98
Unit Identifier Button	99
COM Port	99
Universal Serial Bus (USB) 3.2 Ports	100
4.5 Jumper Settings	101
CMOS Clear	101
Cooling Fan Select Jumper	102
4.6 LED Indicators	103
BMC LAN LEDs	103
BMC Heartbeat LED	103
Unit ID (UID) LED	103

4.1 Power Connections

Four power connectors (JPWR1–JPWR4) are on front side of the motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

4.2 Headers and Connections

For information about the headers of the SYS-222BT-H Series system, refer to the following content.

Fan Header

A fan header, located at FAN3 on the motherboard, is used for a system cooling fan. Fan speed control for this fan is supported by thermal management via BMC 2.0 interface.

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

TPM/Port 80 Header

The JTPM1 header on the X14DBT-B motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in storage drives. It allows the motherboard to deny access if the TPM associated with the storage drive is not installed in the system. Information on the TPM is available at the following page:

https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H_X12_H12.pdf

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

Trusted Platform Module Header			
Pin Definitions: 10 Total			
Pin#	Definition	Pin#	Definition
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	Ground
7	SPI_MOSI	8	No Connection
9	+1.8 V Standby	10	SPI_IRQ#

NC-SI Connection

The Network Controller Sideband Interface (NC-SI) connection is located at JNCSI1 on the X14DBT-B motherboard. This connection is used to connect a Network Interface Card (NIC) to the motherboard to allow the onboard Baseboard Management Controller (BMC) to communicate with a network.


Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on the web page under the link: <https://www.supermicro.com/support/manuals>.

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

VROC RAID Key Header

A VROC RAID Key header is located at JRK1 on the X14DBT-B motherboard. Install a VROC RAID key on JRK1 for NVMe RAID support as shown in the illustration below.

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

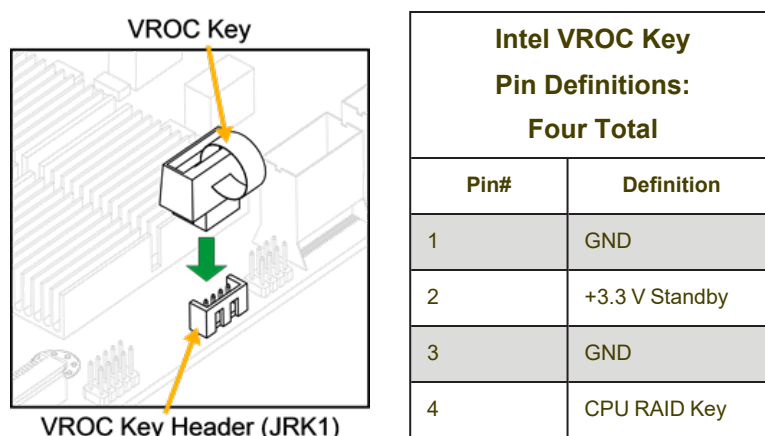

Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

Note: For detailed instructions on how to configure VROC RAID settings, refer to the VROC RAID Configuration User's Guide posted on the web page under the following link: <https://www.supermicro.com/support/manuals>.

Liquid Cooling Leakage Sensor Headers

Liquid cooling leakage sensor headers are located at J35 and J36 on the X14DBT-B motherboard. This header is reserved for liquid cooling support in systems. Liquid cooling leakage sensor headers are used to detect leakage of the coolant used in your liquid cooling system.

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

4.3 Control Panel

Refer to the following content for information about the front control panel header on the X14DBT-B motherboard.

Fail LED (Information LED for OH/FF/PF)

The Fail LED (Information LED for OH/Fan Fail/PWR Fail) connection, located on pin 4 of JFP1, provides warnings of overheating, power failure, or fan failure for the system.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Fail LED (Information LED) (OH/Fan Fail/PWR Fail)	
LED States	
Status	Description
Solid red (on)	An overheat condition has occurred.
Blinking red (1 Hz)	Fan failure: check for an inoperative fan.
Blinking red (0.25 Hz)	Power failure: check for a non-operational power supply.
Blinking red (10 Hz) (FP red LED)	CPLD recovery mode error(s).
Solid blue	UID has been activated locally. Use this function to locate a unit in the system that might be in need of service.
Blinking blue (1 Hz)	Local UID has been activated locally on. Use this function to identify a unit that might be in need of service.
BIOS/BMC blinking blue (10 Hz)	BIOS/BMC: recovery and/or update in progress.
Red Info LED blinking (10 Hz) and MB UID LED blue blinking (10 Hz)	CPLD: recovery and/or update in progress.

FP USB Power

Front panel USB power connections, located on pins 16–18 of JFP1, provide power to front USB devices.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

FP USB PWR	
Pin Definitions: Three Total	
Pin#	Definition
16	+5 V USB PWR
17	
18	

HDD LED

The HDD LED connection is located on pins 13 and 14 of JF1 on the X14DBT-B motherboard.. Attach a cable to pin 14 to show storage drive activity status.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

HDD LED	
Pin Definitions (JF1)	
Pin#	Definition
13	+3.3 V Standby
14	HDD Activity

LAN1/LAN2 (NIC1/NIC2) LED

The Network Interface Controller (NIC) LED connection for LAN Port 1 is located on pin 6 of JFP1 on the X14DBT-B motherboard, and LAN Port 2 is on pin 5.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

LAN1/LAN2 LED	
LED States	
Color	State
NIC 2: Blinking green	LAN 2: Active
NIC 1: Blinking green	LAN 1: Active

NIC1/NIC2 (LAN1/LAN2)

The Network Interface Controller (NIC) LED connection for LAN port 1 is located on pins 11 and 12 of JF1 on the X14DBT-B motherboard, and LAN port 2 is on pins 9 and 10. Attach the NIC LED cables here to display network activity.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

LAN1/LAN2 LED	
Pin Definitions (JF1)	
Pin#	Definition
9	VCC
10	NIC2 Link/Active LED
11	VCC
12	NIC1 Link/Active LED

NMI Button

The non-maskable interrupt (NMI) button header is located on pins 19 and 20 of JF1 on the X14DBT-B motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

NMI Button	
Pin Definitions (JF1)	
Pin#	Definition
19	Control
20	GND

Overheat/Fan Fail and UID LED

Connect an LED cable to pins 7 and 8 of the Front Control Panel to use the Overheat/Fan Fail LED connections. The LED on pin 8 provides warnings of overheat or fan failure.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

OH/Fan Fail Indicator Status Pin Definitions (JF1)		OH/Fan Fail/UID LED Pin Definitions (JF1)	
State	Definition	Pin#	Definition
Off	Normal	7	UID LED (Blue)
On	Overheat	8	OH/FAN Fail LED
Flashing	Fan Fail		

Power Button

The Power Button connection is located on pins 1 and 2 of JF1 on the X14DBT-B motherboard. Momentarily contacting both pins will power on/off the system. This button can also be configured to function as a suspend button (with a setting in the BIOS). To turn off the power when the system is in suspend mode, press the button for four seconds or longer.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Power Button Pin Definitions (JF1)	
Pin#	Definition
1	Signal
2	GND

Power Fail LED

The Power Fail LED connection is located on pins 5 and 6 of JF1 on the X14DBT-B motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Power Fail LED Pin Definitions (JF1)	
Pin#	Definition
5	+3.3 V
6	PWR Supply Fail

Power Fail LED Indicators

Power Failure LED Indicators are located on pins 15 and 19 of JFP1 on the X14DBT-B motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

FP Power LED	
Pin Definitions (JFP1)	
Pin#	Definition
15	PWR Failure LED-Positive
19	PWR Failure LED-Negative

Power LED

The Power LED connection is located on pins 15 and 16 of JF1 on the X14DBT-B motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Power LED	
Pin Definitions (JF1)	
Pin#	Definition
15	+3.3 V
16	PWR LED

Power On and BMC/BIOS Status LED Button

The Power On and BMC/BIOS Status LED button is located on pin 1 of the front control panel header located at JFP1 on the X14DBT-B motherboard. Momentarily contacting pin 1 of JFP1 will power on/off the system or display BMC/BIOS status.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Power Button	
BMC/BIOS Status LED Indicator	
Status	Event
Green: Solid on	System power on

Power Button	
BMC/BIOS Status LED Indicator	
Status	Event
BMC/BIOS blinking green at 4 Hz	BMC/BIOS checking
BIOS blinking green at 4 Hz	BIOS recovery/update in progress
BMC blinking red x2 (two blinks red) at 4 Hz, one pause at 2 Hz (on-on-off-off)	BMC recovery/update in progress
BMC/BIOS blinking green at 1 Hz	Flash not detected or golden image checking failure

Reset Button

The Reset Button connection is located on pins 3 and 4 of JF1 on the X14DBT-B motherboard. Attach it to a hardware reset switch on the computer case to reset the system.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Reset Button	
Pin Definitions (JF1)	
Pin#	Definition
3	Reset
4	GND

Root of Trust (RoT) Power LED

The Power LED for the Root of Trust (RoT) connection is located on pin 9 of JFP1 on the X14DBT-B motherboard. If this LED is on, power for the RoT chip is on.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Standby Power

A Standby Power (I²C) connection is located on pins 10–14 of JFP1 on the X14DBT-B motherboard to provide power to the system when it is in standby mode.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

+3.3 V Standby Power	
Pin Definitions: Five Total	
Pin#	Definition
10	+3.3 Standby
11	Ground
12	I ² C Data
13	I ² C Clock
14	Ground

Standby Power LED

The LED indicator for standby power is located on pin 8 of JFP1 on the X14DBT-B motherboard. If this LED is on, standby power is on.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

UID LED

The unit identifier LED connection is located on pin 3 of JFP1 on the X14DBT-B motherboard.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

4.4 Jumper Settings

For information about the rear I/O connectors and ports of the SYS-222BT-H Series system, refer to the following content.



Figure 4-1. X14DBT-B I/O Ports

I/O Ports	
#	Description
1	JAIOM
2	JVGA1
3	JUSB1 (USB0)
4	JUSB1 (USB1)
5	IPMI_LAN
6	UID

BMC Dedicated LAN

A BMC dedicated LAN (IPMI_LAN) supports Ethernet connections via an RJ45 cable. For LAN LED information, see ["LED Indicators" on page 103](#).

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

VGA Port

A video (VGA) port is located on the I/O ports of the motherboard. The VGA port provides analog interface support between the computer and the video displays.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Unit Identifier Button

A Unit Identifier (UID) button and two LED Indicators are located on the motherboard. The UID button is located near the I/O ports of the X14DBT-B motherboard.

Note: After pushing and holding the UID button for 12 seconds, all BMC settings including username and password will revert back to the factory default. Only the network settings and FRU are retained.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

Function	User Input	Behavior	LED Activity
UID LED Indicator	Push Once Push Again	Turns on the UID LED Turns off the UID LED	UID LED turns solid blue UID LED turns off
BMC Reset	Push and hold for 6 seconds Push and hold for 12 seconds	BMC will do a cold boot BMC will reset to factory default	BMC Heartbeat LED turns solid green BMC Heartbeat LED turns solid green

UID Button Pin Definitions: Four Total		UID LED Pin Definitions: Four Total	
Pin#	Definition	Color	Status
1	Button In	1	Button In
2	GND	2	GND
G1	GND	G1	GND
G2	GND	G2	GND

COM Port

There is one COM port (COM1) on the I/O ports of the motherboard. The COM port provides serial communication support.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

COM Port			
Pin Definitions: 11 Total			
Pin#	Definition	Pin#	Definition
1	SP_DCD0	6	SP_DSR0
2	SP_RXD0	7	SP_RTS0
3	SP_TXD0	8	SP_CTS0
4	SP_DTR0	9	SP_RI0
5	GND	10	GND
		11	GND

Universal Serial Bus (USB) 3.2 Ports

Two USB 3.2 ports (USB 0/1) are located at JUSB1 on the X14DBT-B motherboard.

USB0/1 (USB 3.2 Gen 2) Port			
Pin Definitions: 18 Total			
Pin#	Definitions	Pin#	Definitions
1	VBUS	10	VBUS
2	D-	11	D-
3	D+	12	D+
4	GND	13	GND
5	STDA_SSRX-	14	STDA_SSRX-
6	STDA_SSRX+	15	STDA_SSRX+
7	GND	16	GND
8	STDA_SSTX-	17	STDA_SSTX-
9	STDA_SSTX+	18	STDA_SSTX+

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference"](#) on page 25.

4.5 Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

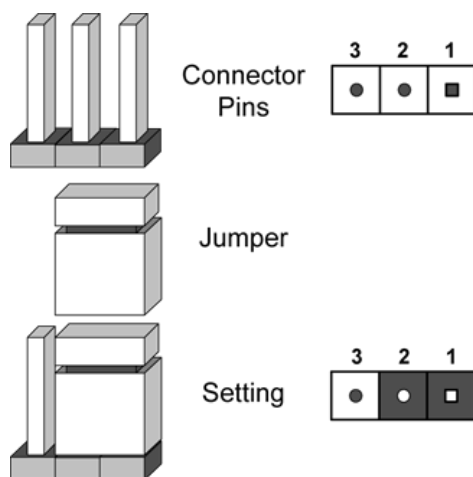


Figure 4-2. Jumping Connector Pins

CMOS Clear

JBT1 on the X14DBT-B motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).



JBT1 contact pads

1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.

4. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

Note: Clearing CMOS will also clear all passwords.

5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

Cooling Fan Select Jumper

A Cooling Fan Select is located at JLC1 on the X14DBT-B motherboard. Select pins 1–2 to use air cooling for your system (default).

For a detailed diagram of the X14DBT-B motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 25.

Cooling Fan Select Jumper (JLC1)	
Jumper Settings	
Jumper Settings	Status
Pin 1-2	Air-Cooling (Default)
Pin 2-3	Liquid Cooling

4.6 LED Indicators


For information about the LED indicators on the SYS-222BT-H Series system, refer to the following content.

BMC LAN LEDs

The dedicated BMC LAN connection on the X14DBT-B motherboard features two LEDs. The LED on the right indicates activity, and the LED on the left indicates the speed of the connection.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

BMC LAN LEDs		
	Color/State	Definition
Link (left)	Green: Solid	100 Mbps
	Amber: Solid	1 Gbps
Activity (right)	Amber: Blinking	Active

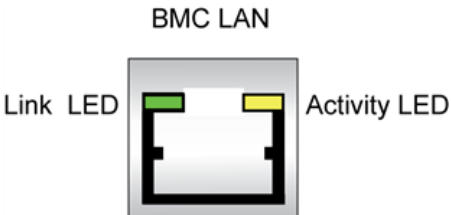

BMC Heartbeat LED

A BMC Heartbeat LED is located on the X14DBT-B motherboard. When this LED is blinking, the BMC is functioning normally.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

BMC Heartbeat LED Indicator	
LED Color	Definition
Green: Blinking	BMC Normal

Unit ID (UID) LED

The UID LED indicator is located on the X14DBT-B motherboard. This UID indicator provides easy identification of a system that may need to be serviced.

For a detailed diagram of the X14DBT-B motherboard, see the layout under ["Motherboard Quick Reference" on page 25](#).

UID LED	
LED Indicator	
LED Color	Definitions
Blue: On	System Identified

Chapter 5:

Software

After the SYS-222BT-H Series system has been installed, you can install the Operating System (OS), configure RAID settings and install the drivers.

5.1 Microsoft Windows OS Installation	106
Installing the OS	106
5.2 Driver Installation	108
5.3 BMC	109
BMC ADMIN User Password	109

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at <https://www.supermicro.com/support/manuals>.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

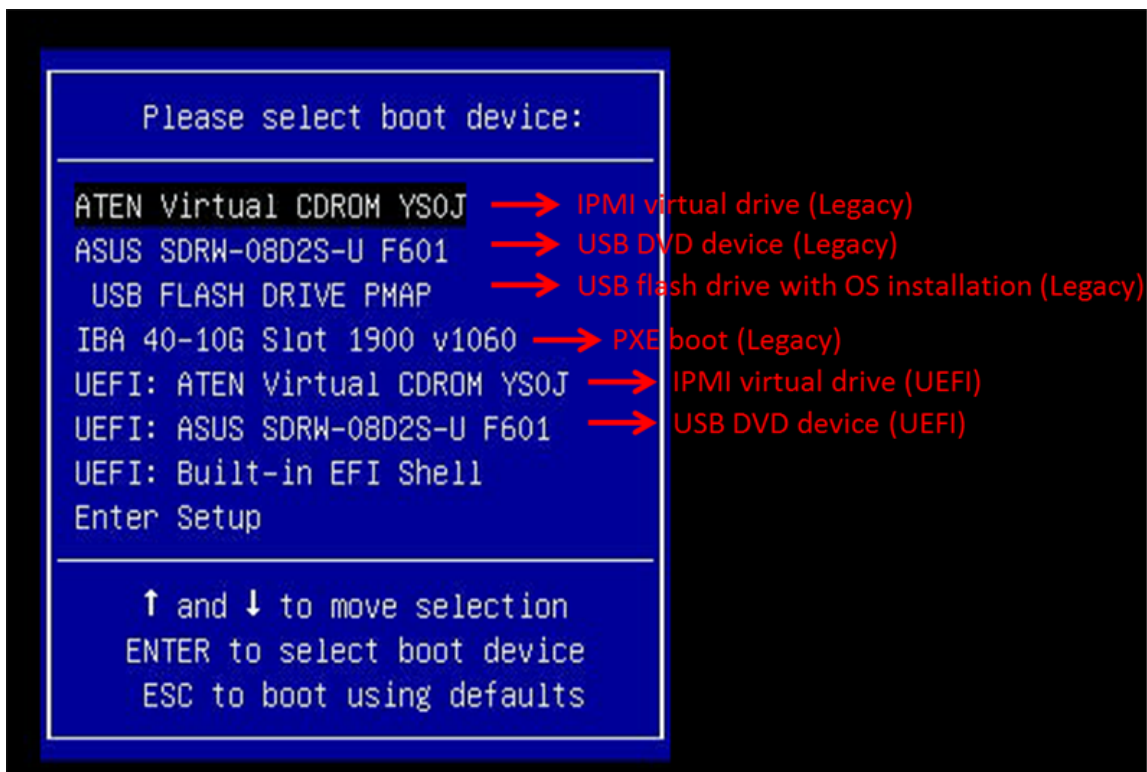


Figure 5-1. Selecting the Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the "Load driver" link at the bottom left corner.

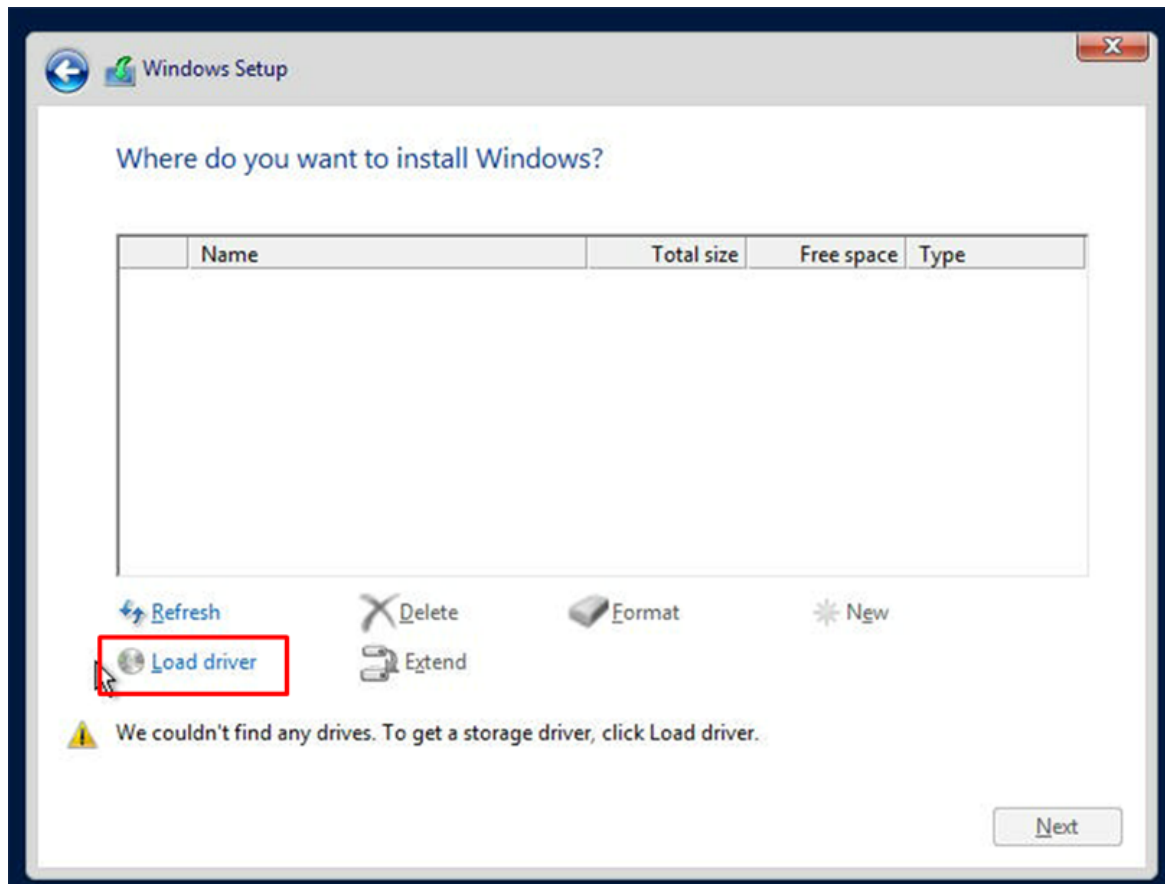


Figure 5-2. Loading the Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

<https://www.supermicro.com/wdl>.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at <https://www.supermicro.com>. Find the product page for your motherboard and download the latest drivers and utilities. Insert the flash drive or disk, and the screenshot shown below should appear.

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. After installing each item, you must reboot the system before moving on to the next item on the list. The bottom icon with a CD on it allows you to view the entire contents.

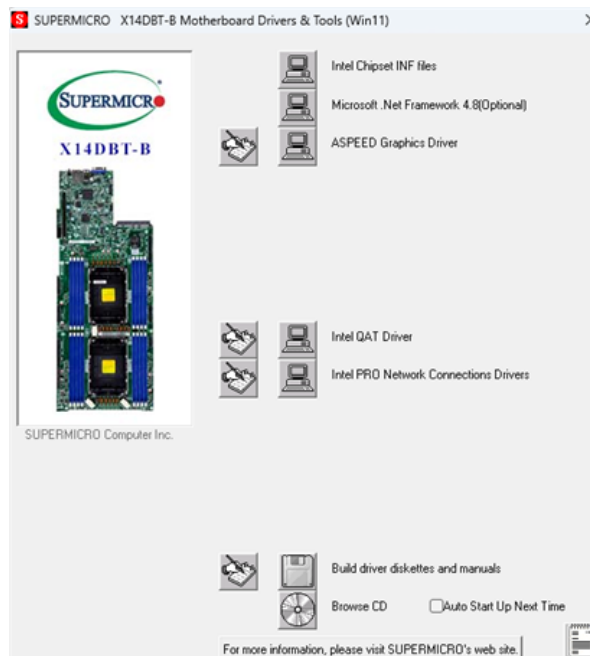


Figure 5-3. Drivers & Tools Screenshot

5.3 BMC

The X14DBT-B motherboard provides remote access, monitoring, and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at the following page:

<https://www.supermicro.com/en/solutions/management-software/bmc-resources>

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. The password can be found on a sticker on the motherboard and a sticker on the chassis, for Supermicro chassis. The sticker also displays the BMC MAC address. If necessary, the password can be reset using the Supermicro IPMICFG tool.



Figure 5-4. BMC Password Label

Chapter 6:

Optional Components

This chapter describes alternate configurations and optional system components for the SYS-222BT-H Series system.

6.1 TPM Security Module	111
6.2 Cable Management Arm	112
Installing the Cable Management Arm	112
Removing the Cable Management Arm	113
6.3 Intel Virtual RAID on CPU (VROC)	114
Requirements and Restrictions	114
Additional Information	114
Hardware Key	115
Configuring Intel VMD	115
Creating NVMe RAID Configurations	119

6.1 TPM Security Module

This is an SPI-capable TPM 2.0 with Infineon 9672 controller.

The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in hard drives. It enables the X14DBT-B motherboard to deny access if the TPM associated with the hard drive is not installed in the SYS-222BT-H Series system.

For details and installation procedures, refer to the following page:

<https://www.supermicro.com/en/products/accessories/addon/AOM-TPM-9672V.php>

- AOM-TPM-9672V (TCG 2.0)

6.2 Cable Management Arm

The SYS-222BT-H Series system supports a cable management arm (CMA), which keeps the rear cables organized and clear of the rail mechanisms when the system is extended out the front of the rack for maintenance.

The CMA attaches to the rack mounting rails using four connectors. They are labeled as connectors 1, 2, 3, and 4.

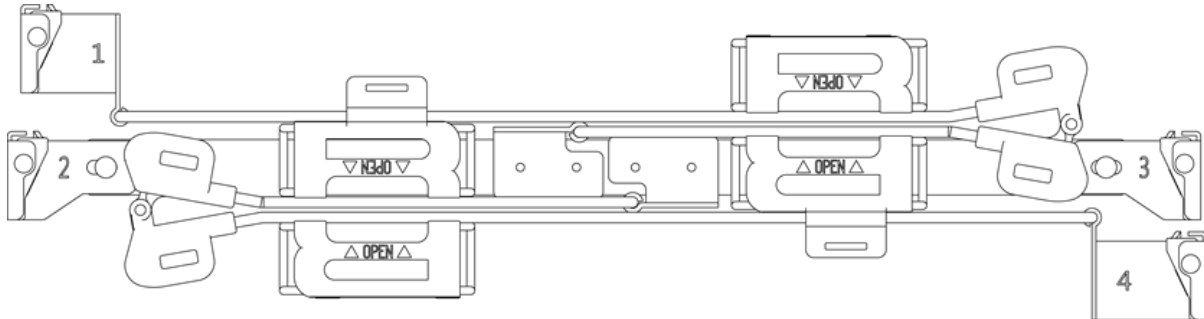


Figure 6-1. Cable Management Arm

Cable Arm Details		
Optional Part	Part Number	Description
Cable Arm	MCP-290-00168-0N	7.5" deep cable arm
Rail Set	MCP-290-11901-0N	41.2" rails (optimized for 1200-mm deep racks)

Installing the Cable Management Arm

1. Slide CMA connector #1 forward onto the two posts on the rear of the right inner rail (right side when viewed from the front). It snaps into place.
2. Slide CMA connector #2 forward onto the two posts on the rear of the right middle rail. It snaps into place.

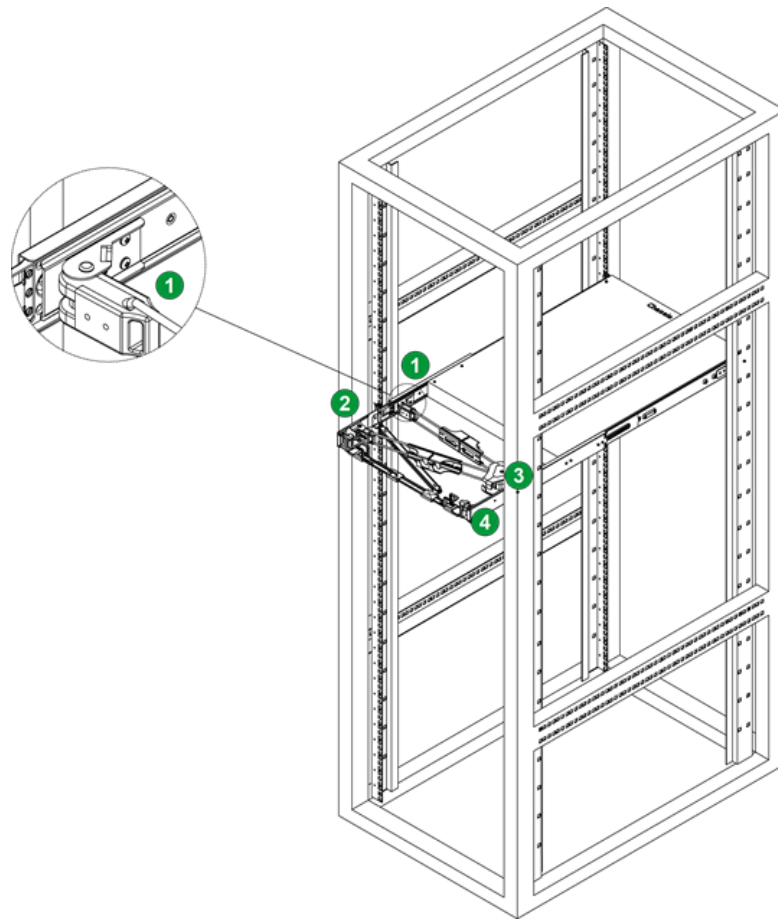


Figure 6-2. Installing the Connectors

3. Slide CMA connector #3 forward onto the two posts on the rear of the left middle rail. It snaps into place.
4. For CMA connector #4, align the metal tabs with the slots on the rear of the left outer rail and push it forward. It snaps into place.
5. Route the cables through the holding brackets, leaving enough slack.

Removing the Cable Management Arm

1. Remove cables from the CMA.
2. For CMA connector #4, pull the metal release tab toward the center of the rack and slide the connector toward the rear to release it.
3. For CMA connectors #3, #2, and #1, depress the front edge of the yellow plastic rocker lock and slide the connector toward the rear to release it.

6.3 Intel Virtual RAID on CPU (VROC)

Intel® Virtual RAID on CPU (Intel VROC) is an enterprise RAID solution for NVMe SSDs directly attached to Intel Xeon Scalable processors. Intel Volume Management Device (VMD) is an integrated controller inside the CPU PCIe root complex.

- A single processor supports up to 12 NVMe SSDs and up to 6 RAID arrays.
- A dual processor system supports up to 24 NVMe SSDs and 12 RAID arrays.

Stripe sizes are 4K, 8K, 16K, 32K, 64K, 128K.

Requirements and Restrictions

- *Intel VROC is only available when the system is configured for UEFI boot mode.*
- To enable the **mdadm** command and support for RSTe, install the patch from
 - Linux: <https://downloadcenter.intel.com/download/28158/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Linux->
 - Windows: <https://downloadcenter.intel.com/download/28108/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Windows->
- To enable Intel VROC, a hardware key must be inserted on the motherboard, and the appropriate processor's Virtual Management Devices must be enabled in the BIOS setup.
- It is possible to enable Intel VROC without a hardware key installed, but only RAID0 will be enabled.
- Intel VROC is not compatible with secure boot. This feature must be disabled.
- When creating bootable OS RAID1 devices, you must have both devices on the same CPU, and a VMD on that CPU.
- Spanning drives when creating RAID devices is not recommended due to performance issues, even though it is supported.

Additional Information

- Latest SSD and operating system information:
<https://www.intel.com/content/www/us/en/support/articles/000030310/memory-and-storage/ssd-software.html>

- Additional information for the Supermicro add-on card and linked manuals:
<https://www.supermicro.com/products/accessories/addon/AOC-VROCxxxMOD.cfm>

Hardware Key

The Intel VROC hardware key is a license key that detects the Intel VROC SKU and activates the function accordingly. The key must be plugged into the Supermicro motherboard (connector JRK1). The key options are:

Intel® VROC Keys			
VROC Package	Description	Part Number	Intel MM Number
Standard	RAID 0, 1, 10 Supports 3rd party SSDs	AOC-VROCSTNMOD	951605
Premium	RAID 0, 1, 5, 10 Supports 3rd party SSDs	AOC-VROCPREMOD	951606

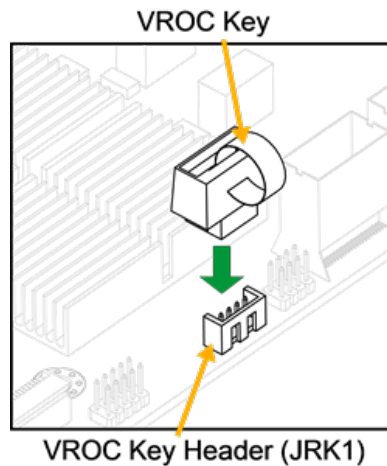


Figure 6-3. Intel VROC RAID Key and Motherboard Connector JRK1

Configuring Intel VMD

VMD must be enabled on PCIe ports which have NVMe drives attached to them in order for those drives to be added to a VROC RAID configuration. The default BIOS setting for the NVMe Mode Switch is Auto which automatically enables VMD on all installed NVMe drives.

NVMe Mode Switch:

- Auto: Enables VMD for all NVMe ports if VROC Key is installed.
- VMD: Enables VMD for all NVMe ports despite the lack of the VROC Key.
- Manual: Allows the user to select specific NVMe ports on which to enable VMD.

The NVMe Mode Switch can be viewed or selected at BIOS > Advanced > Chipset Configuration > North Bridge > IIO Configuration > Intel® VMD Technology.

Note: Without a VROC Key, there is no RAID support with the Auto switch. Only RAID 0 is supported with the VMD and Manual switches.

Configuring VMD Manually

The steps for manually configuring VMD on specific NVMe ports in UEFI BIOS are shown below. Example screenshots may differ from your server.

Important:

- If there is an existing RAID configuration, delete the RAID volume associated with the VMD controller before disabling the controller. Failure to do so may lead to unexpected behavior.
- The effects of physically changing or swapping a CPU on the VMD controller have not been thoroughly tested or documented.

1. Reboot the server and press [DEL] key to access the BIOS options.
2. Switch to Advanced > Chipset Configuration > North Bridge > IIO Configuration > Intel® VMD Technology.
3. Select VMD Mode Switch, then select Manual.

Note that Socket 0 contains CPU1; Socket 1 contains CPU2.

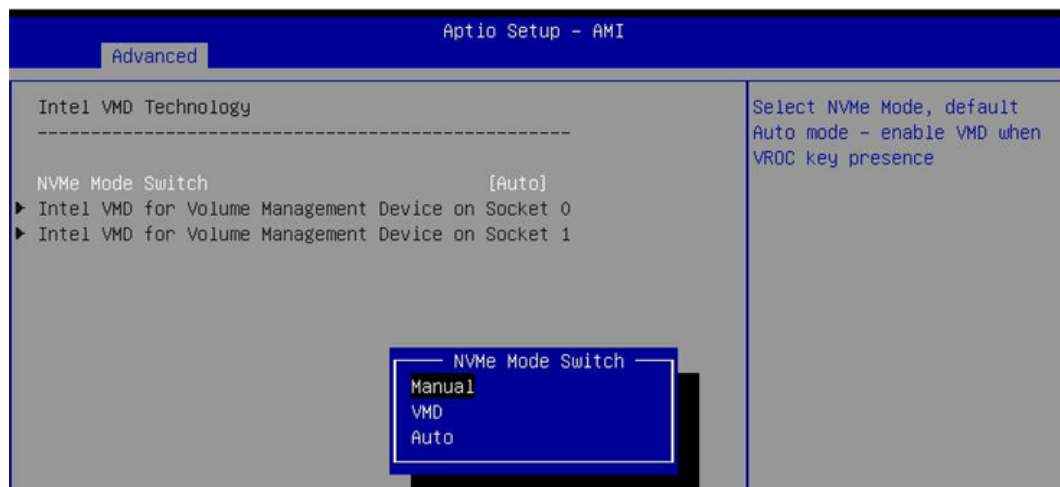


Figure 6-4. BIOS, Selecting VMD Mode

4. VMD must only be enabled on NVMe port resources. If VMD is enabled on other PCIe ports, the functionality of those ports will be impacted. See the table below.

Select “Intel VMD for Volume Management Device on” on Socket 0 (CPU1) or Socket 1 (CPU2) to enable VMD for devices under the respective CPU.

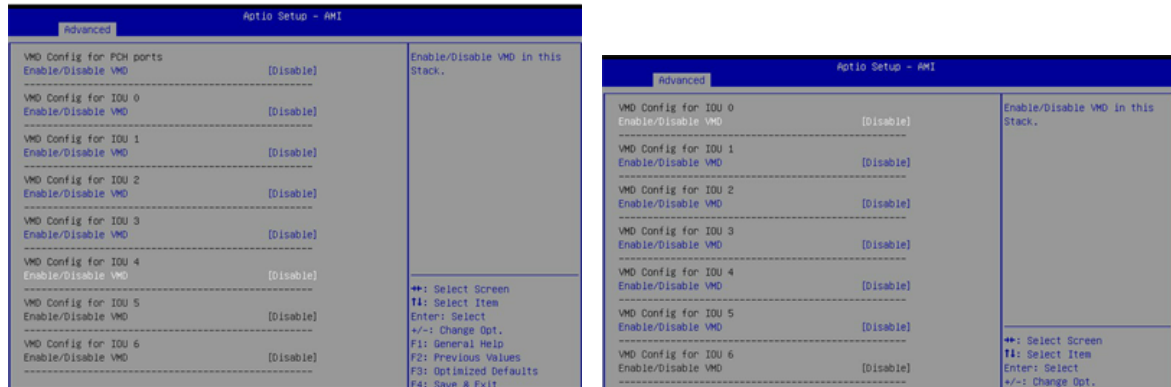


Figure 6-5. Intel VMD for Volume Management Device on Socket 0 and Socket 1

5. Choose Enable for “Enable/Disable VMD” for IOU 3 to list the available devices under IOU 3.

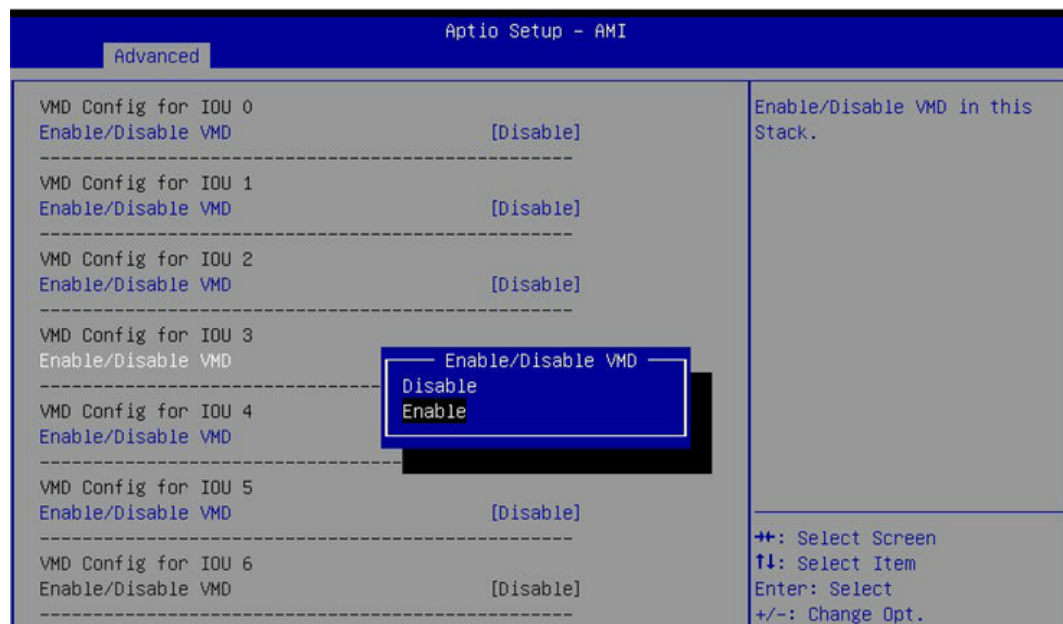


Figure 6-6. BIOS, Enabling VMD on Socket 1 (CPU2) (Example)

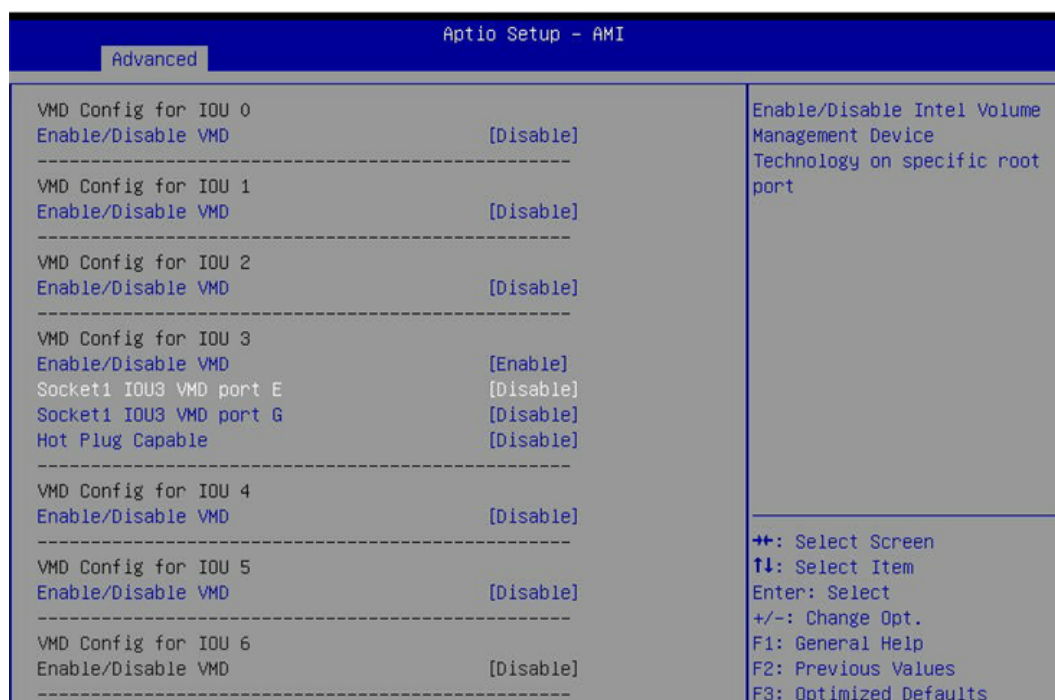


Figure 6-7. BIOS, Enabling VMD on Socket 1 (Example)

6. Enable the NVMe port resource according to table above for the NVMe drives that will be used in a RAID configuration.

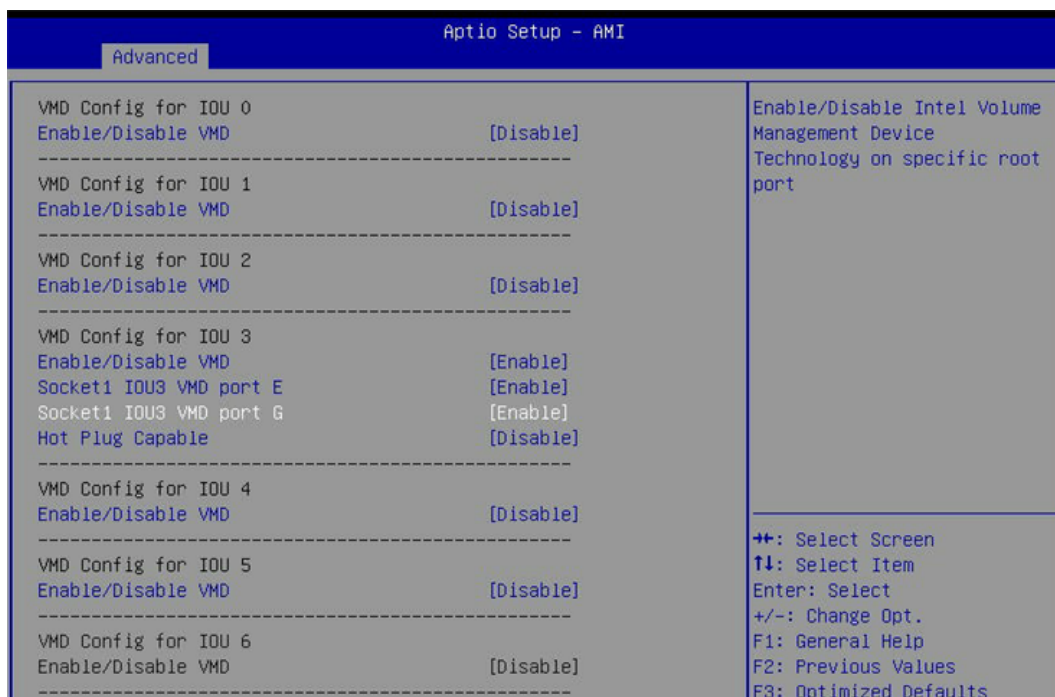


Figure 6-8. BIOS, Enabling Socket 1 (Example)

7. Choose whether to make the NVMe drives in this IOU Hot Plug Capable by selecting Enabled or Disabled.
8. Repeat steps 4 through 7 for each IOU # on each CPU to enable VMD on the desired NVMe ports.

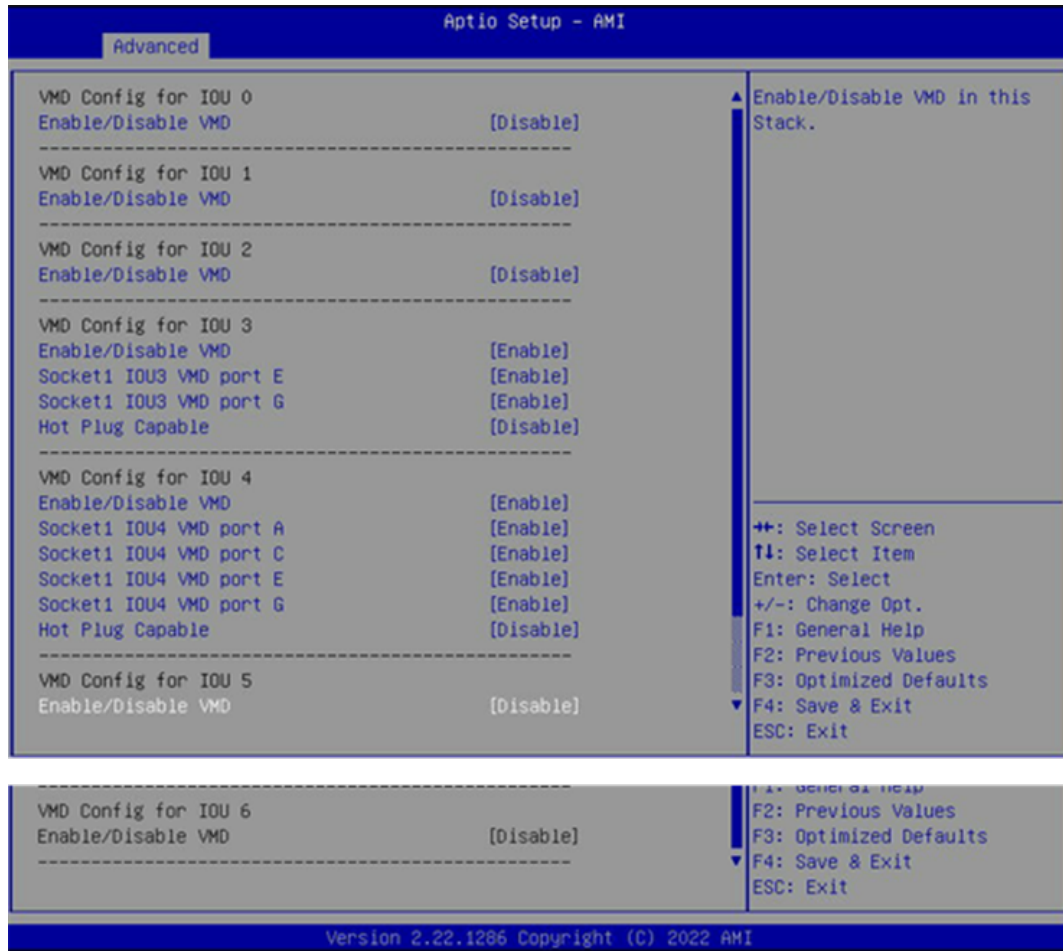


Figure 6-9. BIOS, Enabling Socket 1 Completed (Example)
 (This example shows SYS-621H-TN12R with 12 NVMe. Other systems will look different.)

9. Press [F4] to save the configuration and reboot the system.

Creating NVMe RAID Configurations

1. Open Advanced > Intel(R) Virtual RAID on CPU > All Intel VMD Controllers > Create RAID Volume.

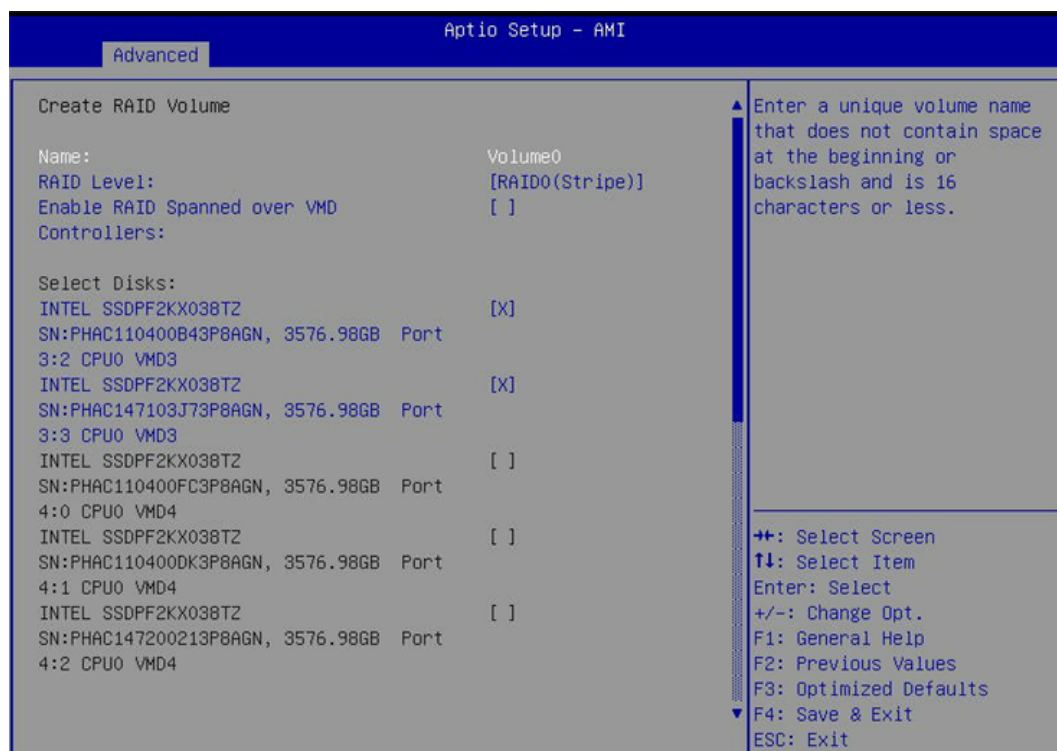


Figure 6-10. Creating Volume without enabling RAID spanned over VMD controller

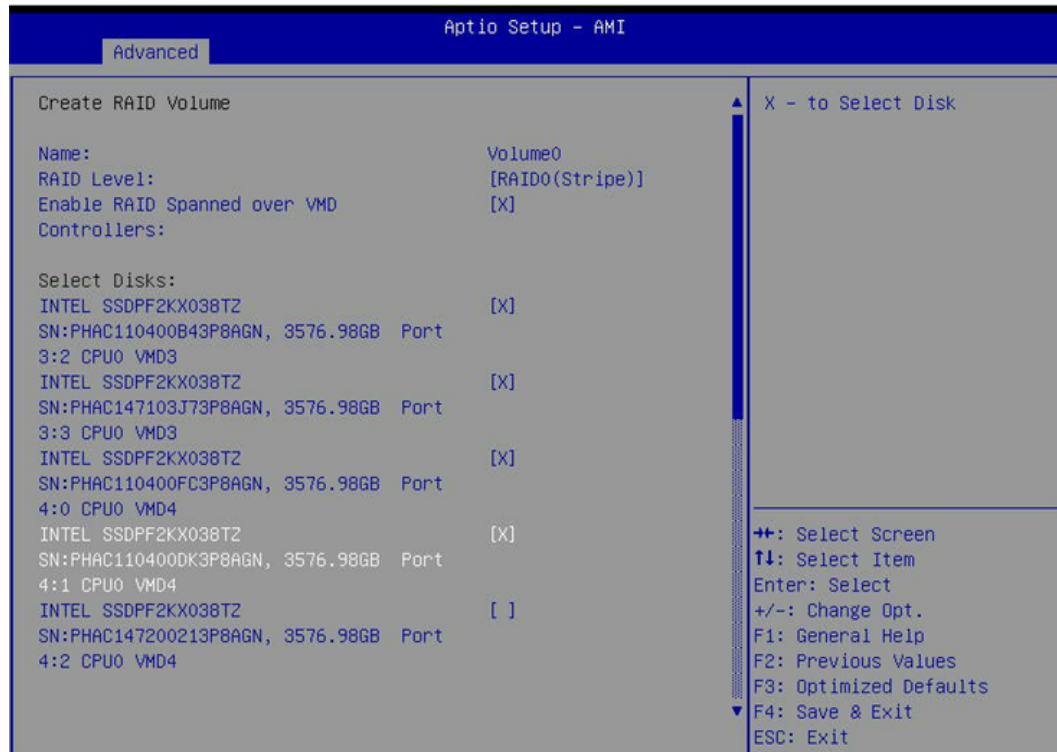


Figure 6-11. Creating Volume with enabling RAID spanned over VMD controller

2. Set Name.
3. Set RAID Level.
4. If cross-controller RAID is required, select Enable RAID spanned over VMD Controller.
5. Select specific disks for RAID with an [X].
 - RAID0: Select at least two [2–24] disks
 - RAID1: Select only two disks
 - RAID5: Select at least three [3–24] disks
 - RAID10: Select only four disks
6. Select Strip Size (Default 64 KB).
7. Select Create Volume.
8. If another RAID is needed, start again at step 1.

Status Indications

An LED indicator on the drive carrier shows the RAID status of the drive.

Drive Carrier Status LED Indicator	
Status	State (red)
Normal function	Off
Locating	4 Hz blinking
Fault	Solid on
Rebuilding	1 Hz blinking
IBPI SFF 8489 Defined Status LED States	

Hot-Swap Drives

Intel VMD enables hot-plug and hot-unplug for NVMe SSDs, whether from Intel or other manufacturers. Under vSphere ESXi, several steps are necessary to avoid potential stability issues. See the information at link [1] below.

Hot-Unplug

1. Prevent devices from being re-detected during rescan:


```
esxcli storage core claiming autoclaim --enabled=false
```
2. Unmount the VMFS volumes on the device. Check link [2] below for details.

3. Detach the device. Check link [3] below for details.
4. Physically remove the device.

Hot-Plug

- Physically install the device.

ESXi will automatically discover NVMe SSDs, but a manual scan may be required in some cases.

Related Information Links

1. <https://kb.vmware.com/s/article/2151404>
2. <https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-1B56EF97-F60E-4F21-82A7-8F2A7294604D.html>
3. <https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-F2E75F67-740B-4406-9F0C-A2D99A698F2A.html>

Chapter 7:

Troubleshooting and Support

The following content contains information on common issues and how to resolve them.

7.1 Online Resources	124
Direct Links for the SYS-222BT-H Series System	124
Direct Links for General Support and Information	124
7.2 Baseboard Management Controller (BMC)	125
7.3 Troubleshooting Procedures	126
Before Power On	126
No Power	126
No Video	126
System Boot Failure	126
Memory Errors	127
Losing the System's Setup Configuration	127
If the System Becomes Unstable	127
7.4 CMOS Clear	129
7.5 Motherboard Battery	130
7.6 Where to Get Replacement Components	131
7.7 Technical Support Procedures	132
Returning Merchandise for Service	132
7.8 Feedback	134

7.1 Online Resources

A great deal of information is available on the Supermicro website. From the top menu of the Supermicro home page at <https://www.supermicro.com>:

- Specifications for servers and other hardware are available by clicking **Products**.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the SYS-222BT-H Series System

- [SYS-222BT-HNR](#), [SYS-222BT-HNC8R](#), and [SYS-222BT-HNC9R](#) system specifications pages
- [X14DBT-B](#) motherboard page for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

Direct Links for General Support and Information

- General Memory Configuration Guide for X14 and B14 motherboards that use Intel® Xeon® 6700-Series Processors with E-cores and P-cores:
https://www.supermicro.com/support/resources/memory/X14_B14_memory_config_guide_SP.pdf
- Frequently Asked Questions: <https://www.supermicro.com/FAQ/index.php>
- TPM User Guide: https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H.pdf
- BMC User Guide: https://www.supermicro.com/manuals/other/BMC_IPMI_X14_H14.pdf
- Product Resources page for validated memory details:
<https://www.supermicro.com/support/resources/mem.cfm>
- Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, and more:
<https://www.supermicro.com/en/support/product-matrices>
- Security Center for recent security notices:
https://www.supermicro.com/en/support/security_center
- Supermicro Phone and Addresses: <https://www.supermicro.com/en/about/contact>

7.2 Baseboard Management Controller (BMC)

The SYS-222BT-H Series system supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring, and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, visit our website at the following page:

<https://www.supermicro.com/en/solutions/management-software/bmc-resources>

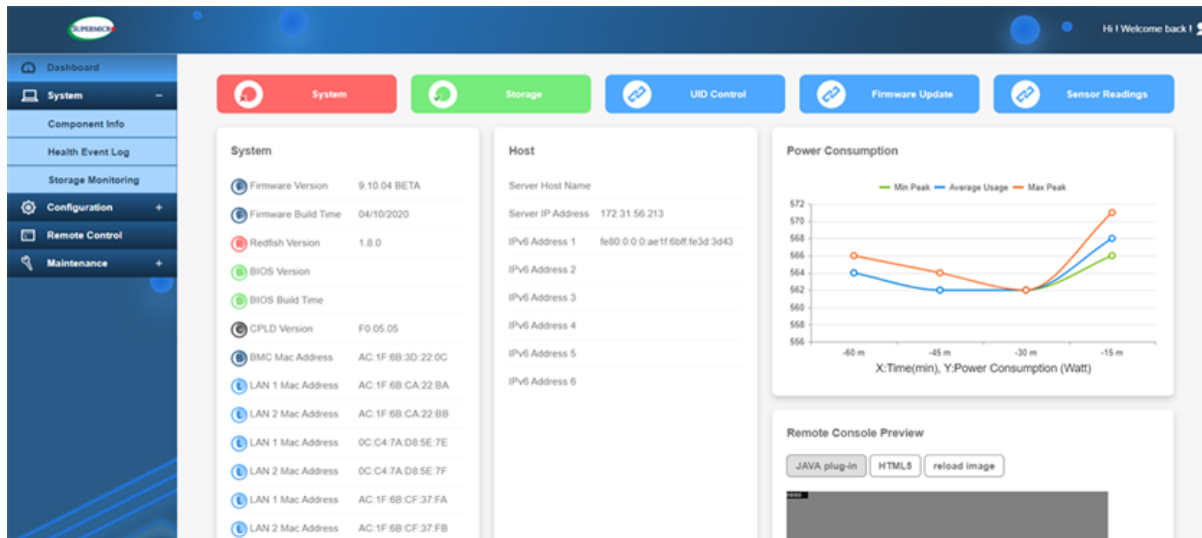


Figure 7-1. BMC Dashboard

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the ["Technical Support Procedures" on page 132](#) section in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Remove all components from the motherboard, especially the DIMMs. Power on the system and check if the power-on LED and the BMC Heartbeat LED are on, and system fans are spinning.

2. Turn on the system with only one DIMM installed. If the system boots, check for bad DIMMs or slots by following the Memory Errors Troubleshooting procedure in this chapter.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See [Maintenance and Component Installation](#) for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to [Introduction](#) for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at <https://www.supermicro.com>. Test the modules using memtest86 or a similar utility.

Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the processor and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a CD/Media drive.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 CMOS Clear

JBT1 on the X14DBT-B motherboard is used to clear CMOS, which will also clear any passwords. For information on clearing CMOS, refer to ["CMOS Clear" on page 101](#) earlier in this manual.

7.5 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to ["Motherboard Battery Removal and Installation" on page 61](#).

7.6 Where to Get Replacement Components

If you need replacement parts for your SYS-222BT-H Series system, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

<https://www.supermicro.com>

Under the "Buy" menu, click the "Where to Buy" link.

7.7 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to "Troubleshooting Procedures" on page 126 or see the FAQs on our website (<https://www.supermicro.com/FAQ/index.php>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
 - Motherboard model and PCB revision number
 - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
 - System configuration
4. An example of a Technical Support form is on our website at <https://webpr3.supermicro.com/SupportPortal>.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to "Contacting Supermicro" on page 11.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the system to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

<https://www.supermicro.com/RmaForm>

Whenever possible, repack the system in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the system securely, using packaging material to surround the system so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

7.8 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 8:

UEFI BIOS

The following content contains information on BIOS configuration with the SYS-222BT-H Series system.

8.1 Introduction	136
Updating BIOS	136
Starting the Setup Utility	136
8.2 Main Setup	138
8.3 BMC	140
8.4 Security	141
8.5 Boot	143
8.6 Save & Exit	145

8.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh), the BMC WebUI, or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

Unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell and type "flash.nsh <BIOS filename><BMC Username><BMC Password>" to start the BIOS update. The flash script will invoke the SCC (EFI) tool automatically to perform the BIOS update, beginning with uploading the BIOS image to BMC. After uploading the firmware, the system will reboot to continue the process. The BMC will take over and continue the BIOS update in the background. The process will take 3–5 minutes.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. "Grayed-out" options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in **Bold** are the default values.

A "►" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

8.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

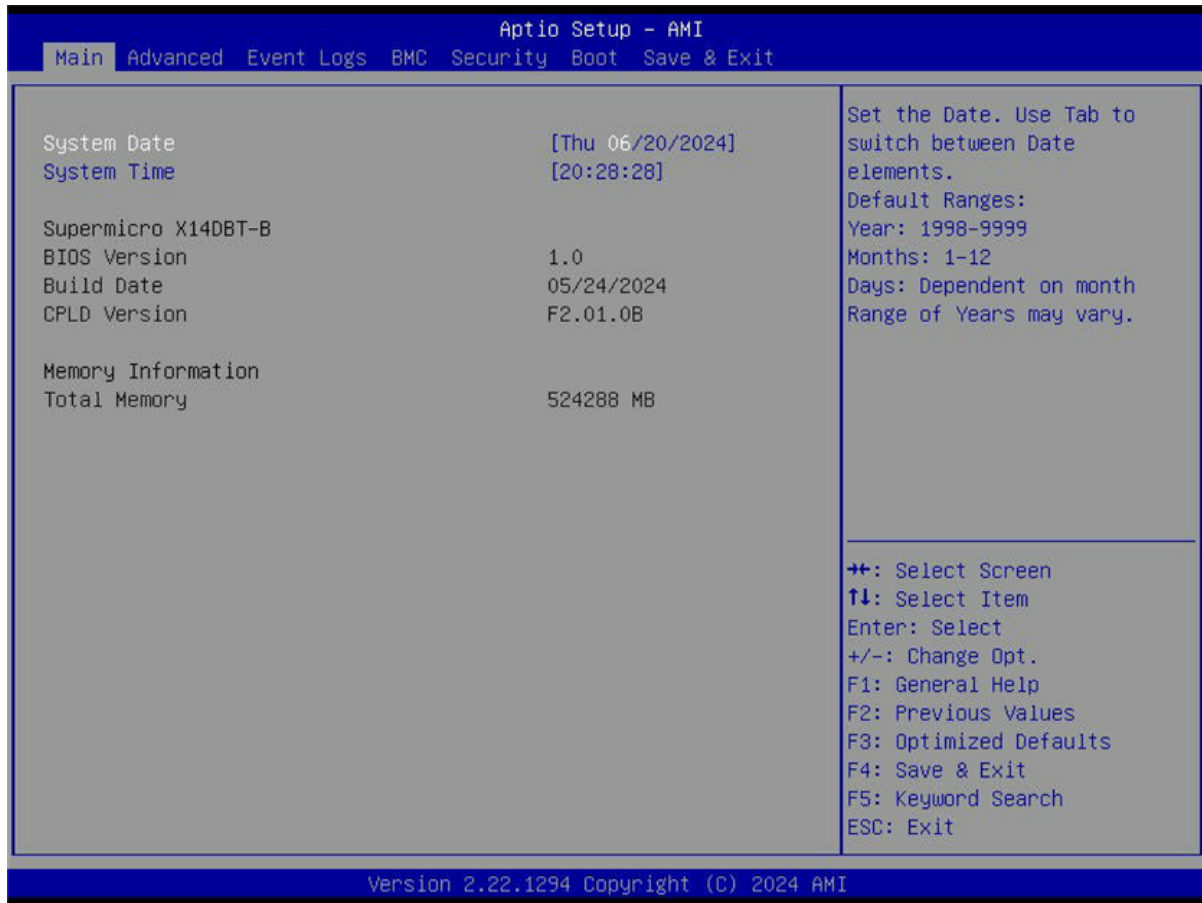


Figure 8-1. Main Setup Page

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro X14DBT-B

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

CPLD Version

This feature displays the version of the Complex-Programmable Logical Device (CPLD) used in the system.

Memory Information**Total Memory**

This feature displays the total size of memory available in the system.

8.3 BMC

Use this menu to configure Baseboard Management Console (BMC) settings.



Figure 8-2. BMC Setup Page

BMC Firmware Revision

This feature indicates the BMC firmware revision used in this system.

BMC STATUS

This feature indicates the status of the BMC firmware installed in this system.

8.4 Security

This menu allows you to configure the following security settings for the system.

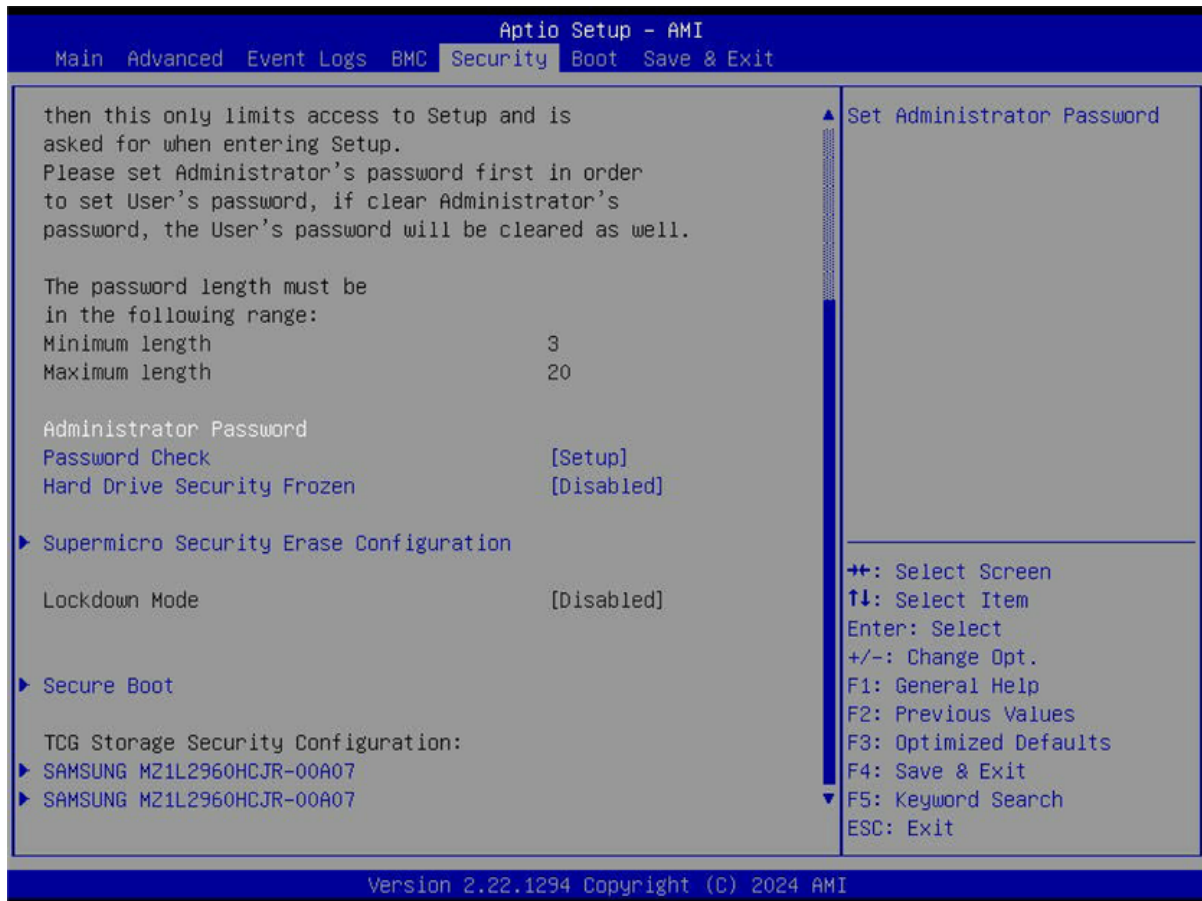


Figure 8-3. Security Setup Page

Disable Block Sid and Freeze Lock (Available when your storage devices support TCG)

Select Enabled to allow SID authentication to be performed in TCG storage devices. The options are **Disabled** and Enabled.

The following information is displayed:

- Administrator Password
- User Password
- Password Description

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

8.5 Boot

Use this menu to configure Boot settings.

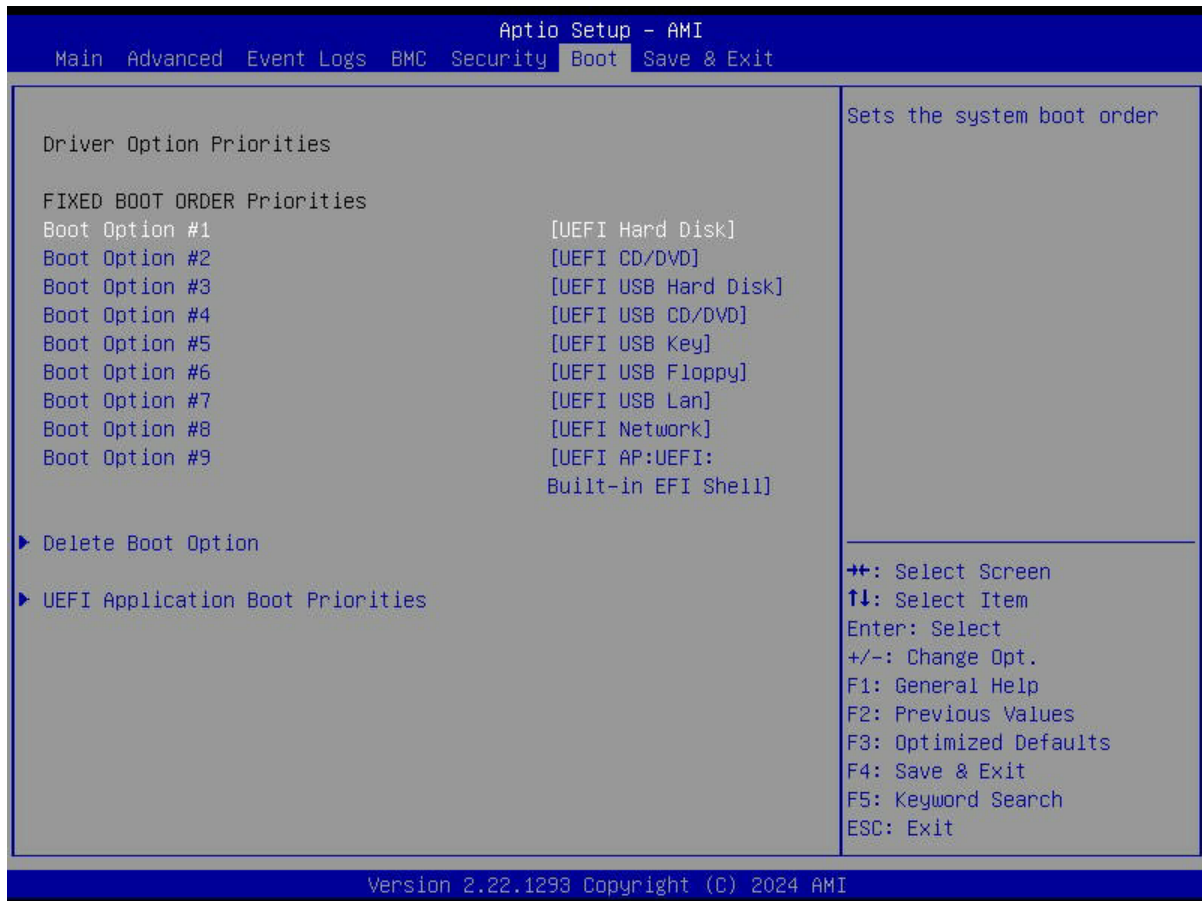


Figure 8-4. Boot Setup Page

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

▶ Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

► Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

► UEFI NETWORK Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

► UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

► UEFI USB Key Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

► UEFI Hard Disk Drive BBS Priorities

Use this feature to set the system boot order of detected devices.

8.6 Save & Exit

Select Save & Exit from the BIOS Setup screen to configure the settings below.

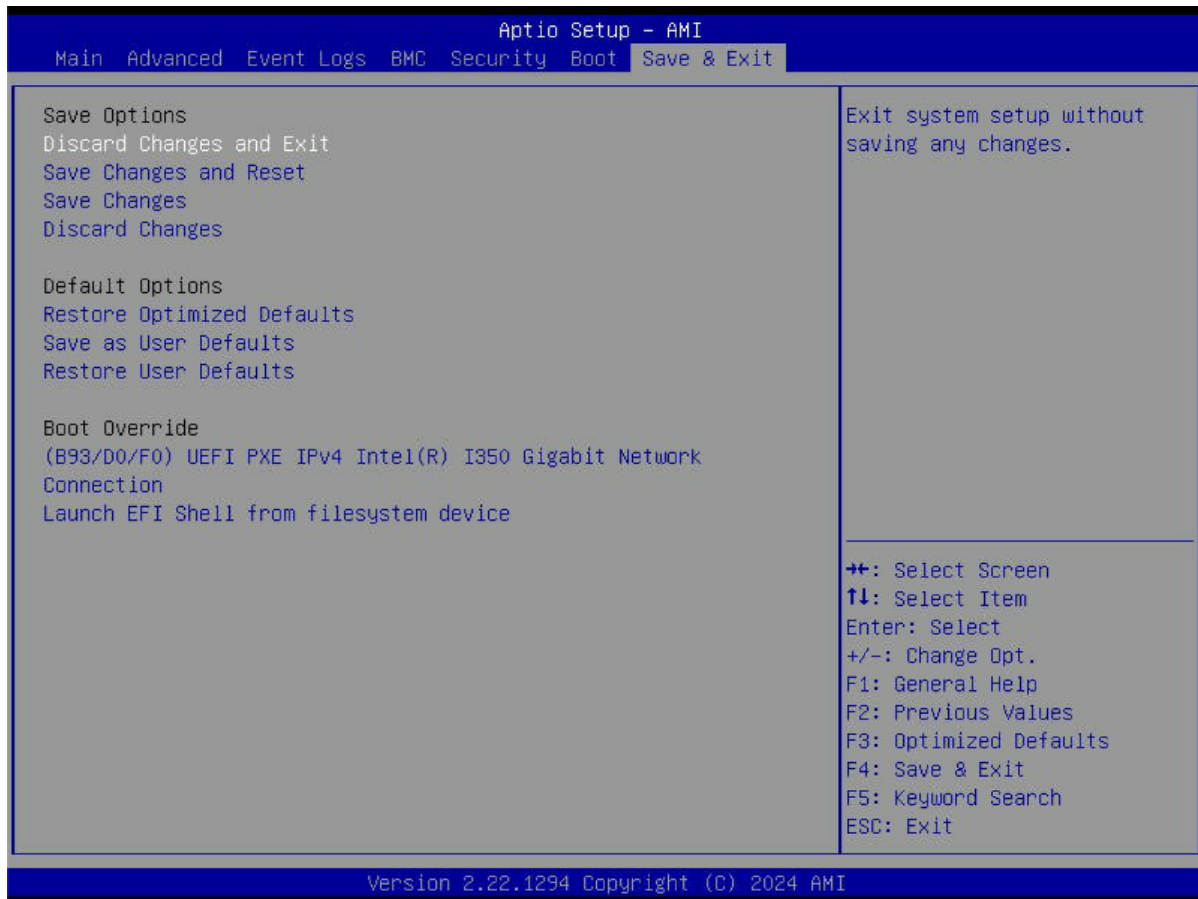


Figure 8-5. Save & Exit Setup Page

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options**Restore Optimized Defaults**

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save as User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Appendix A:

BIOS Codes

For information about BIOS codes for the SYS-222BT-H Series system, refer to the following content.

BIOS Error POST (Beep) Codes

During the Power-On Self-Test (POST) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot up process. The error messages normally appear on the screen.

Fatal errors are those which will not allow the system to continue the boot up process. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps that can be heard on an external buzzer connected to JD1. The table shown below lists some common errors and their corresponding beep codes encountered by users.

BIOS Beep (POST) Codes		
Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 short, 2 long	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at <https://www.supermicro.com/support/manuals> ("AMI BIOS POST Codes User's Guide").

For information on AMI updates, refer to <https://www.ami.com/products>.

Appendix B:

Standardized Warning Statements for AC Systems

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro SYS-222BT-H Series system.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

警告の定義

この警告サインは危険を意味します。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危险。

您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前，必须充分意识到触电的危险，并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前，請注意觸電的危險，並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

Warnung

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים. יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארזי סופרמיקרו.

اِكْفَ حالة وُكِي اَي تتسبب ف اصابة جسدة هذا الزهر غ خطر! تحذّر.

قبل اَي تعول على اَي هعدات، كي على علن بالوخاظر ال اجوة عي الذوانز الكهزبائ ة

وكي على درا ة بالووارسات النقاء ة لو غ وقع اَي حداثث

استخدم رقن الب إى الو صئص ف ها ة كل تحذّر للعشر تزجوتها

안전을 위한 주의사항

경고!

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions



Warning! Read the installation instructions before connecting the system to the power source.

設置手順書

システムを電源に接続する前に、設置手順書をお読み下さい。

警告

将此系统连接电源前,请先阅读安装说明。

警告

將系統與電源連接前, 請先閱讀安裝說明。

Warnung

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

اقرأ إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

サーキット・ブレーカー

この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。

保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告

此产品的短路(过载电流)保护由建筑物的供电系统提供,确保短路保护设备的额定电流不大于 250V,20A。

警告

此產品的短路(過載電流)保護由建築物的供電系統提供,確保短路保護設備的額定電流不大於 250V,20A。

Warnung

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss- bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à :250 V, 20 A.

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי

המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-250V, 20A

هذا المنتج يعتمد على معدات الحماية من الدوائر القصيرة التي تم تثبيتها في

المبنى

تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20A, 250V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호장치의 정격이 반드시 250V(볼트), 20A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw elektrische installatie. Controleer of het beveiligde apparaat niet groter gedimensioneerd is dan 250V, 20A.

Power Disconnection Warning

Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

電源切断の警告

システムコンポーネントの取り付けまたは取り外しのために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告

在你打开机箱并安装或移除内部器件前,必须将系统完全断电,并移除电源线。

警告

在您打開機殼安裝或移除內部元件前,必須將系統完全斷電,並移除電源線。

Warnung

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du châssis pour installer ou enlever des composants de système.

אזהרה מפני ניתוק חשמלי**אזהרה!**

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

يجب فصل انظماو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد انطاقت قيم

انصلل إني انمناطق انداذهيت نههيكم نتثبيج أو إزانت مكنناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 새시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Equipment Installation

Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

機器の設置

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בצידוד זה

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته

경고!

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Waarschuwing

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Restricted Area



Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

アクセス制限区域

このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告

此部件应安装在限制进出的场所，限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告

此裝置僅限安裝於進出管制區域，進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזור עם גישה מוגבלת

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת כלי אבטחה בלבד (מפתח, מנעול וכד.).

اتخصيص هذه المنطقة نترك بها ف مناطق محظورة تم .

ممكن ان تصل إن منطقة محظورة فقط من خلال استخدام أداة خاصة،

أو أوس هت أخري نلألأما ققم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Battery Handling

CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

電池の取り扱い

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

ADVERTENCIA

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף את הסוללה בסוג התואם מחברת יצרן מומלצת. סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح.

اسحبذال البطارية

فقط بنفس النوع أو ما يعادلها مما أوصت به الشركة المصنعة

جخلص من البطاريات المسحمة وفقاً لتعليمات الشركة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

冗長電源装置

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告

此部件连接的电源可能不止一个，必须将所有电源断开才能停止给该部件供电。

警告

此裝置連接的電源可能不只一個，必須切斷所有電源才能停止對該裝置的供電。

Warnung

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein Strom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אם קיים יותר מספק אחד

אזהרה!

ליחידה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן

את היחידה.

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .

يجب إزالة كافة الاتصالات لعزل الوحدة عن الكهرباء

경고!

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단 하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Backplane Voltage

Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

バックプレーンの電圧

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。

修理 する際には注意 ください。

警告

当系统正在进行时, 背板上有很危险的电压或能量, 进行维修时务必小心。

警告

當系統正在進行時，背板上有危險的電壓或能量，進行維修時務必小心。

Warnung

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

מתח בפנל האחורי

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך

העבודה.

هناك خطر من التيار الكهربائي أو الطاقة المخزنة على اللوحة

عندما يكون النظام يعمل كن حذرا عند خدمة هذا الجهاز

경고!

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

地方および国の電気規格に準拠

機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告

设备安装必须符合本地与本国电气法规。

警告

設備安裝必須符合本地與本國電氣法規。

Warnung

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention

L'équipement doit être installé conformément aux normes électriques nationales et locales.

תיאום חוקי החשמל הארצי

אזהרה!

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تركيب المعدات الكهربائية يجب أن يمتثل للقوانين المحلية والنطية المتعلقة

بالكهرباء

경고!

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing

Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Product Disposal



Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

製品の廃棄

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告

本产品的废弃处理应根据所有国家的法律和规章进行。

警告

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين واللوائح الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing

**ファンの警告**

警告！回転部品に注意。運転中は回転部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回転している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

警告! 危险的可移动性零件。请务必与转动的风扇叶片保持距离。当您从机架移除风扇装置, 风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇

警告

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置, 風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mantenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Attention

Pieces mobiles dangereuses. Se tenir a l'écart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולה כאשר מסירים את חלקי המאוורר מהמארז, יתכן והמאווררים עדיין עובדים. יש להרחיק למרחק בטוח את האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير! أجزاء متحركة خطيرة. ابتعد عن شفرات المروحة المتحركة. من الممكن أن المراوح لا تزال تدور عند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة.

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 새시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조립품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Power Cable and AC Adapter



Warning! When installing the product, use the provided or designated connection cables, power cables and AC adapters. Using any other cables and adapters could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

電源コードとACアダプター

製品を設置する場合、提供または指定および購入された接続ケーブル、電源コードとACアダプターを該当する地域の条例や安全基準に適合するコードサイズやプラグと共に使用下さい。他のケーブルやアダプタを使用すると故障や火災の原因になることがあります。

電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記)をSupermicroが指定する製品以外に使用することを禁止しています。

警告

安裝此產品時,請使用本身提供的或指定的或採購的連接線,電源線和電源適配器,包含遵照當地法規和安全要求的合規的電源線尺寸和插頭.使用其它線材或適配器可能會引起故障或火災。除了 **Supermicro** 所指定的產品,電氣用品和材料安全法律規定禁止使用未經 **UL** 或 **CSA** 認證的線材。(線材上會顯示 **UL/CSA** 符號)。

警告

安裝此產品時,請使用本身提供的或指定的或採購的連接線,電源線和電源適配器,包含遵照當地法規和安全要求的合規的電源線尺寸和插頭.使用其它線材或適配器可能會引起故障或火災。除了 **Supermicro** 所指定的產品,電氣用品和材料安全法律規定禁止使用未經 **UL** 或 **CSA** 認證的線材。(線材上會顯示 **UL/CSA** 符號)。

Warnung

Nutzen Sie beim Installieren des Produkts ausschließlich die von uns zur Verfügung gestellten Verbindungskabeln, Stromkabeln und/oder Adapter, die Ihre örtlichen Sicherheitsstandards einhalten. Der Gebrauch von anderen Kabeln und Adapter können Fehlfunktionen oder Feuer verursachen. Die Richtlinien untersagen das Nutzen von UL oder CAS zertifizierten Kabeln (mit UL/CSA gekennzeichnet), an Geräten oder Produkten die nicht mit Supermicro gekennzeichnet sind.

¡Advertencia!

Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe El uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Attention

Lors de l'installation du produit, utilisez les câbles de connexion fournis ou désigné ou achetez des câbles, câbles de puissance et adaptateurs respectant les normes locales et les conditions de sécurité y compris les tailles de câbles et les prises électriques appropriées. L'utilisation d'autres câbles et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et la Loi sur la Sécurité Matériel interdit l'utilisation de câbles certifiés- UL ou CSA (qui ont UL ou CSA indiqué sur le code) pour tous les autres appareils électriques sauf les produits désignés par Supermicro seulement.

AC ימאתמו מילמשח מילבכ

הרהזא!

ךרוצל ומאתוה וא ושכרנ רשא AC מימאתמו מיקפס, מילבכב שמתשהל שי, רצומה תא מיניקתמ רשאכ לכב שומיש. עקתהו לבכה לש הנוכח הדימ ללכ, תוימוקמה תוחיטבה תושירדל ומאתוה רשאו, הנקתהה למשחה ירישכמב שומישה יקוחל סאתהב. ילמשח רצק וא הלוקתל סורגל לולע, רחא גוסמ סאתמ וא לבכ לש דוק מהילע עיפומ רשאכ) CSA- ב וא UL - ב מיכסומה מילבכב שמתשהל רוסיא מייק, תוחיטבה יקוחו דבלב Supermicro י"ע סאתוה רשא רצומב קר אלא, רחא ילמשח רצומ לכ רובע (UL/CSA).

תאלבאקלא ארשב מץ וא דדחמלא וא תרפותמלא תאליסותלא מאדחטסאב מץ, גתנמלא ביקרט דנע

כלז יפ אמב תילחמלא תמאלסלא תאבלטתמו נינאוקב מאז תלאלא עמ דדרתמלא ראיטלא תאלוחמו תינאבר הכלא

קירח וא לטע יפ בבסטי דק ברחא תאלוחמו תאלבאק יא מאדחטסא. מילסלא סבאקלאו לסומלא מנג.

CSA וא UL לביק נמ דדחמלא תאלבאקלא מאדחטסא תאדעמלאו תינאבר הכלא תז הגאלל תמאלסלא נונאק רזחי

Supermicro לביק נמ דדחמלאו תינעמלא תאגתנמלא רינג ברחא תאדעמ יא עמ (UL/CSA) תמאלע למחט יתלאו.

전원 케이블 및 AC 어댑터

경고! 제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오.

다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro 가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Stroomkabel en AC-Adapter

Waarschuwing! Bij het aansluiten van het Product uitsluitend gebruik maken van de geleverde Kabels of een andere geschikte aan te schaffen Aansluitmethode, deze moet altijd voldoen aan de lokale voorschriften en veiligheidsnormen, inclusief de juiste kabeldikte en stekker. Het gebruik van niet geschikte Kabels en/of Adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbiedt het gebruik van UL of CSA -gecertificeerde Kabels (met UL/CSA in de code) voor elke andere toepassing dan de door Supermicro hiervoor beoogde Producten.

Appendix C:

System Specifications

Processors

Supports dual Intel® Xeon® 6700/6500-series processors with P-cores or 6700-series processors with E-cores

Chipset

N/A

BIOS

AMI SPI BIOS

NAND Flash 64 / 256 Mb support

SPI dual / quad speed control, RTC (Real Time Clock) wakeup, riser card auto detection support, IPMIView, SMCIPMITOOL, IPMI CFG, Redundant power supply unit detection, SPM, SUM-OOB / InBand

Memory

Supports ECC DDR5 memory with speeds up to 6400 MT/s (1DPC), and MCR DIMM DDR5 memory with speeds up to 8000 MT/s (1DPC or 1 slot per channel) in 16 DIMMs. (Memory speed/capacity support depends on the processors used in the system.)

Storage Drives

Front hot-swappable drives include:

24 NVMe drives for SYS-222BT-HNR (all drives are PCIe 5.0)

24 NVMe/SAS drives for SYS-222BT-HNC8R (the first two drives are PCIe 5.0 in each node)

24 NVMe/SAS drives for SYS-222BT-HNC9R (the first two drives are PCIe 5.0 in each node)

Internal M.2 drives per node includes one of the following:

Carrier with two M.2 NVMe Gen 5 SSDs in the 22110 form factor

Carrier with two M.2 NVMe Gen 5 SSDs and two M.2 NVMe Gen 3 SSDs with HW RAID support in the 22110 form factor

Carrier with two M.2 NVMe Gen 3 SSDs with HW RAID support in the 22110 form factor

Internal Connector:

VROC key header

PCI Expansion Slots

Two PCIe 5.0 x16 slots

Input/Output

One AIOM or any OCP 3.0 SFF Network Interface Card per node

One Dedicated LAN Port for BMC per node

Two USB 3.0 Gen 2 Type-A Ports per node

One VGA Port

One Internal COM Port

One Internal TPM Header

Motherboard

X14DBT-B

Chassis

CSE-217BQ2-R3K60P

System Cooling

Four 8-cm counter-rotating mid-chassis fans

Power Supply

Model: PWS-3K60A-1R, 3000 W redundant mode, 80Plus Titanium level

Power supply redundancy is supported only with 240 VAC or 240 VDC input.

Input voltages, input currents

1400 W: 100-127 Vac, 16-13 A

2880 W: 200-207 Vac, 16-15.5 A

3000 W: 208-240 Vac, 16-14 A

3000 W: 240 Vdc, 14 A (CQC only)

Rated Frequency

50-60 Hz

Output DC Voltage: Input current

+12 V: 116 A (1400 W)

+12 V: 240 A (2880 W)

+12 V: 250 A (3000 W)

Output DC Voltage: Input current

+12 V standby: 4.5 A (1400 W)

+12 V standby: 4.5 A (2880 W)

+12 V standby: 4.5 A (3000 W)

Operating Environment

Operating Temperature: 10 to 35 C (50 to 95 F)

Non-operating Temperature: -30 to 60 C (-22 to 140 F)

Operating Relative Humidity: 8% to 80% (non-condensing)

Non-operating Relative Humidity: 8% to 90% (non-condensing)

Regulatory Compliance

FCC, ICES, CE, UKCA, VCCI, RCM, NRTL, CB

Certified Safety Models

217B-R36X14, 217B-36

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)

Electromagnetic Compatibility Regulations 2016

FCC Part 15 Subpart B

ICES-003

VCCI-CISPR 32

AS/NZS CISPR 32

BS/EN55032

BS/EN55035

BS/EN 61000-3-2

BS/EN 61000-3-3

BS/EN 61000-4-2

BS/EN 61000-4-3

BS/EN 61000-4-4

BS/EN 61000-4-5

BS/EN 61000-4-6

BS/EN 61000-4-8

BS/EN 61000-4-11

Environment:

Delegated Directive (EU) 2015/863

Directive 2011/65/EU (RoHS)

REACH Regulation EC 1907/2006

WEEE Directive 2012/19/EU

California Proposition 65

Product Safety: 2014/35/EU (LVD Directive)

Electrical Equipment (Safety) Regulations 2016

UL/CSA 62368-1 (USA and Canada)

BS/IEC/EN 62368-1

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. Perchlorate Material-special handling may apply. See

<https://www.dtsc.ca.gov/hazardouswaste/perchlorate>

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI — A